




FITTINGS®

Model 3500 - Barrier free

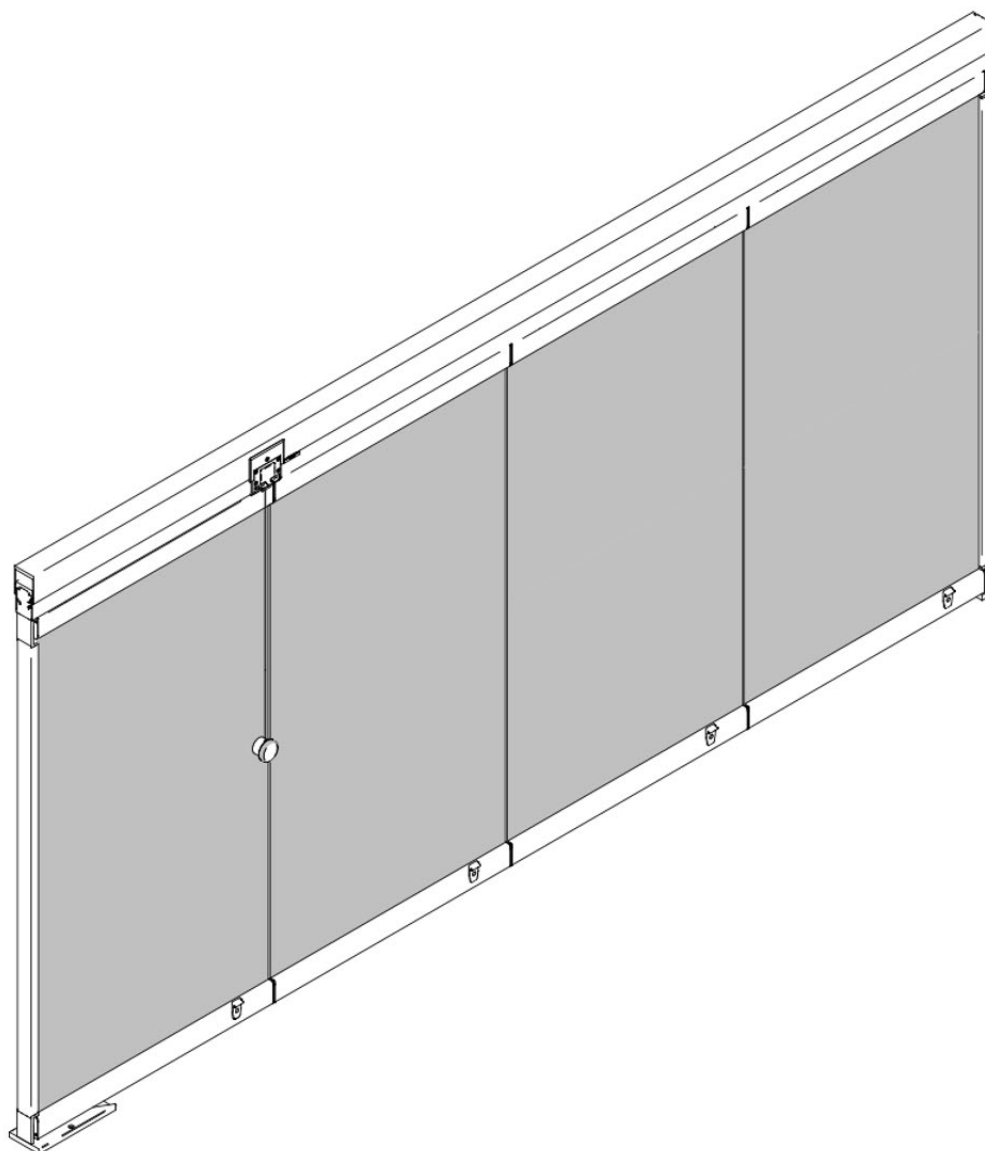

ASSEMBLY INSTRUCTIONS



MAX
50 KG



MAX 800



MAX 3000



8
8+8





8 mm
10 mm




8,76 mm
10,76 mm



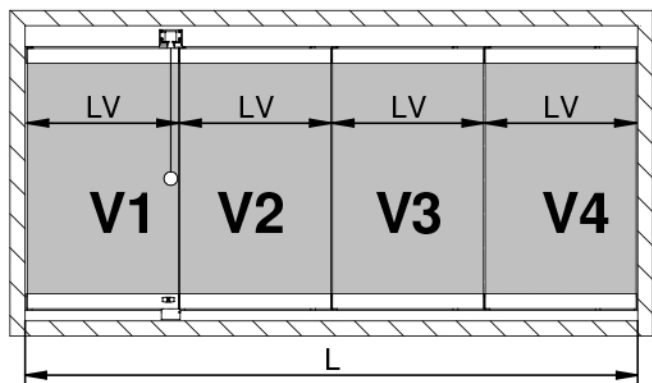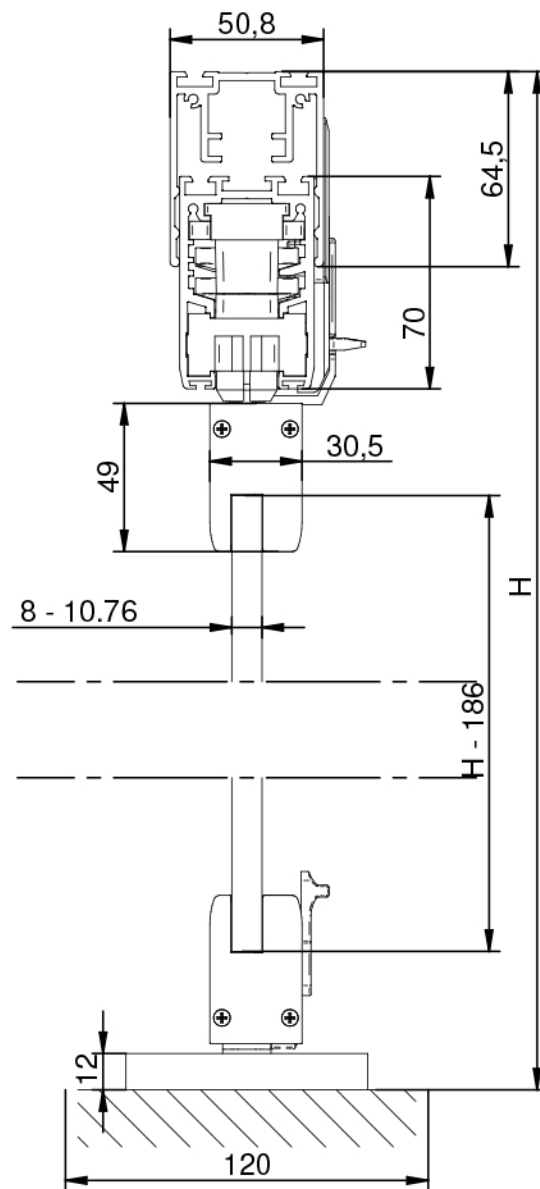


$$LV = \frac{L - 20 - (N \times 5)}{N}$$

Optional:

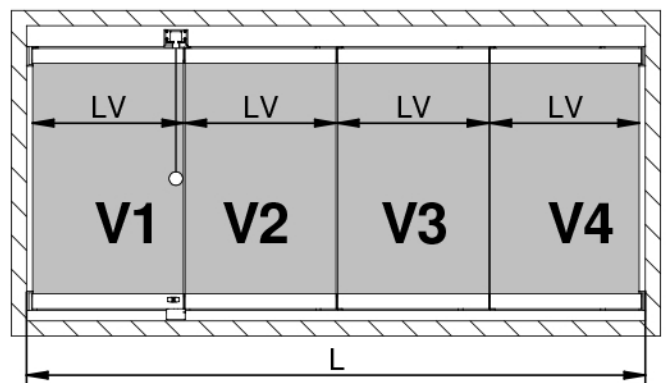


$$LV = \frac{L - 28 (N \times 5)}{N}$$

Swing door

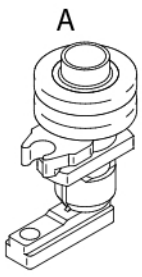


A

x1

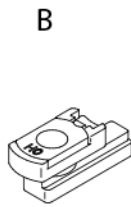


B

x1

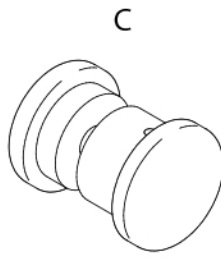

C

x1

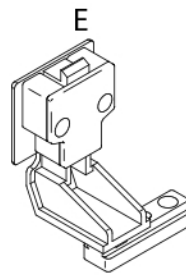


E

x1




X

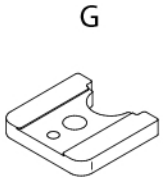


G

x1

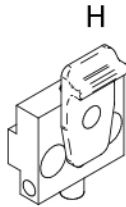


H

x1



I

x4

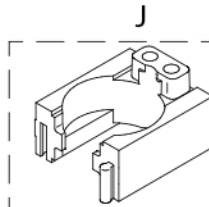


J

x1




K

x1



Sliding door

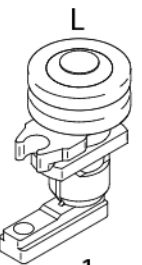


L

x1




B

x1

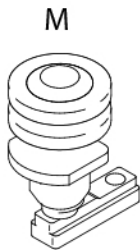


M

x1




N

x1

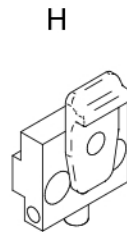


H

x1




I

x4

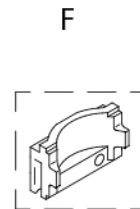


F

x2




Profiles and parts

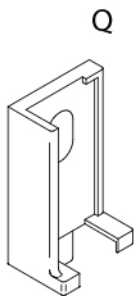


Q

x1

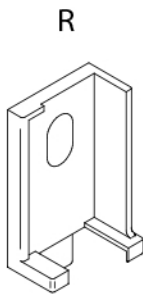


R

x1

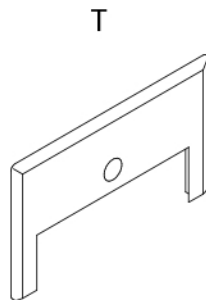


T

x1





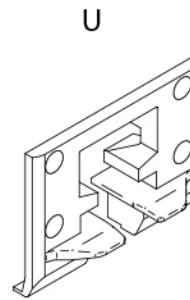


U

x1

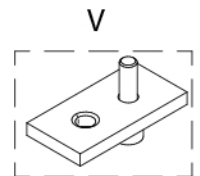


V

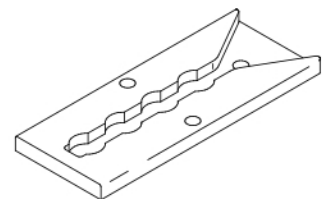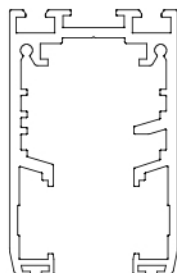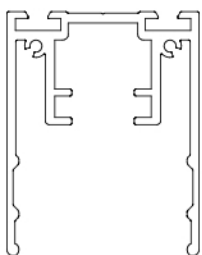


1 Glass clamp mounting

Place the glass clamp aligned with the glass.
Insert the rod and mount the screw with 13 Nm.





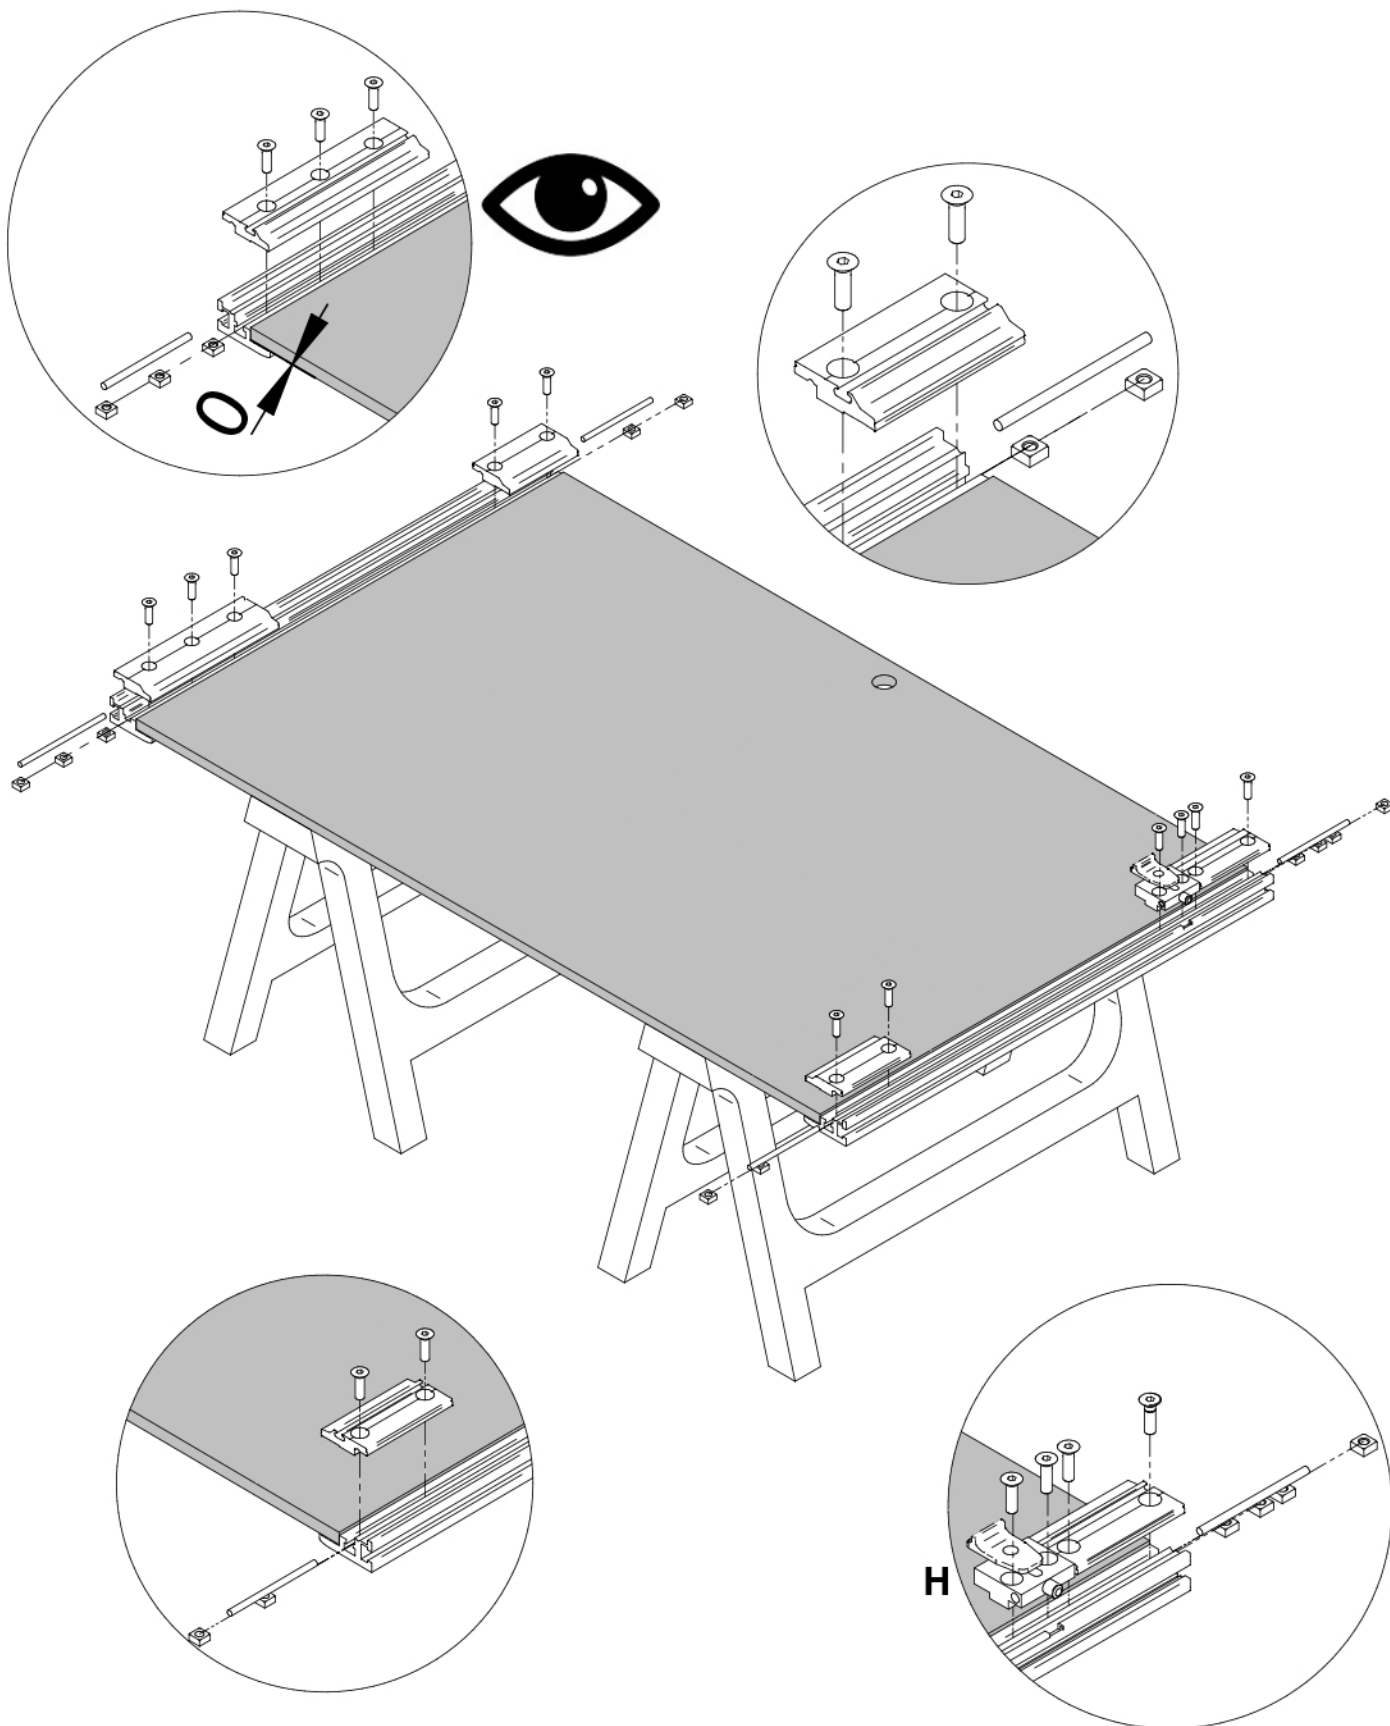


2 Swing door assembly


Mount the cover caps

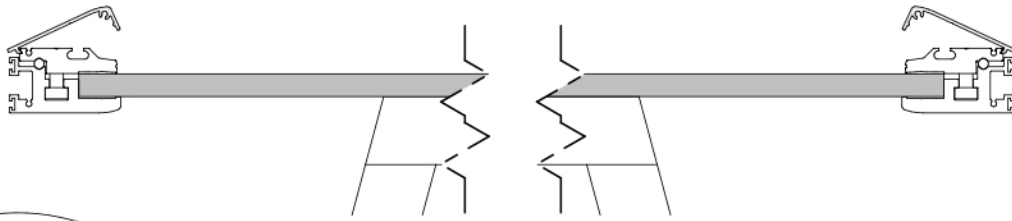

Insert the upper carriages and lock pin

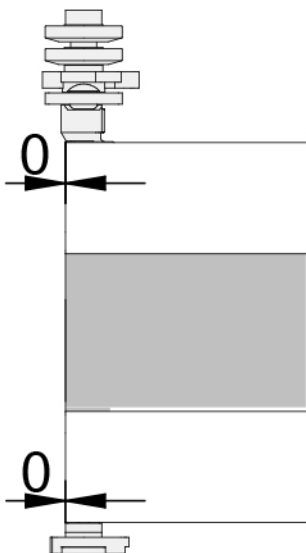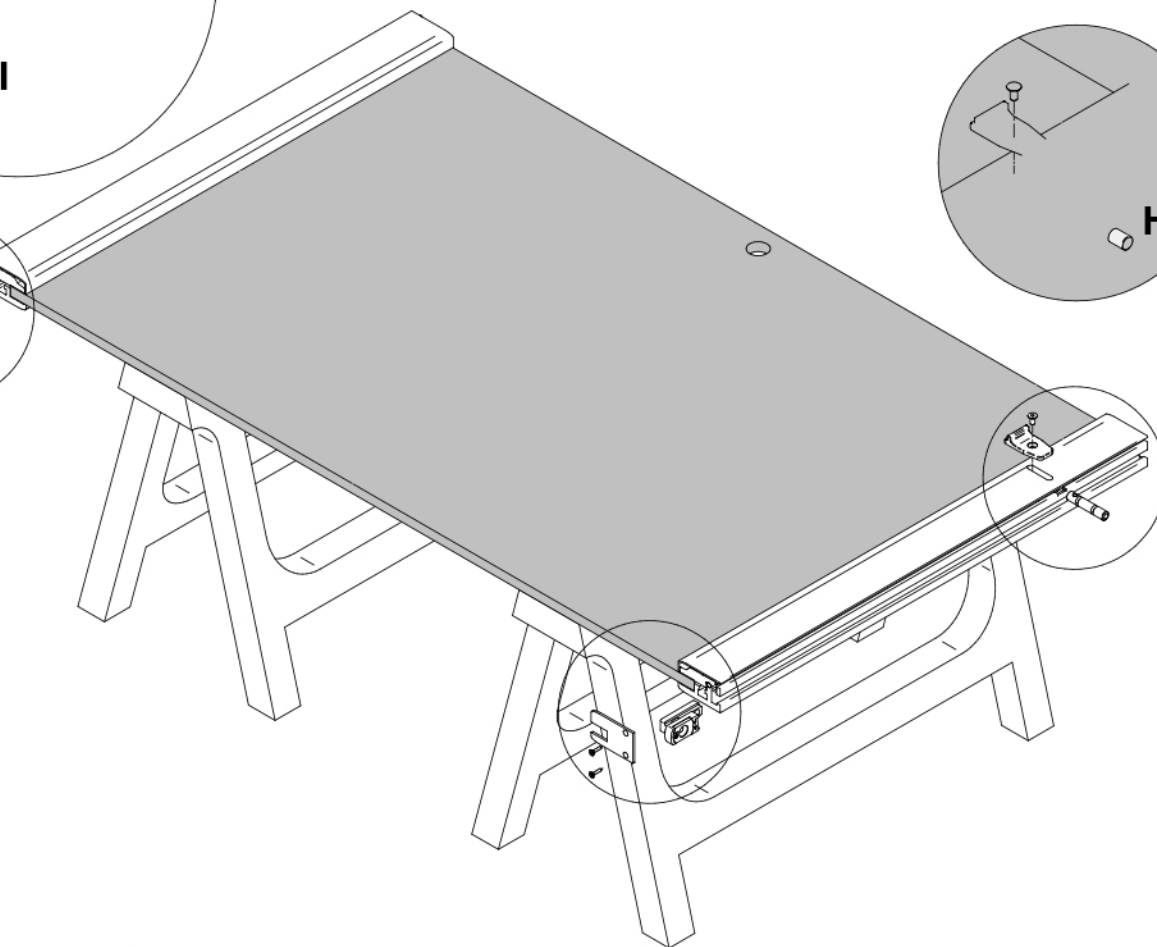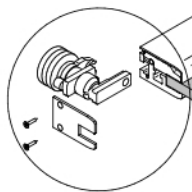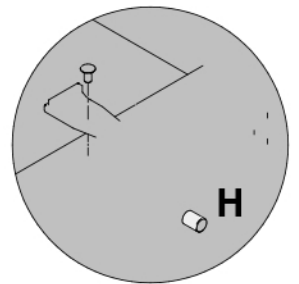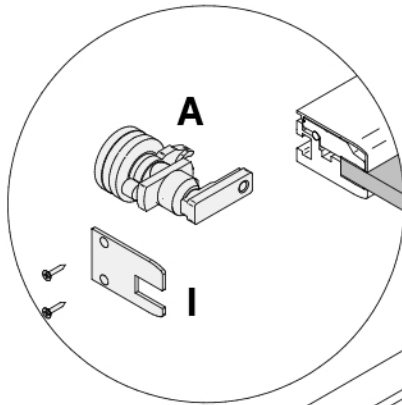


Position
glass clamp
and cover cap






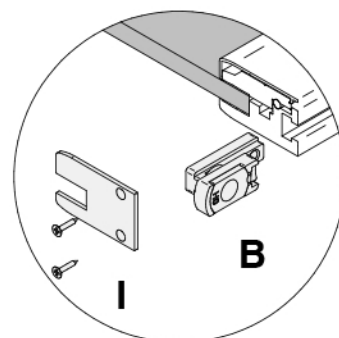


3 Sliding door assembly


Mount the cover caps

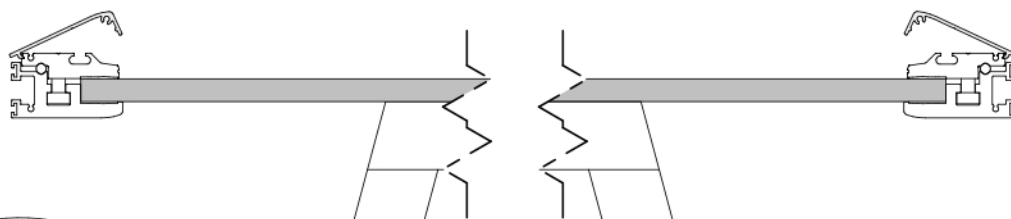


Insert the upper carriages and lock pin

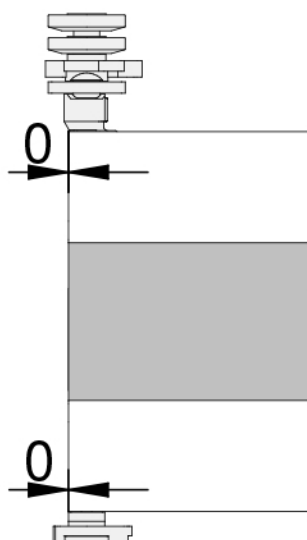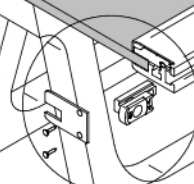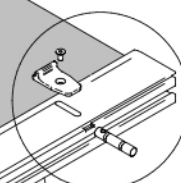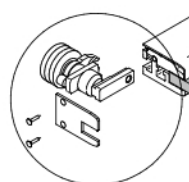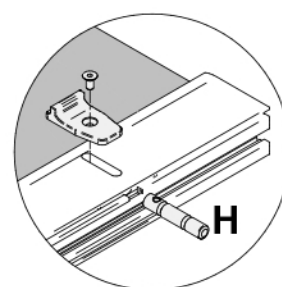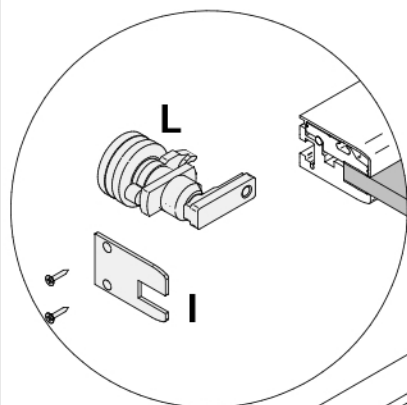


Position
glass clamp
and cover cap

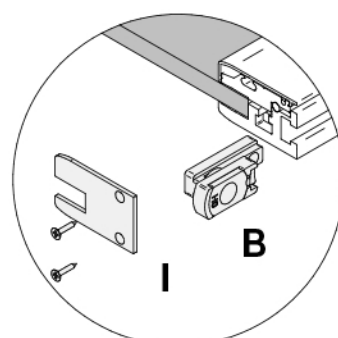


4 Compensator fixing

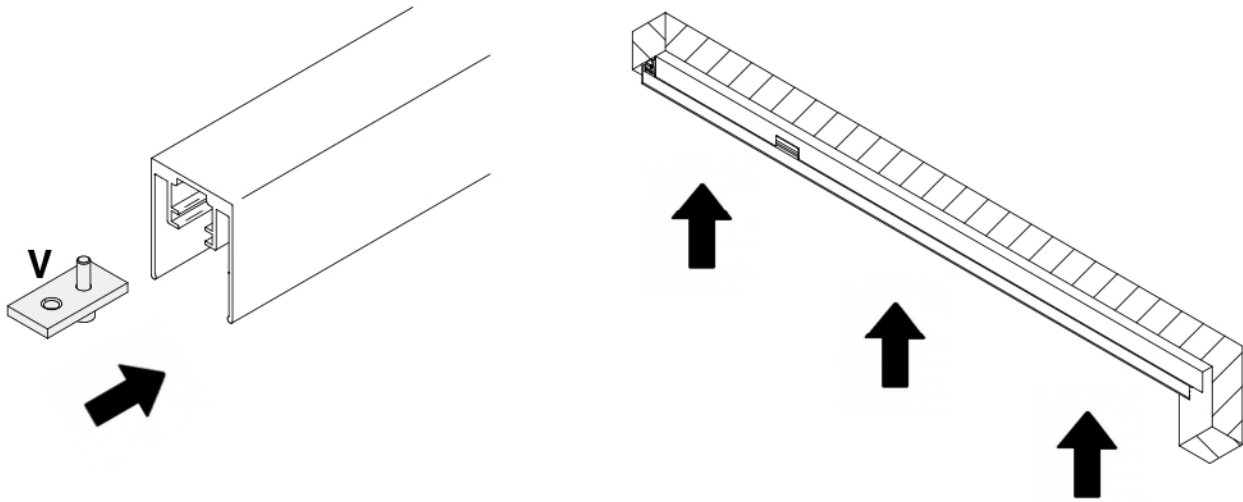


5 Inserting of upper track components

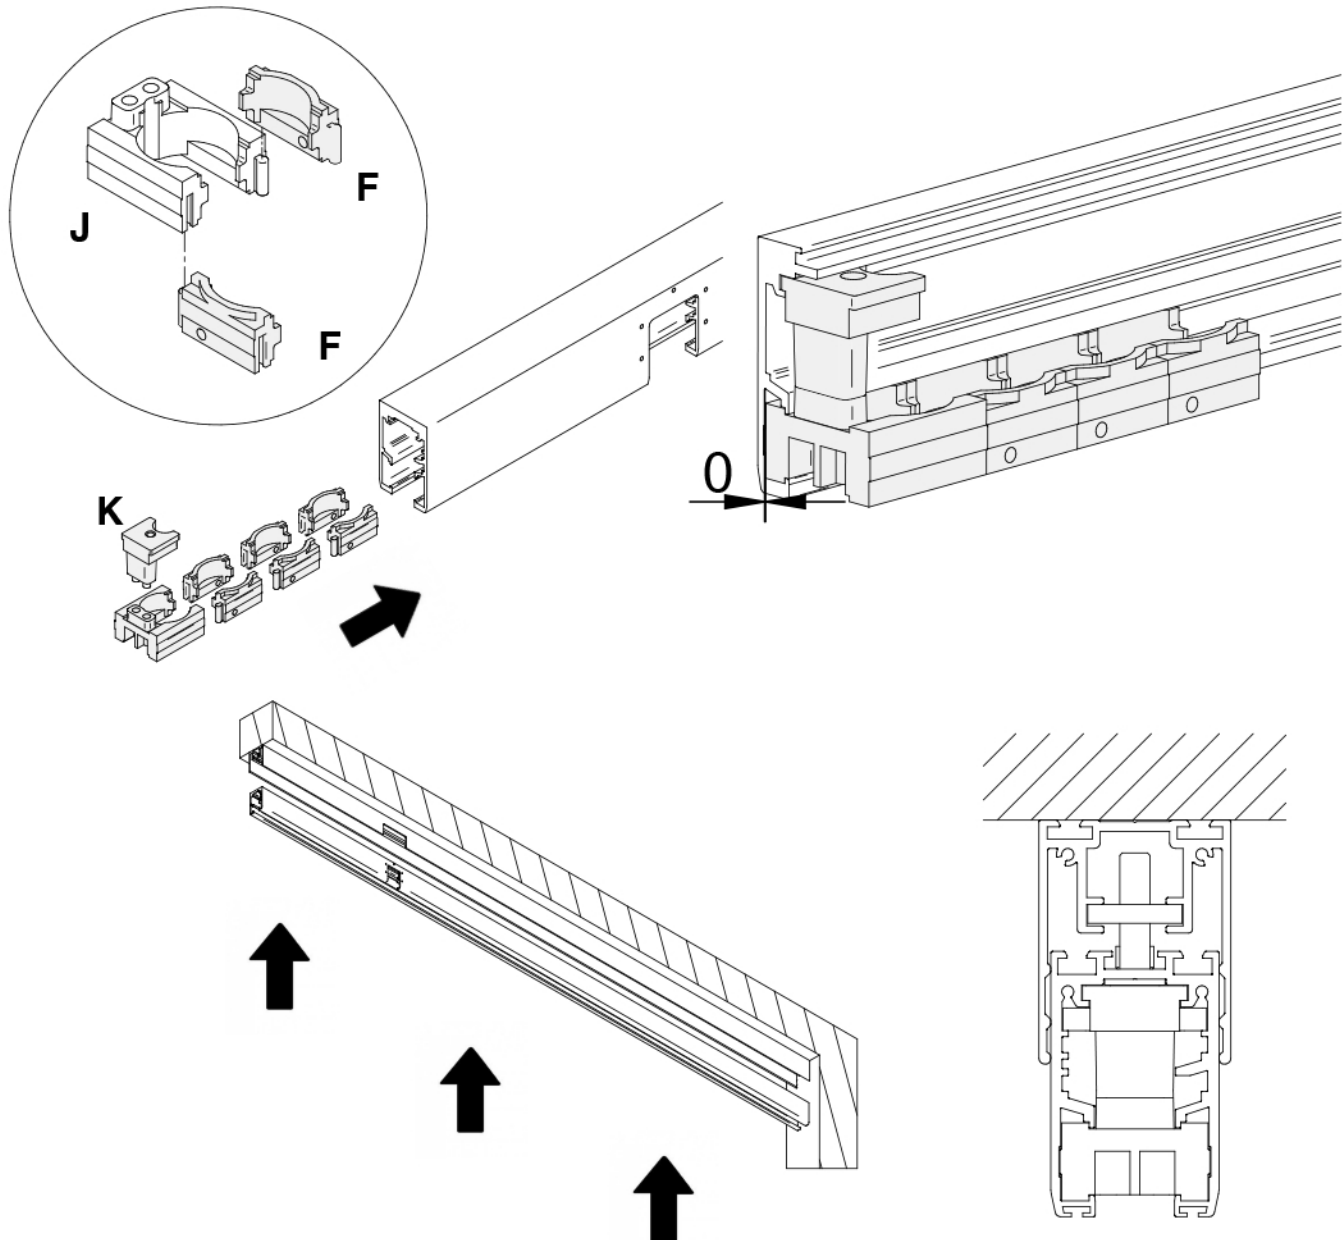





6 Lower track installation

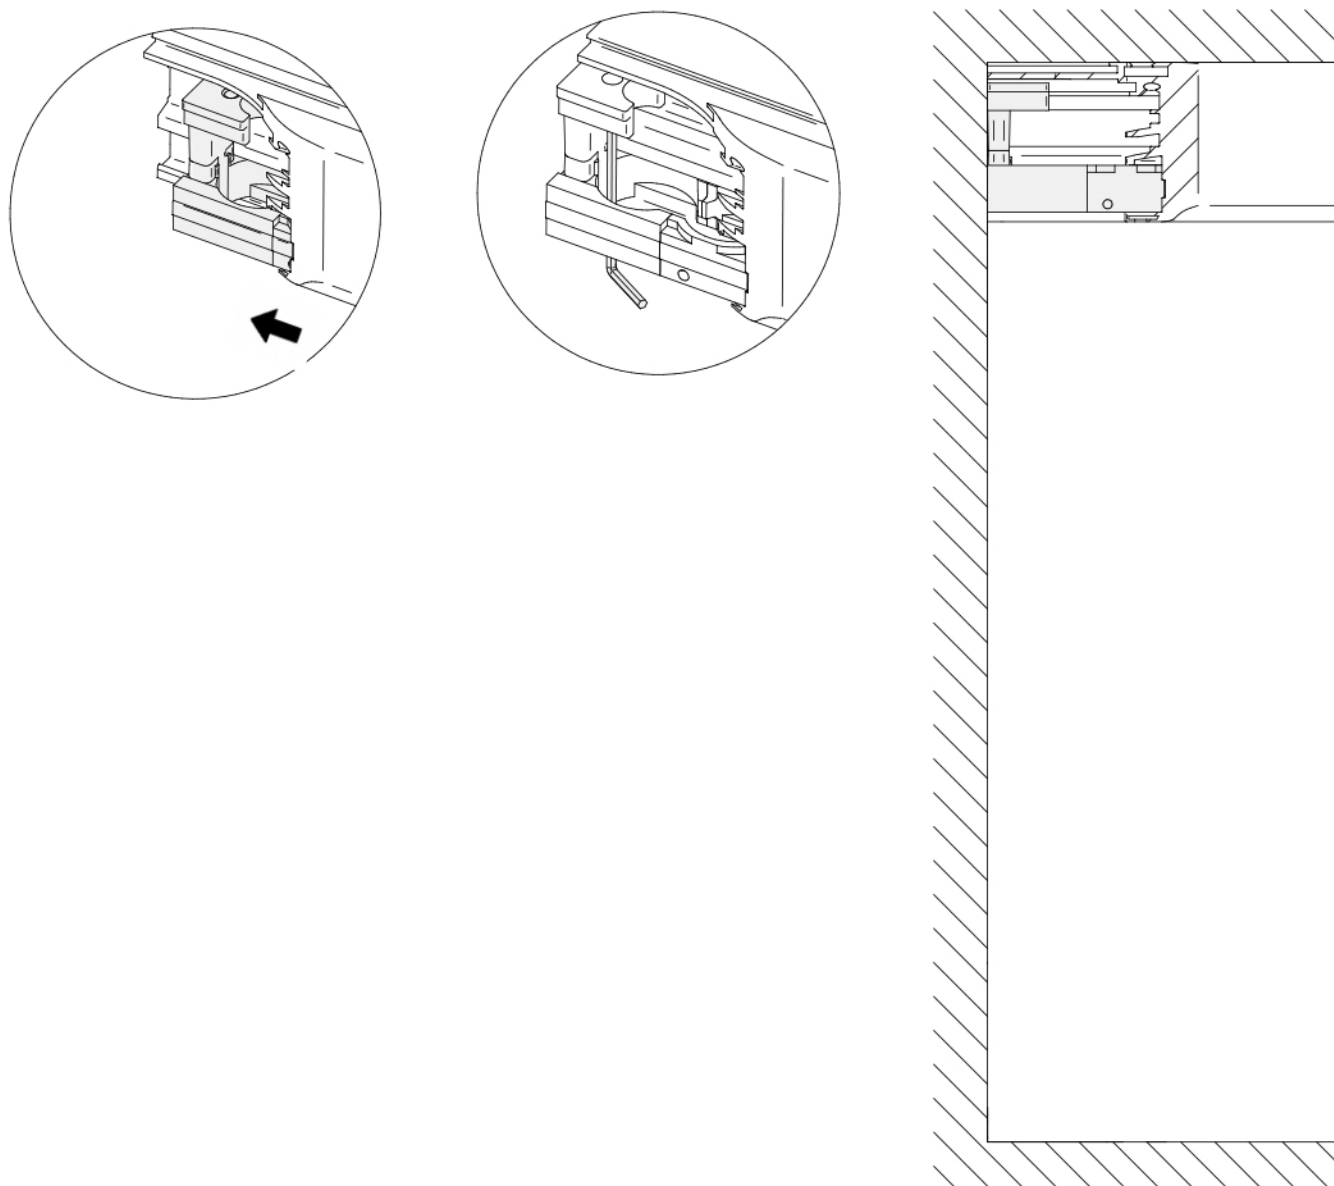



7 Track adjustment

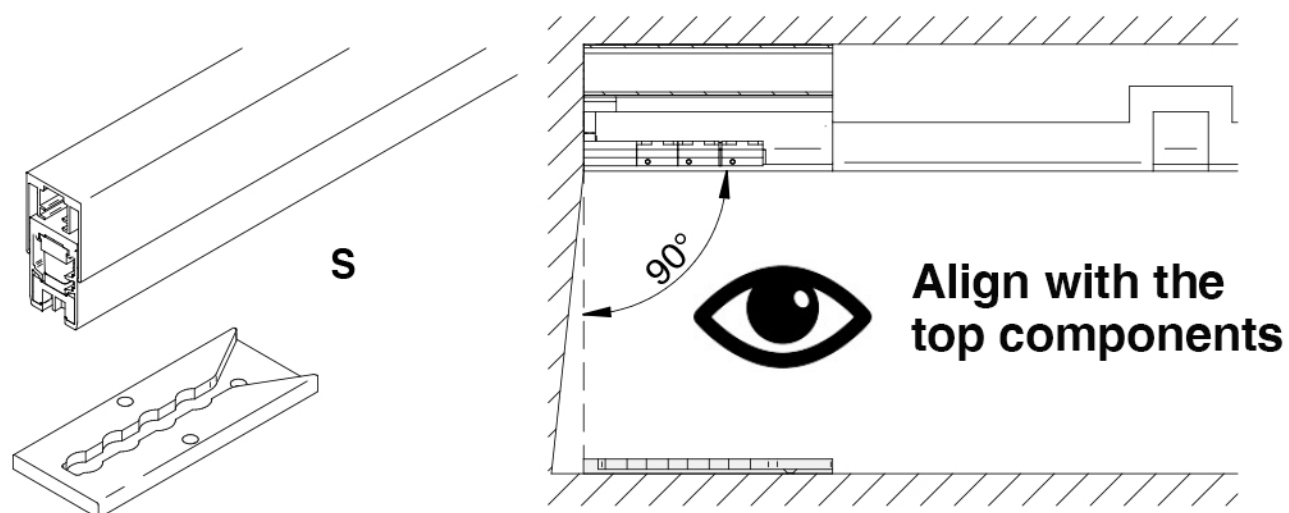



9 Fixing components in the track

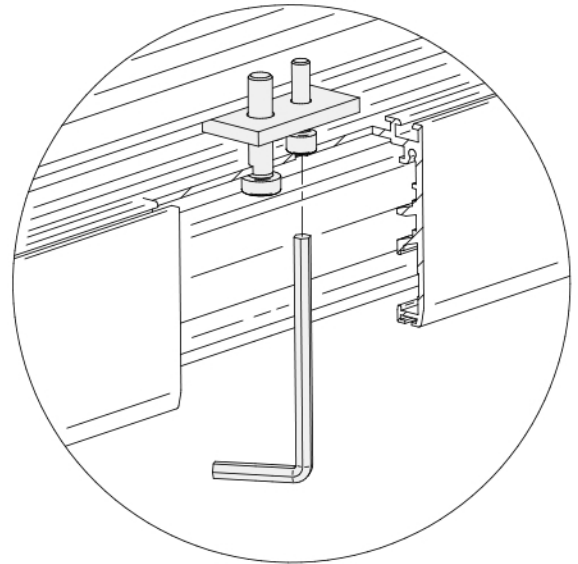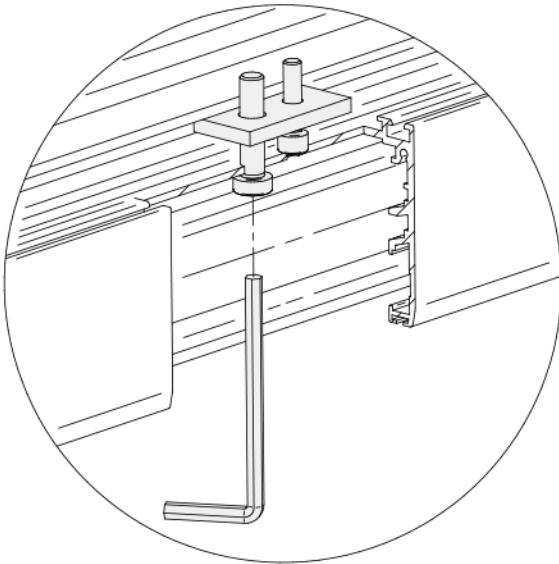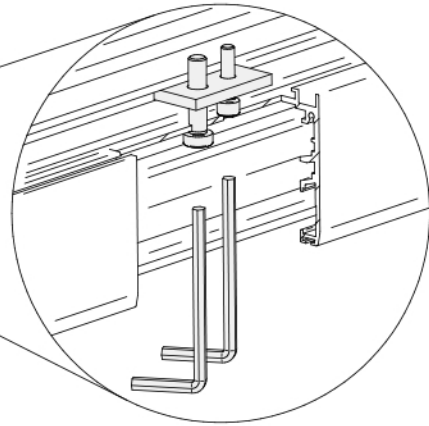
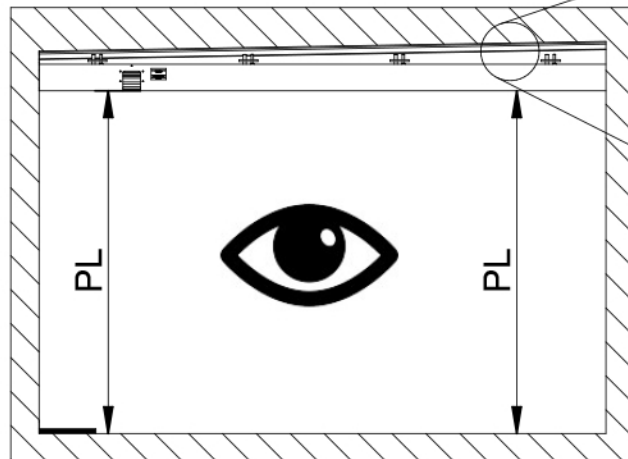


Optional: 8 Mounting vertical profiles


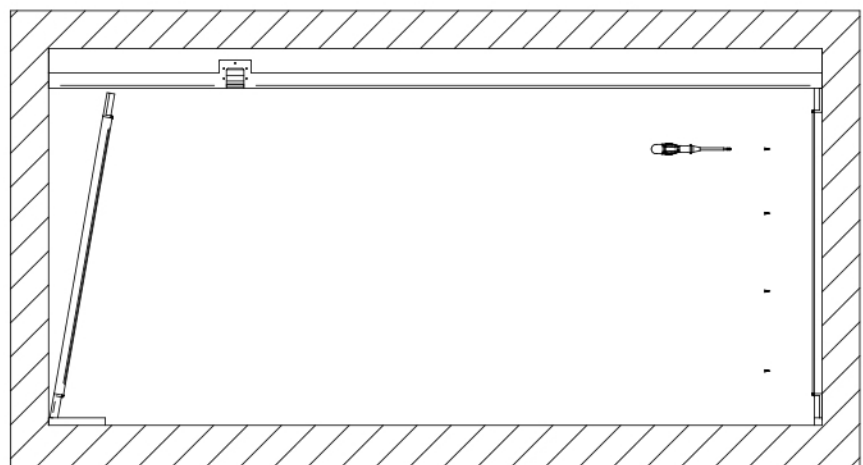
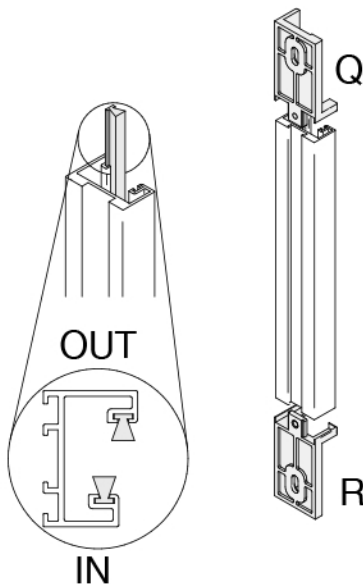


10 Mounting doors

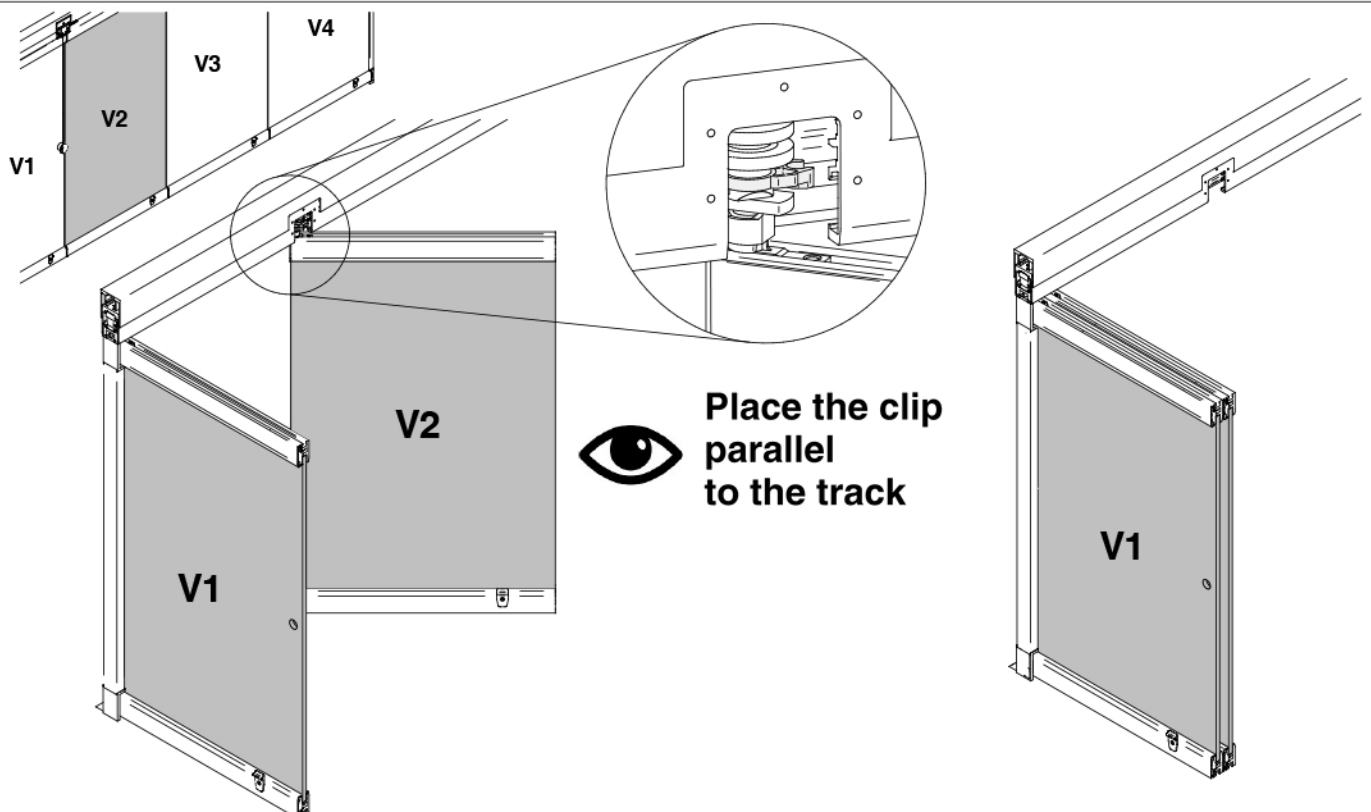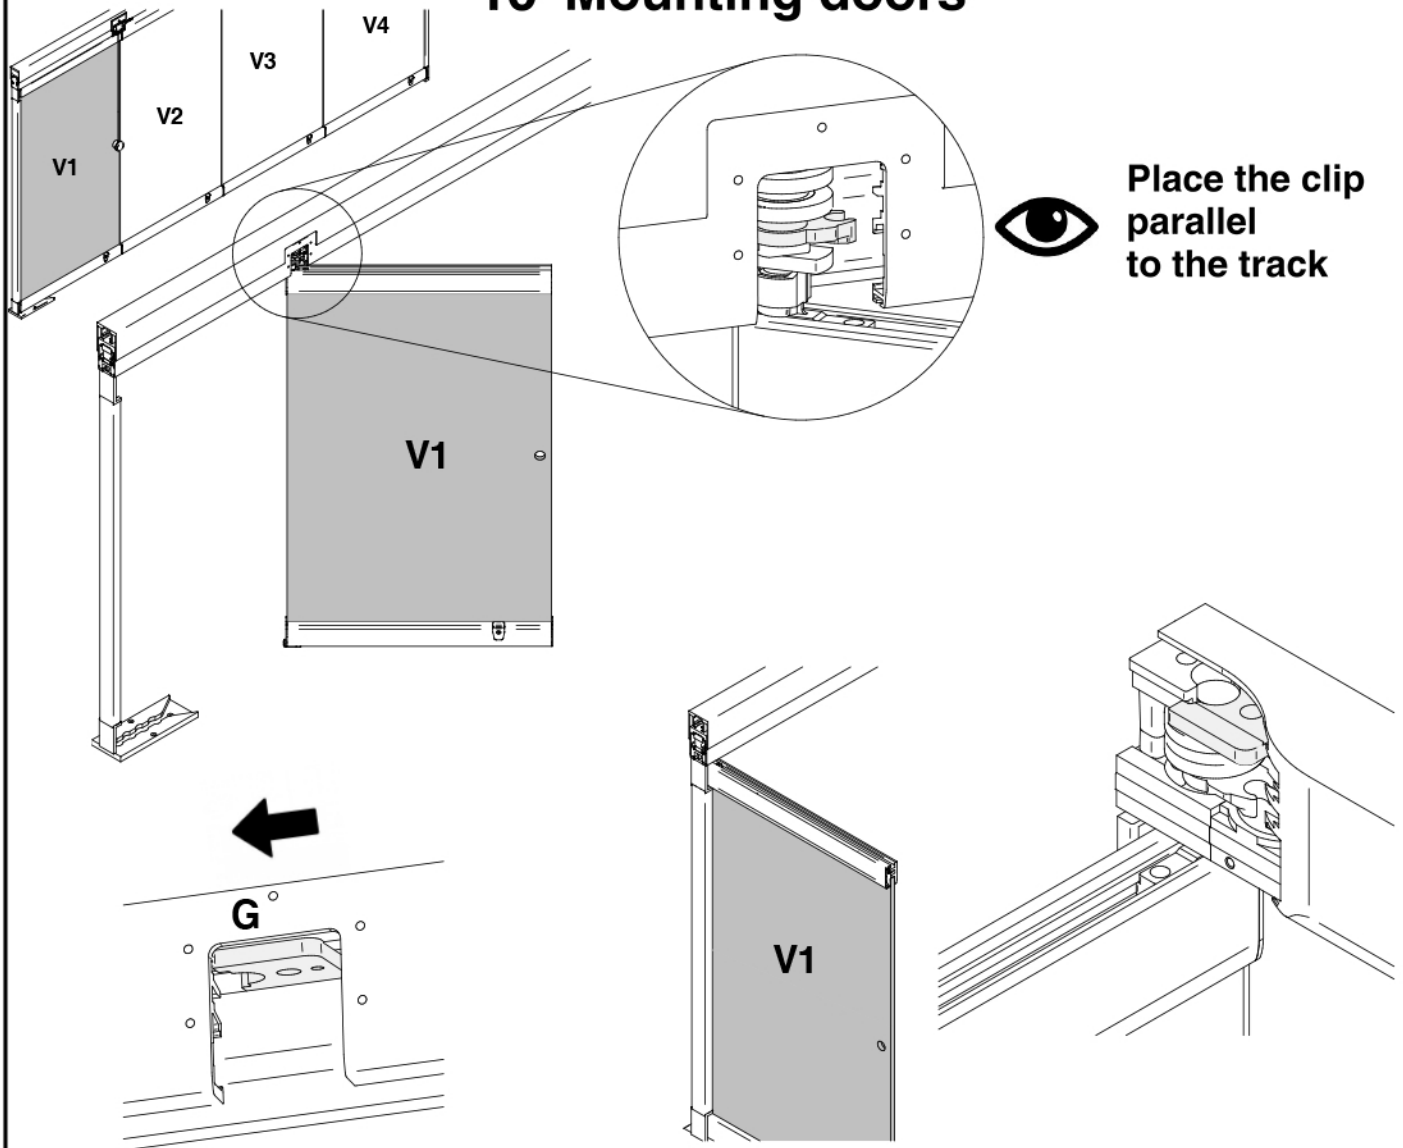



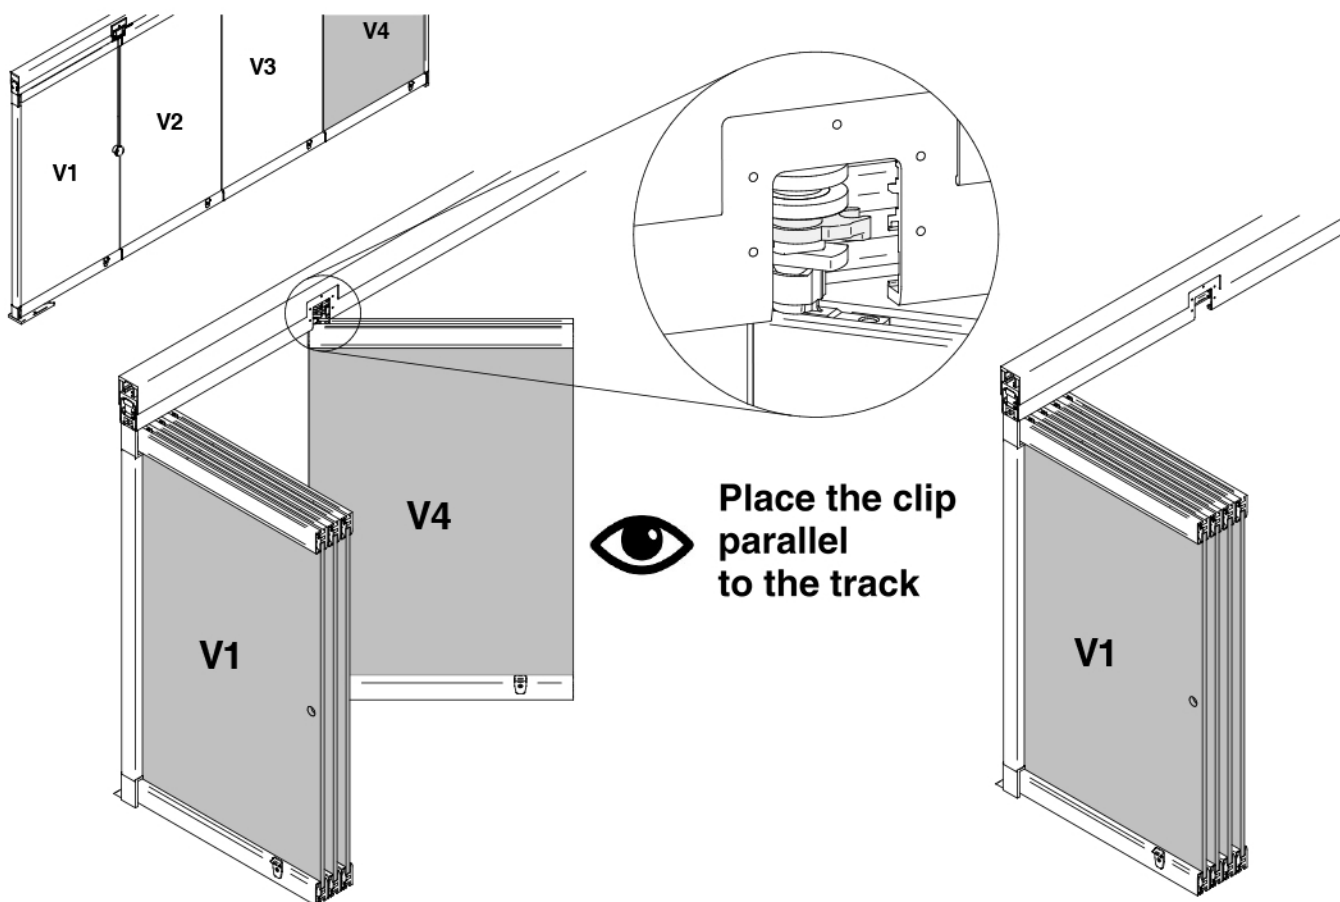
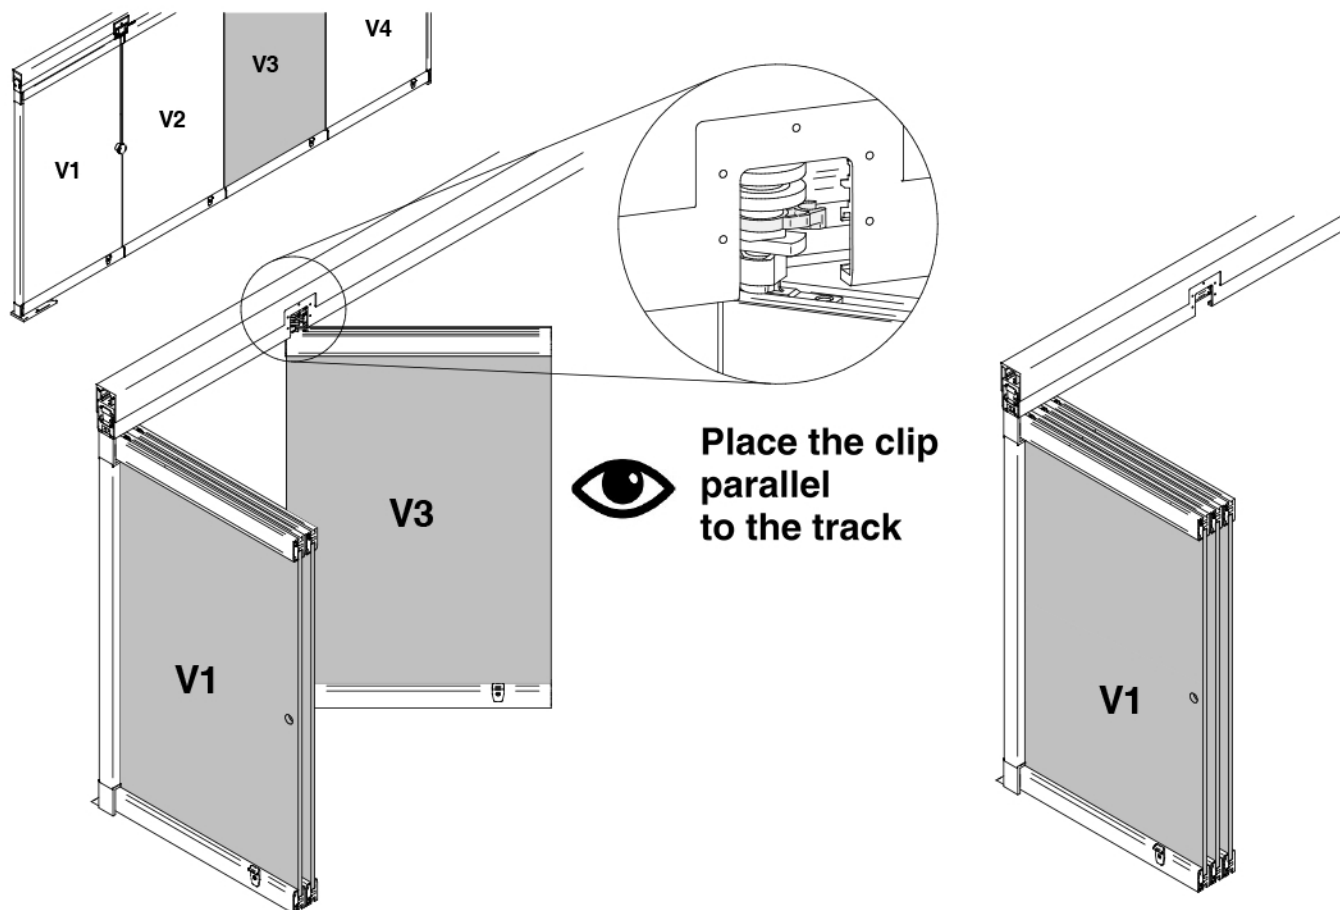








11 Closing procedure

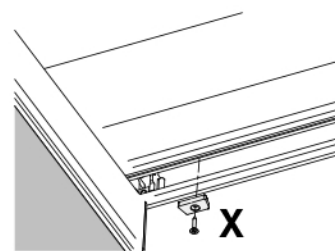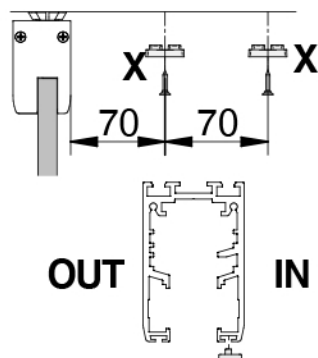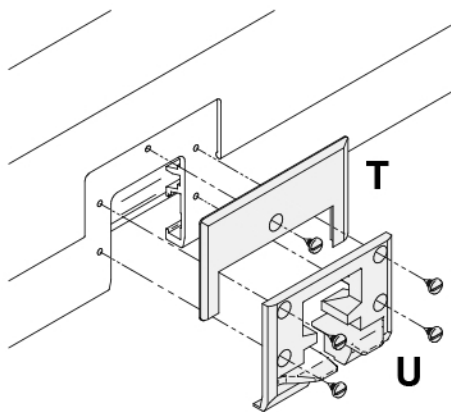


Mount component X
2 pieces every door

12 Mounting the support trolleys

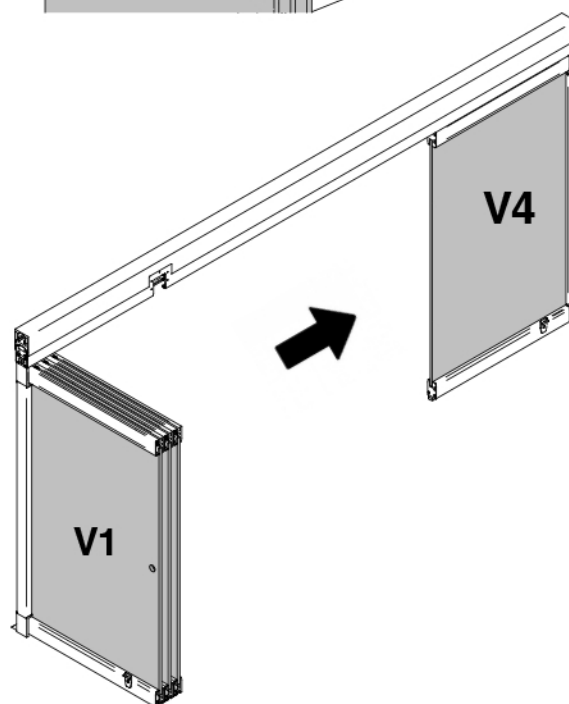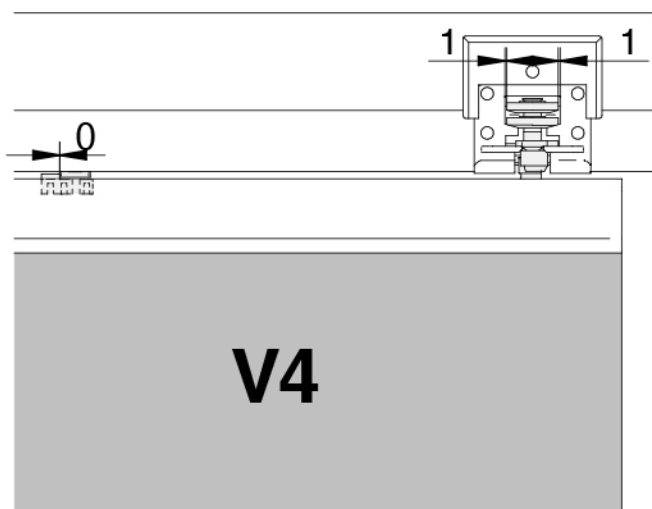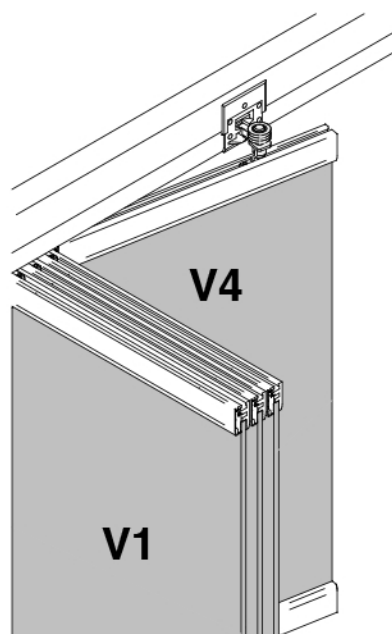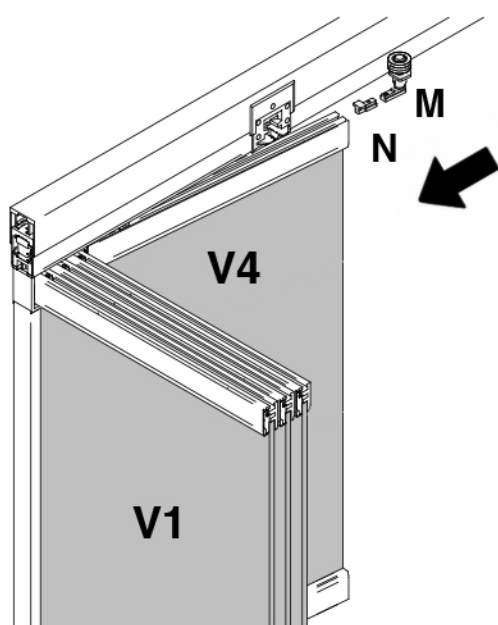

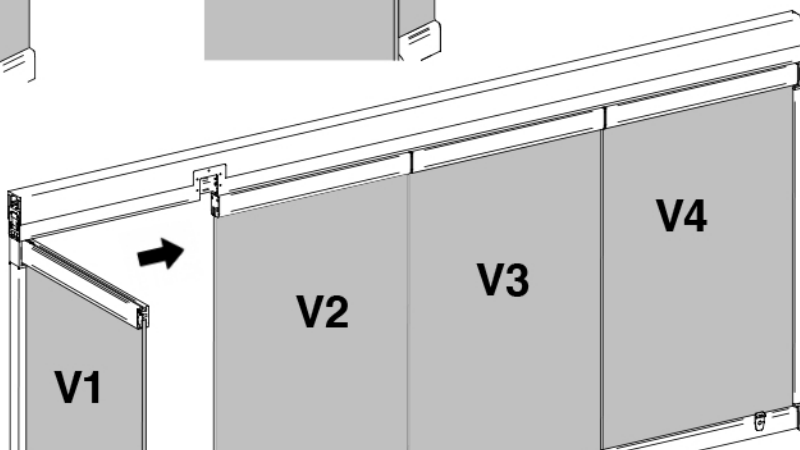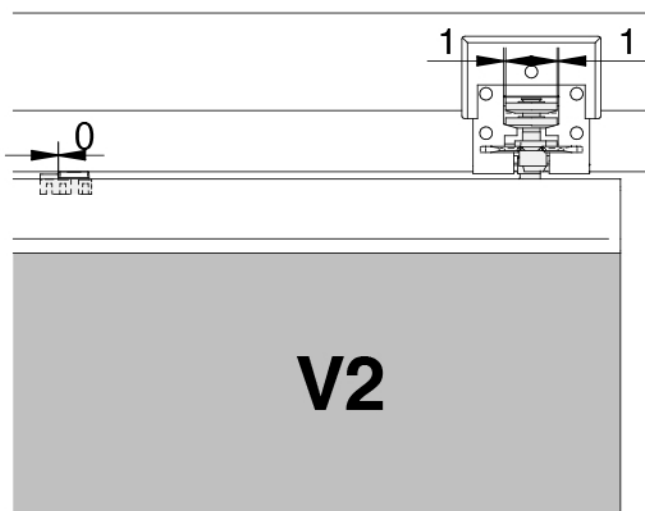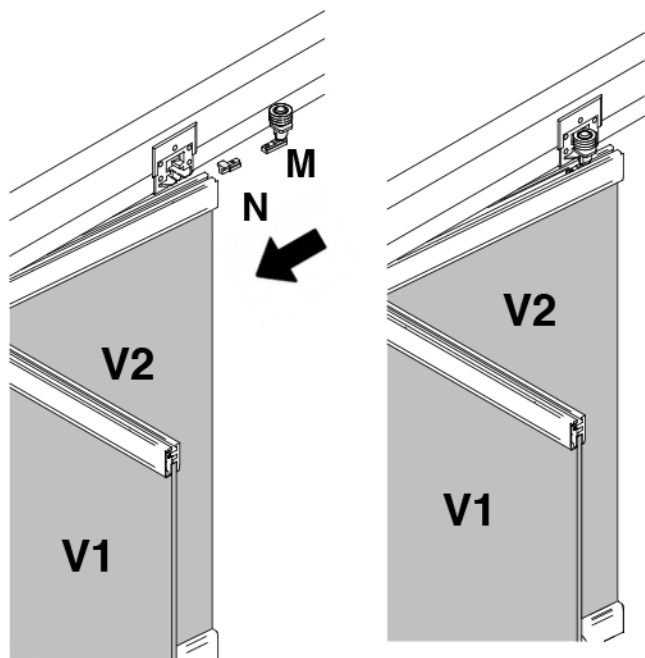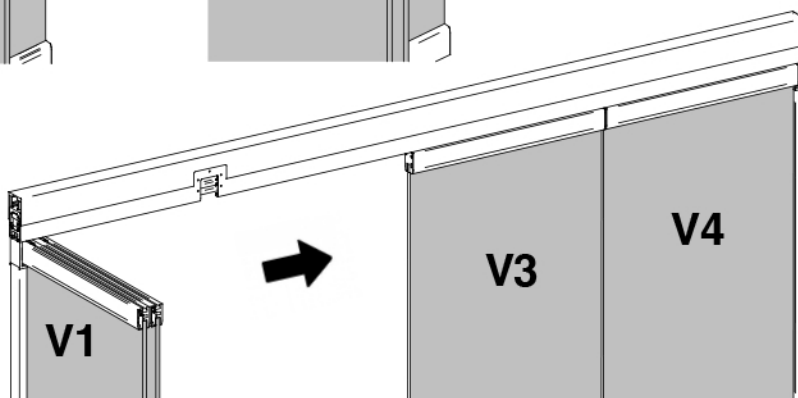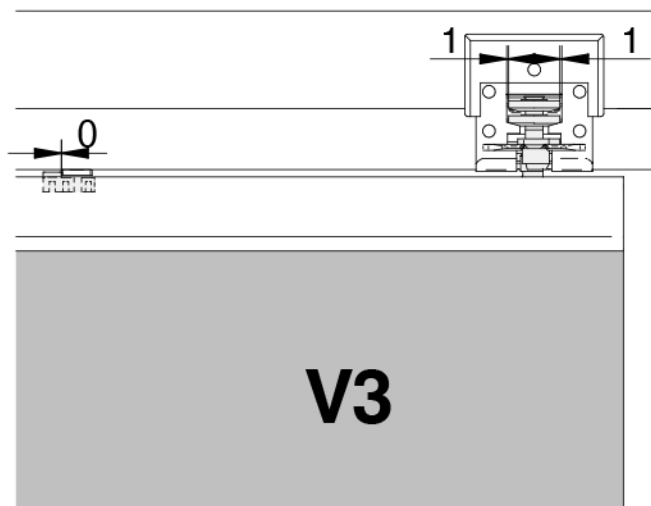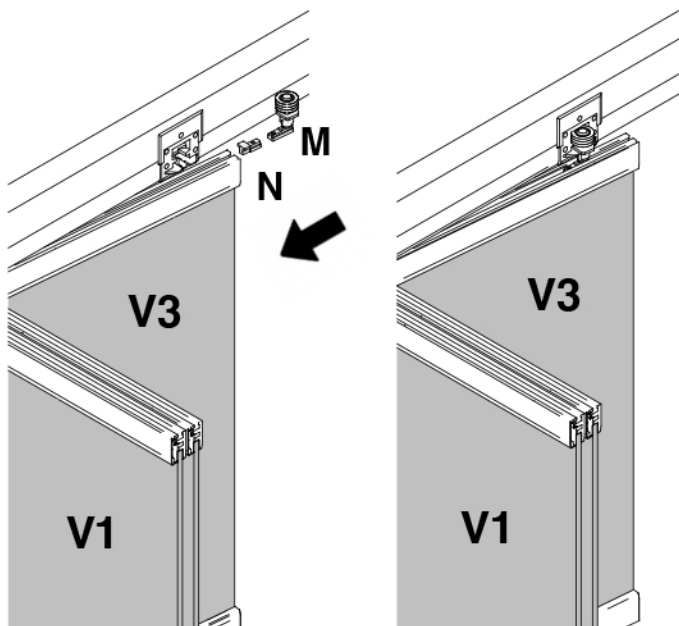

13 Swing door installation

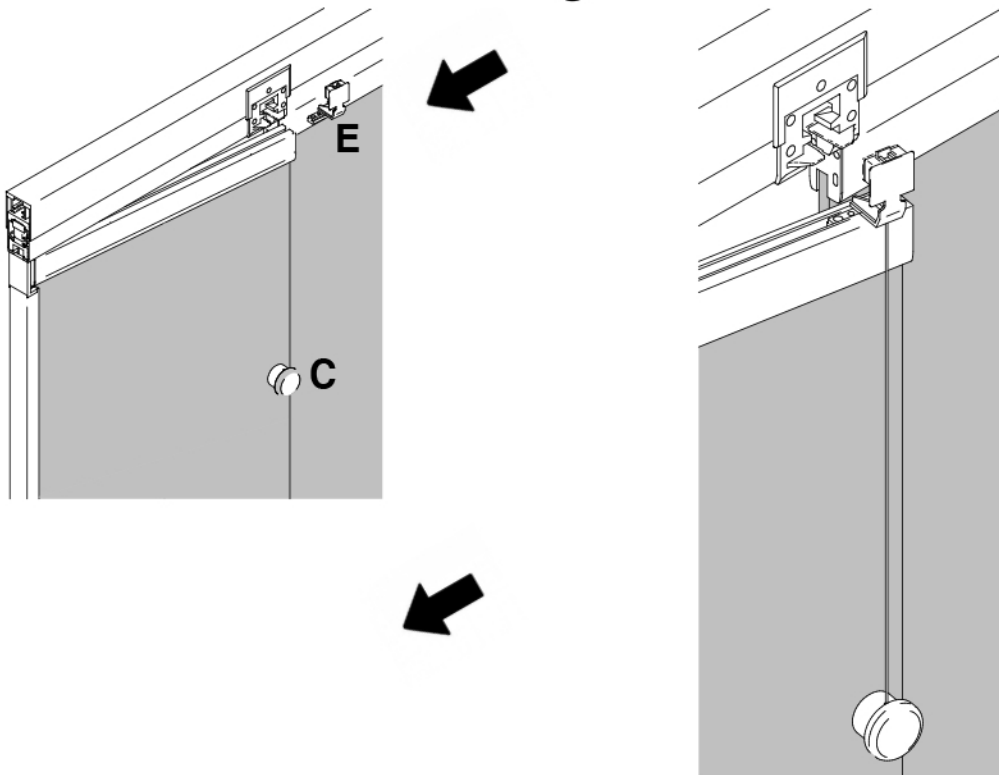

14 Inserting brushes

