


## ASSEMBLY INSTRUCTIONS



MAX  
90 KG



min. 550  
MAX 1100




MAX  
3000




7  
7+7



10 - 10,76  
12 - 12,76 mm

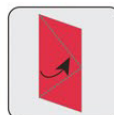







Required tool

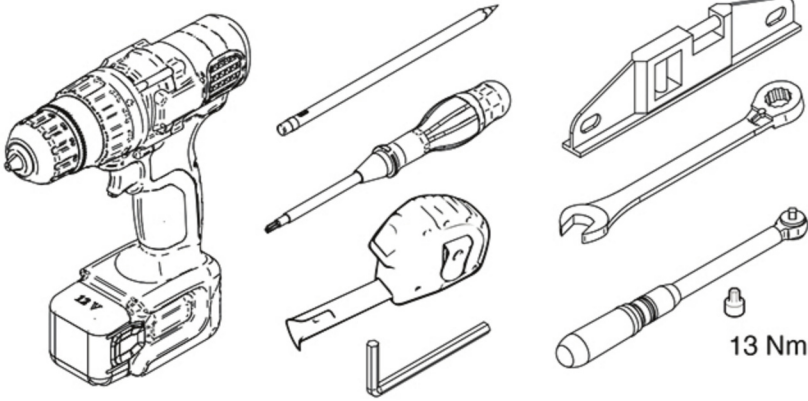


Clean the glass and profile before installing



We recommend our Glass cleaner Hendrika 7791180100000

Components

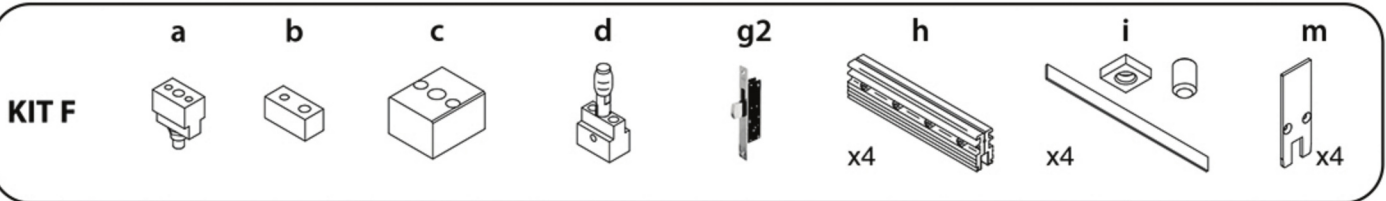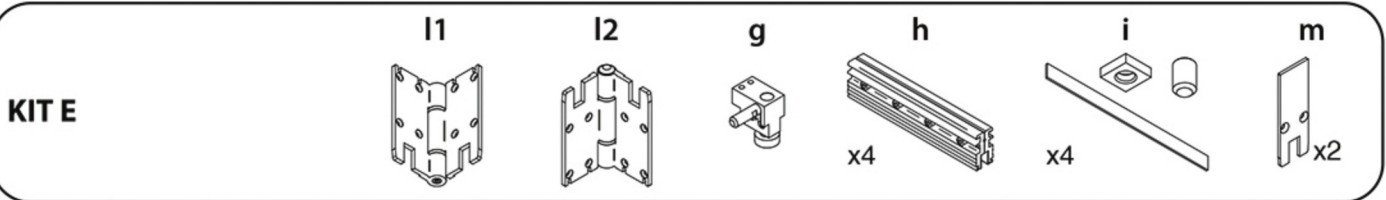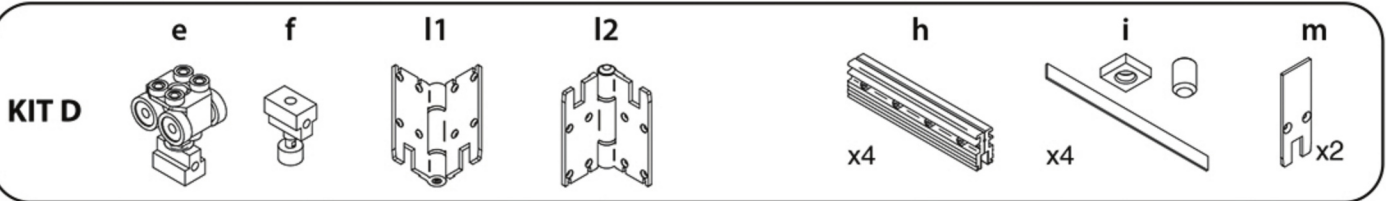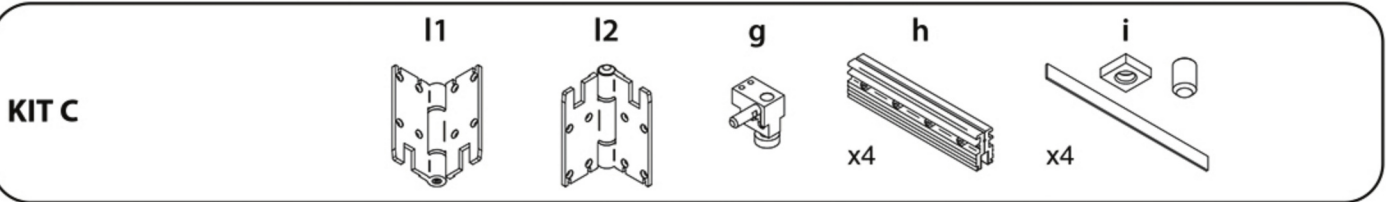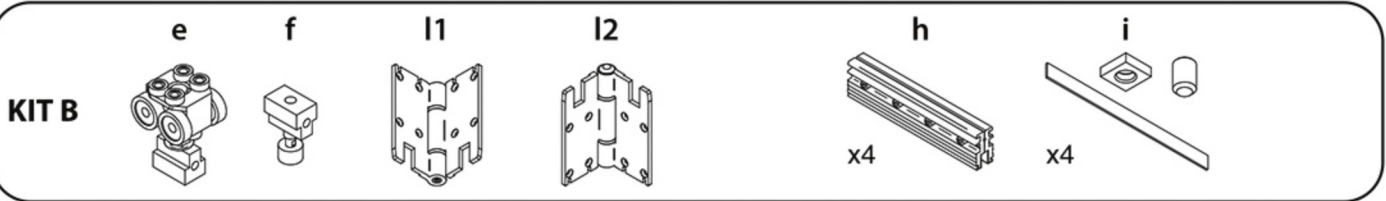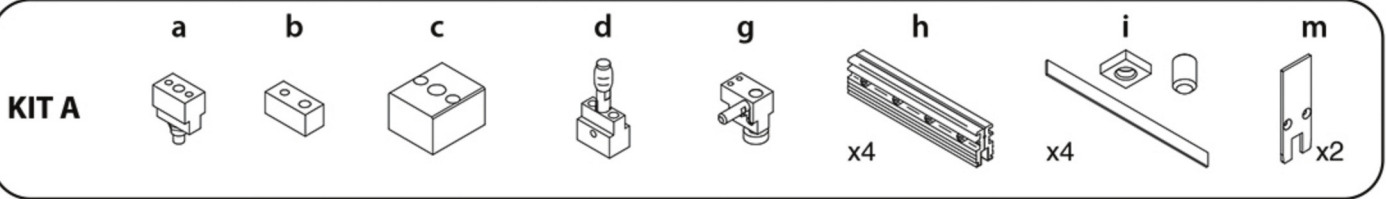

PROFILES

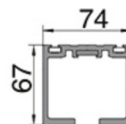


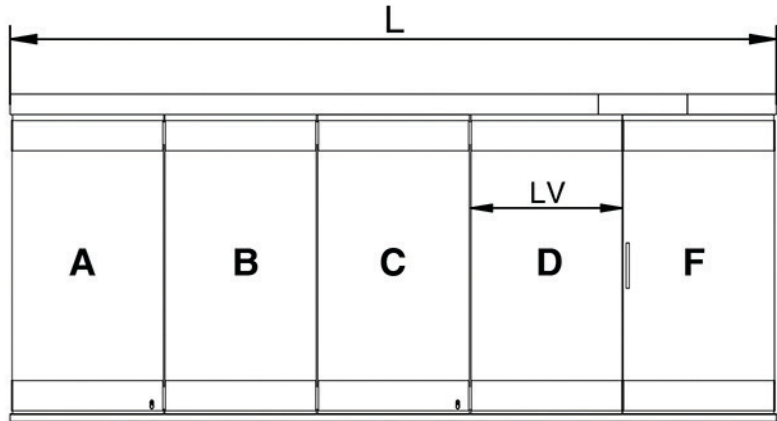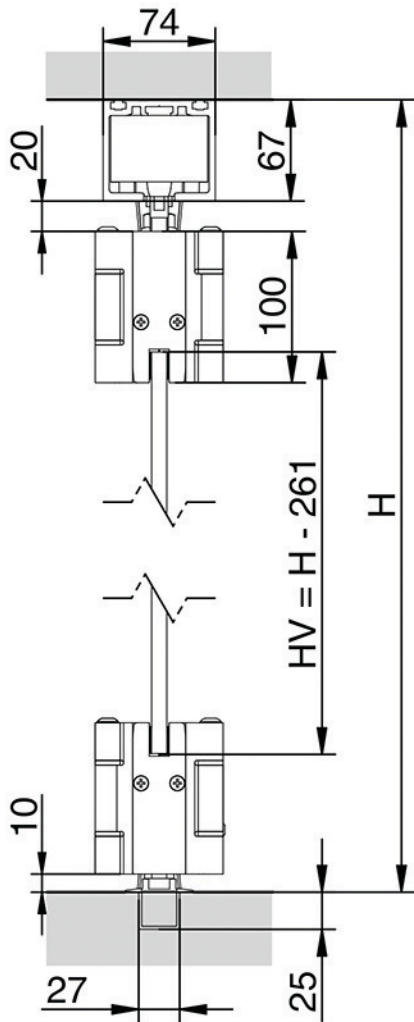

$$LV = \frac{L - (6 \times N) - 6}{N}$$


N = number of panels

**PROFILES**

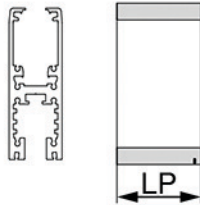


LP=LV-3



Configurations 2 - 4 - 6 panels

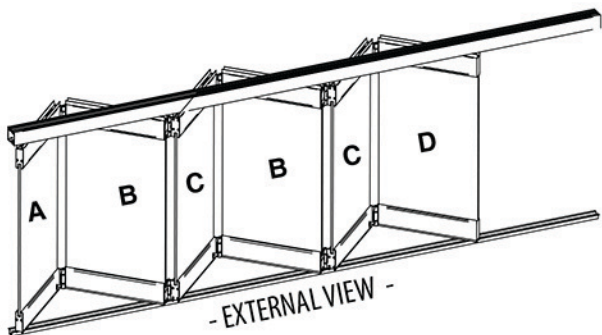



Configurations 3 - 5 - 7 panels

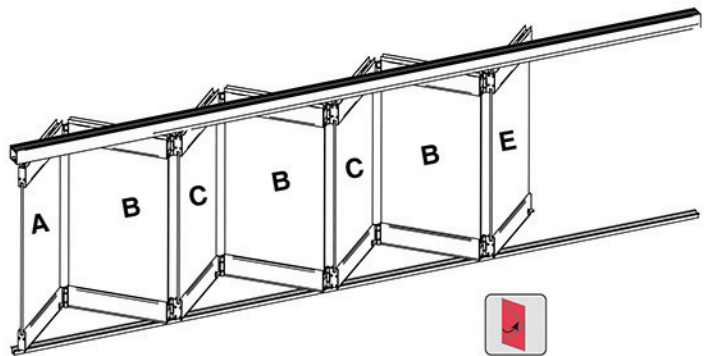



Configurations with independent swing door

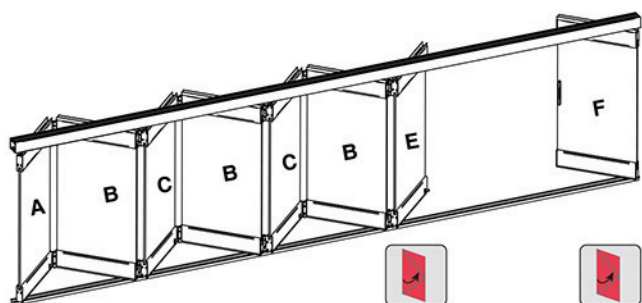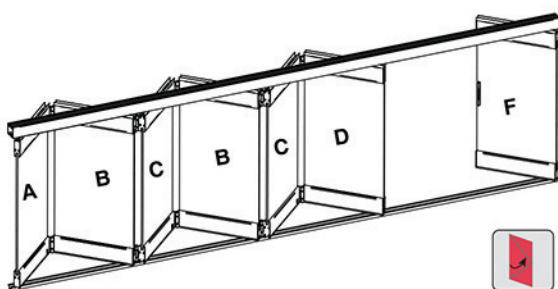



# 1a Profile assembly

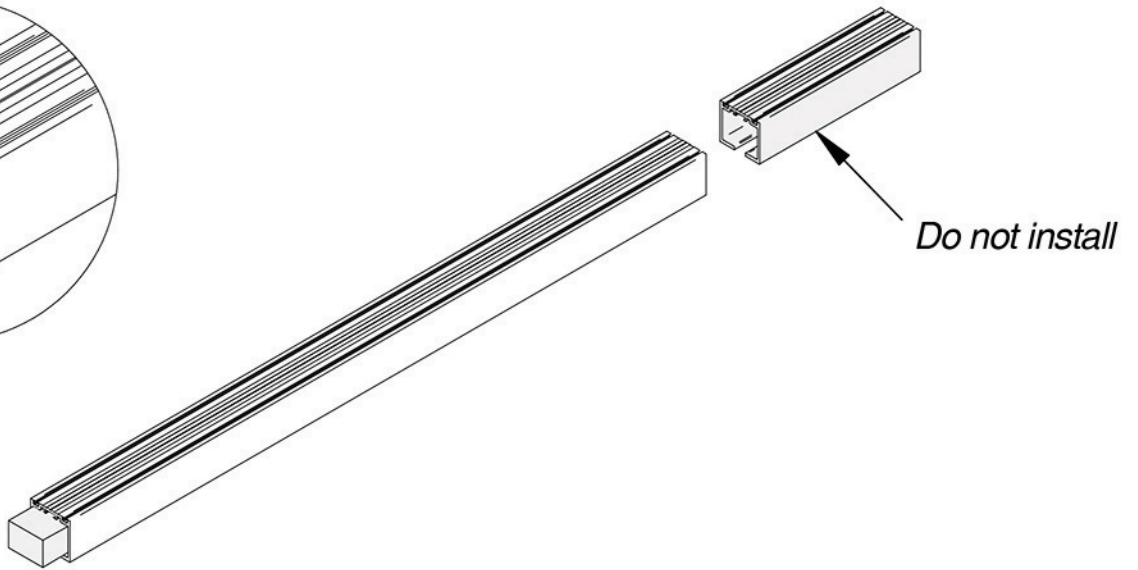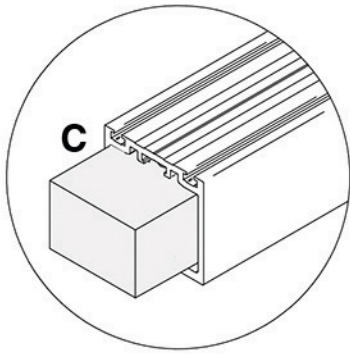

# 1b Profile fix

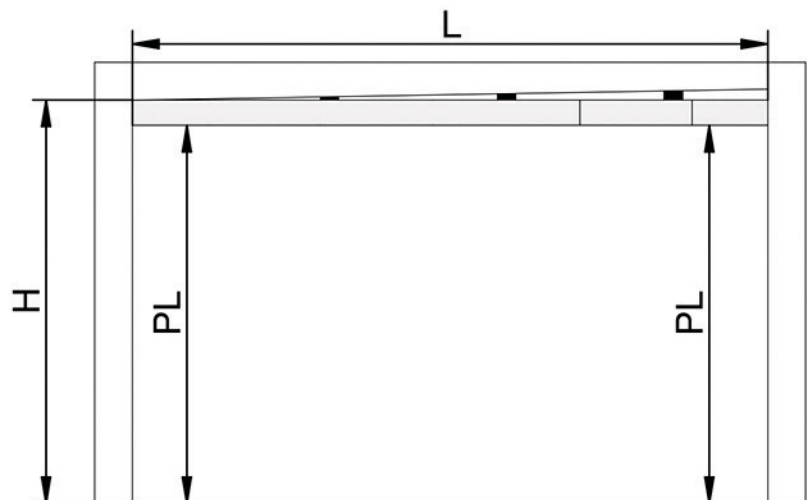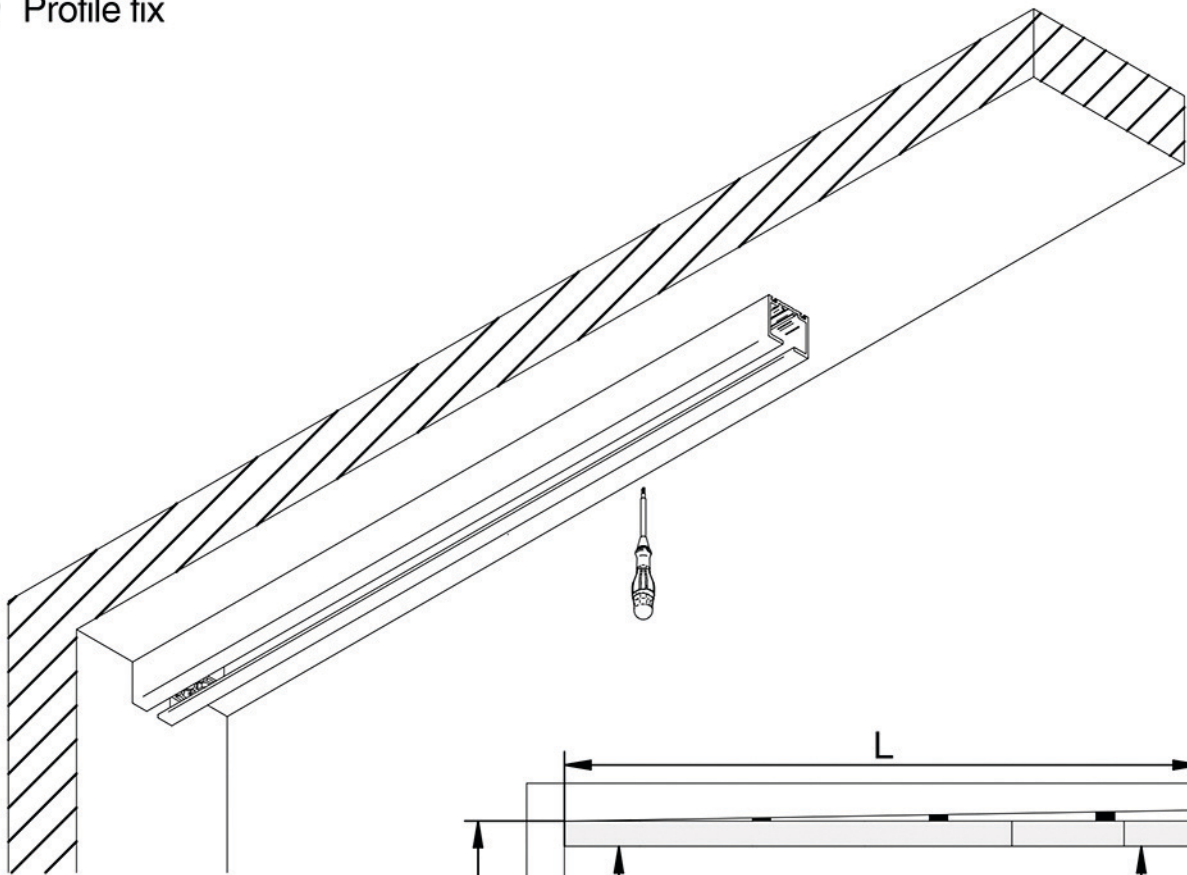

## 2 Assembly clamps profile

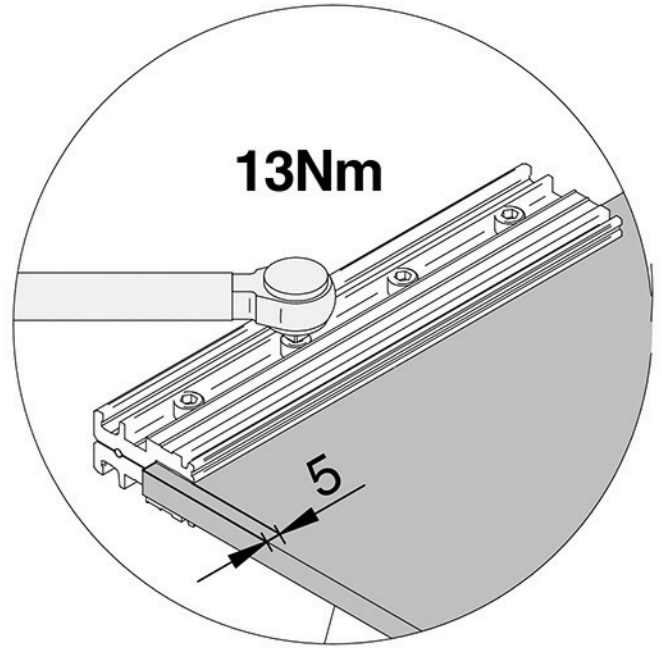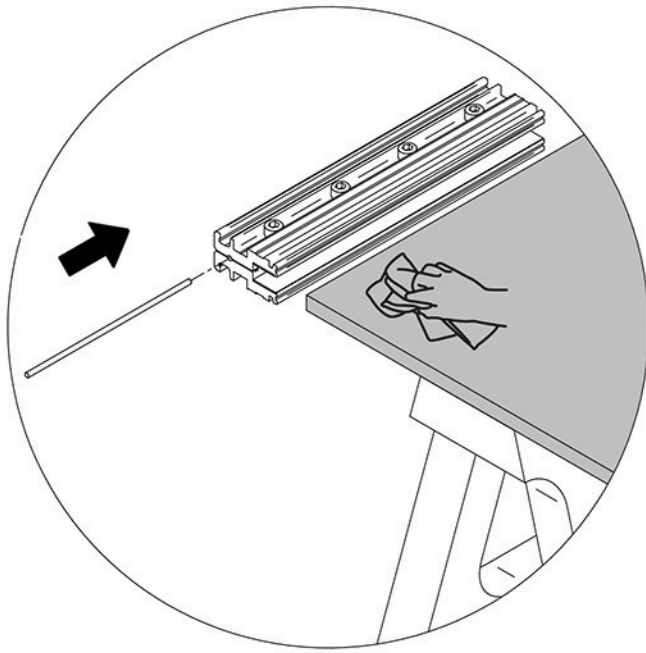

*Insert the spacer in the clamp*

*Place and screw the clamp on the clean panel*



Ø 3

10 mm

Ø 3,5


10,76 mm

Ø 4

12 mm


Ø 4,5

12,76 mm

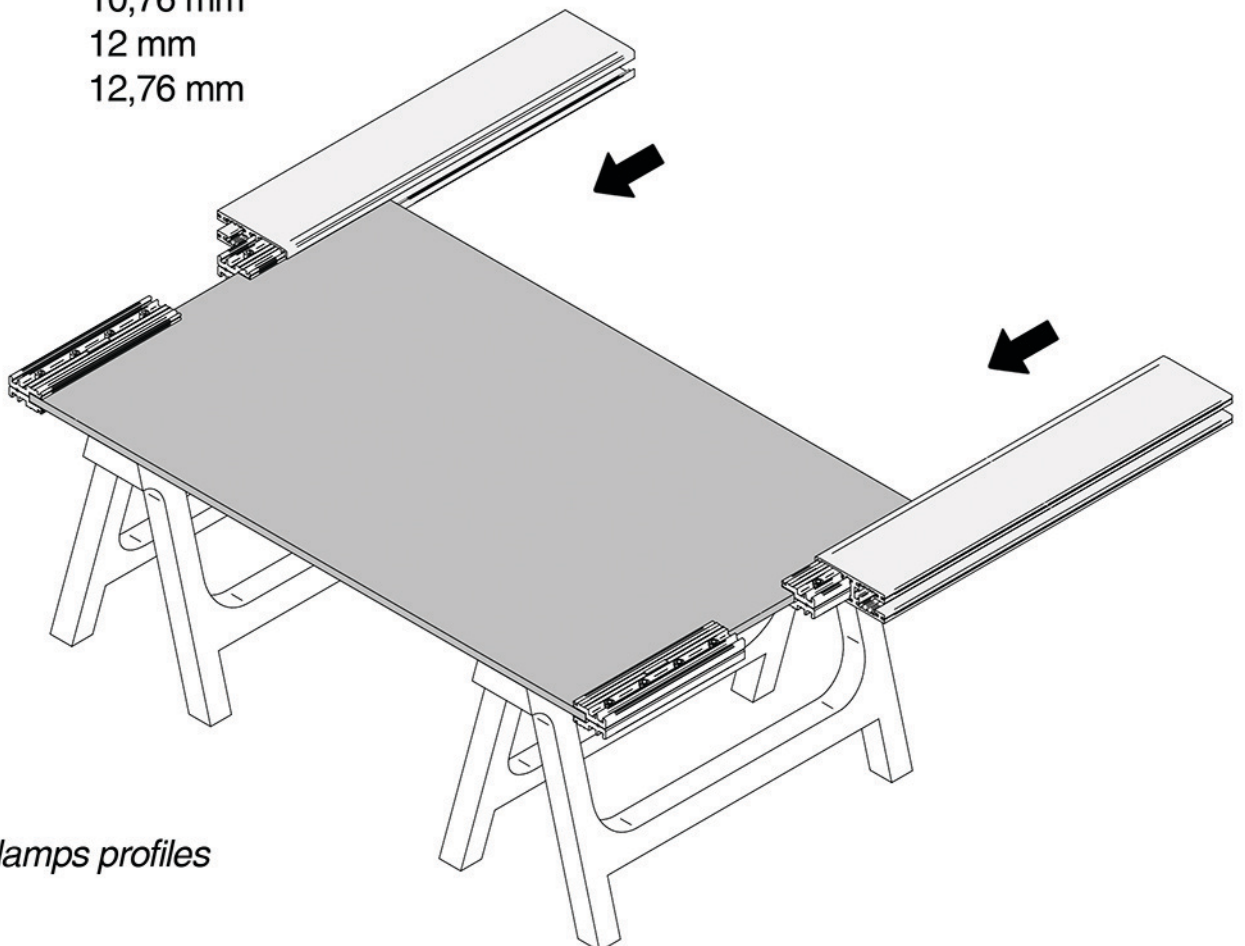


*Insert clamps profiles*



### 3 Tightening clamp profile

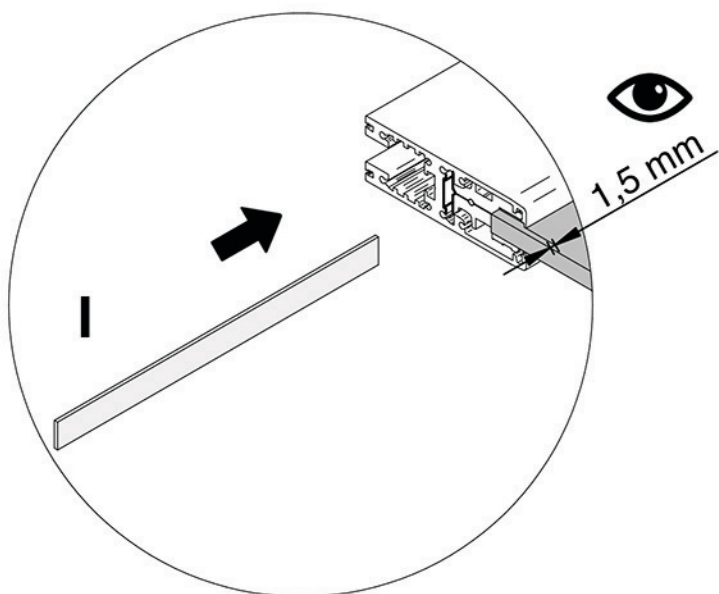


*Insert the platelet in the clamp profile*

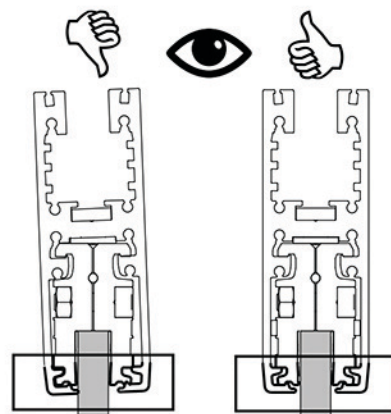




*Verify the right position of the clamp*

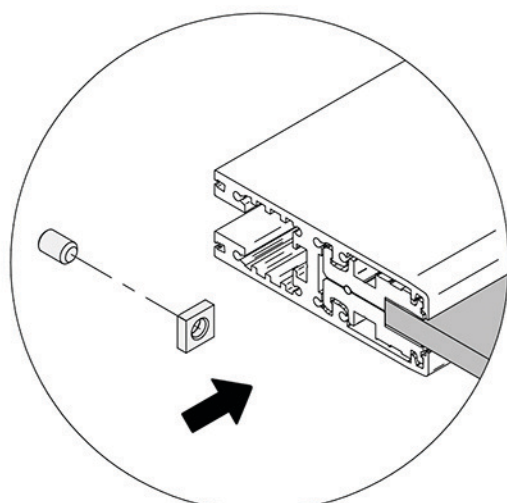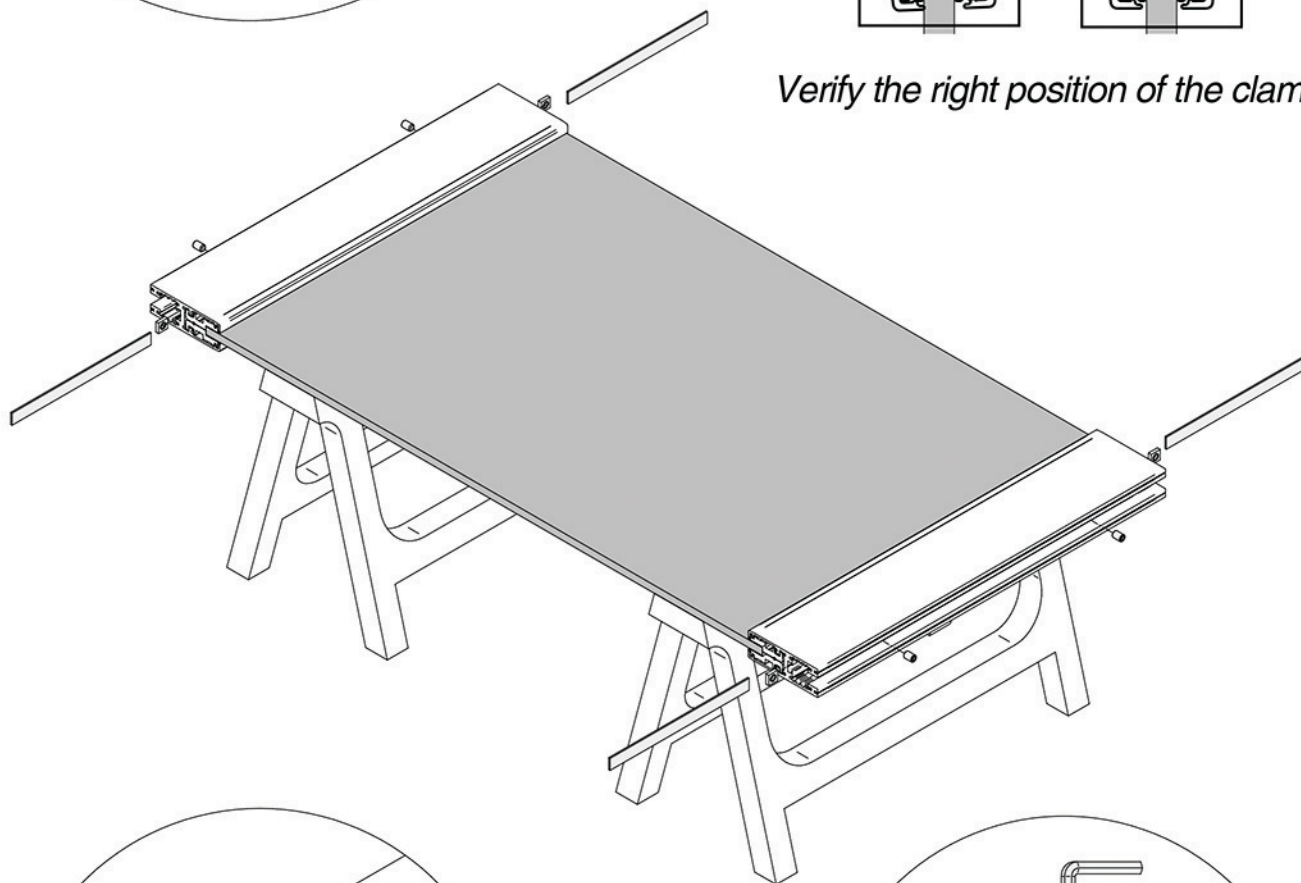






*Screw*

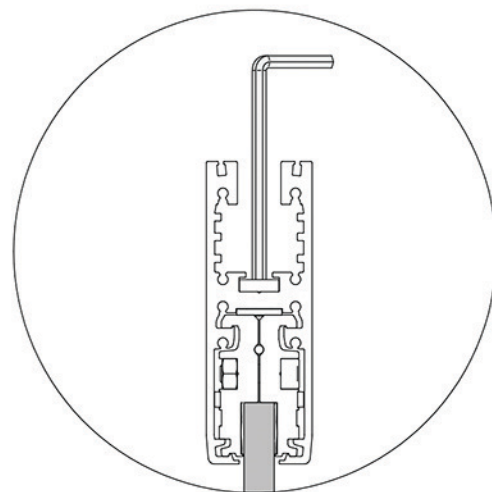

# 4 Assembly panel "A"

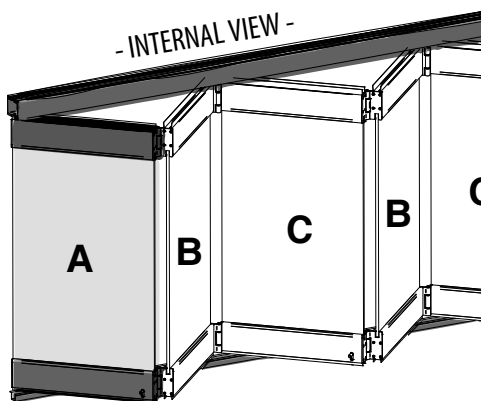
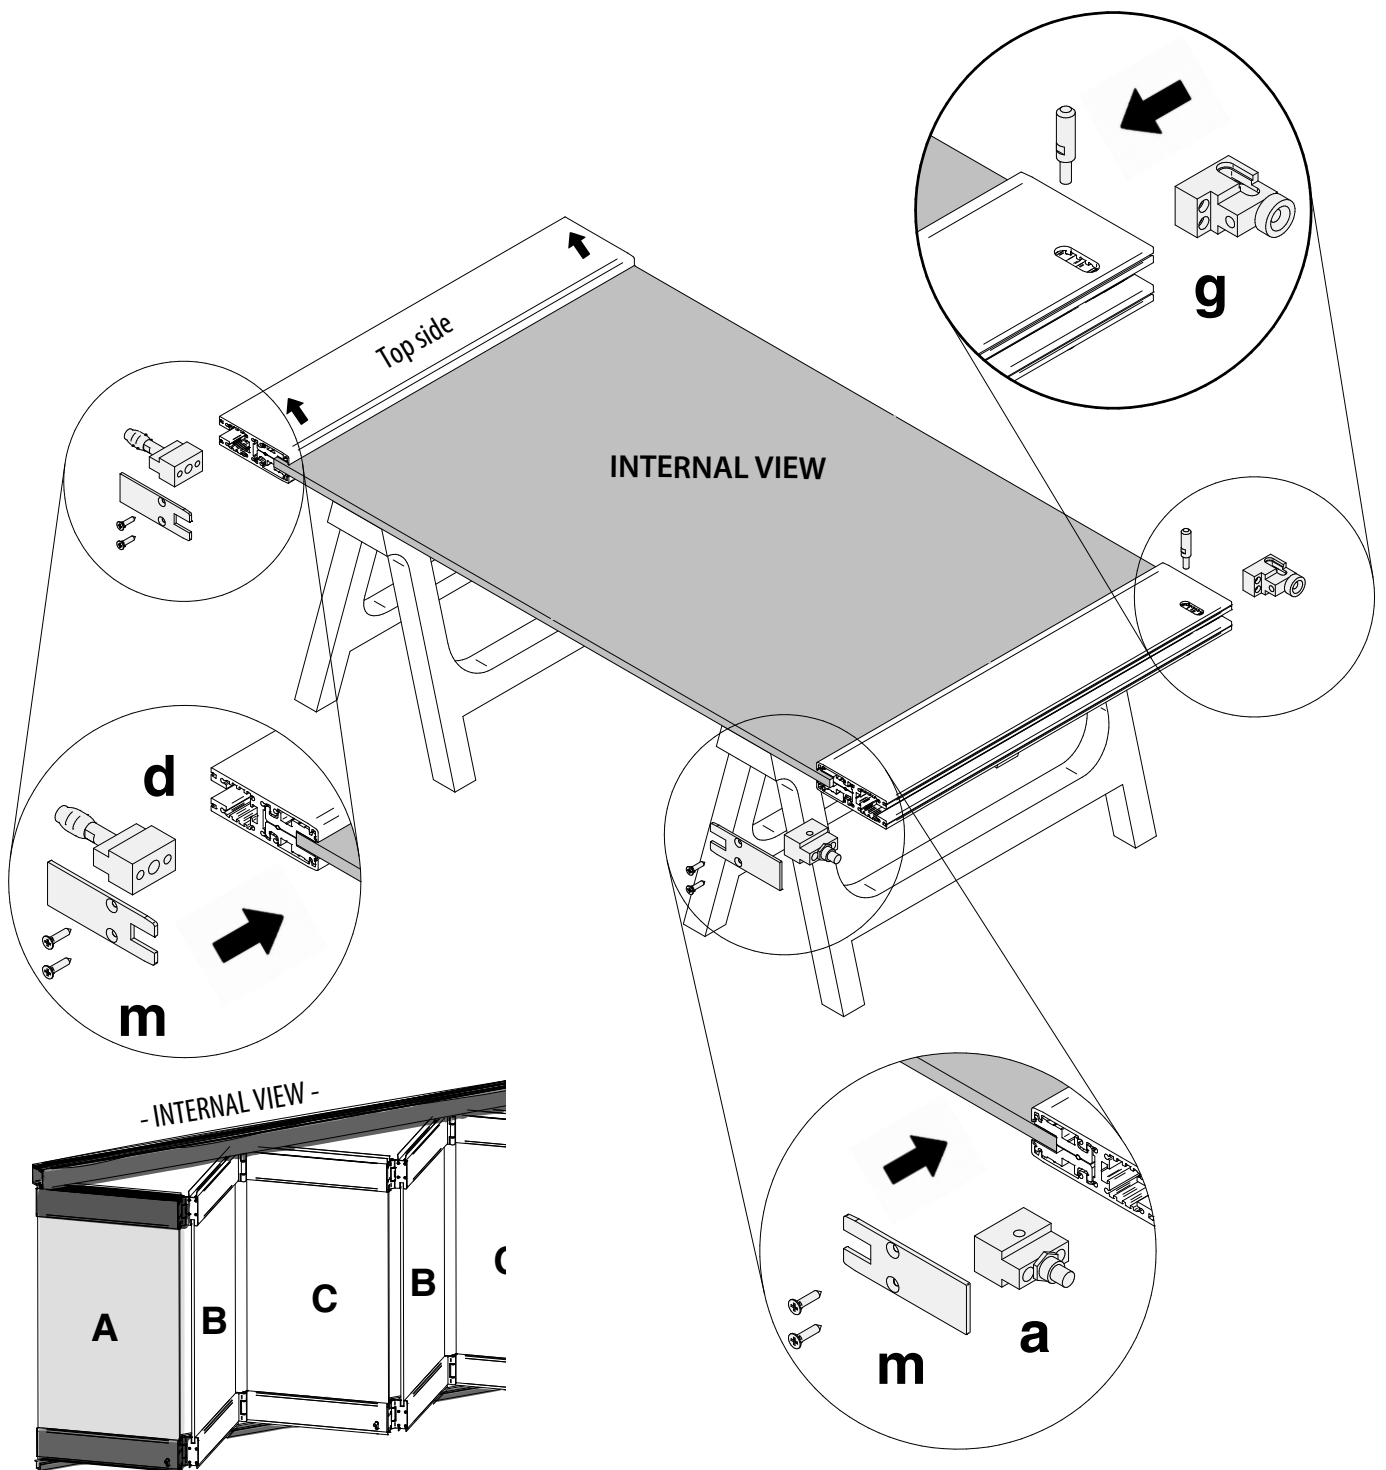
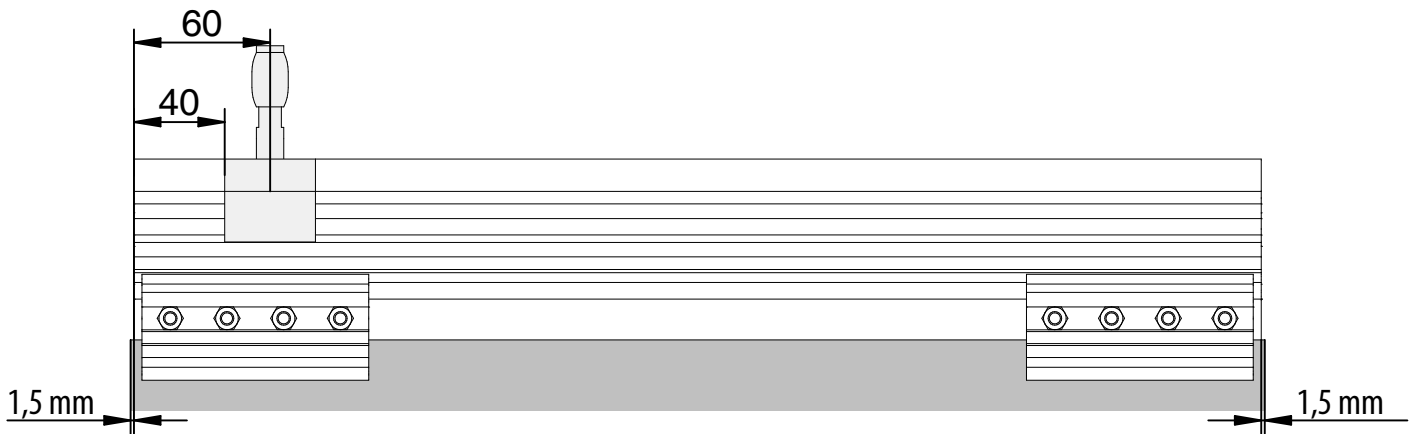


# 5 Assembly panel "B"

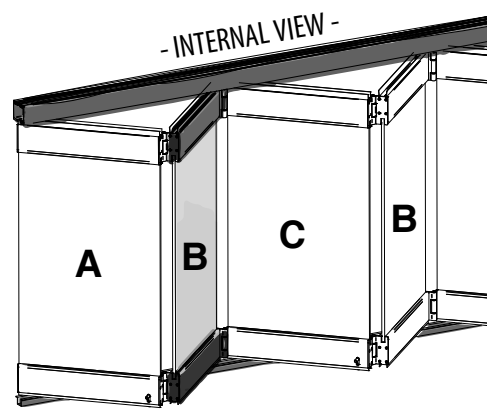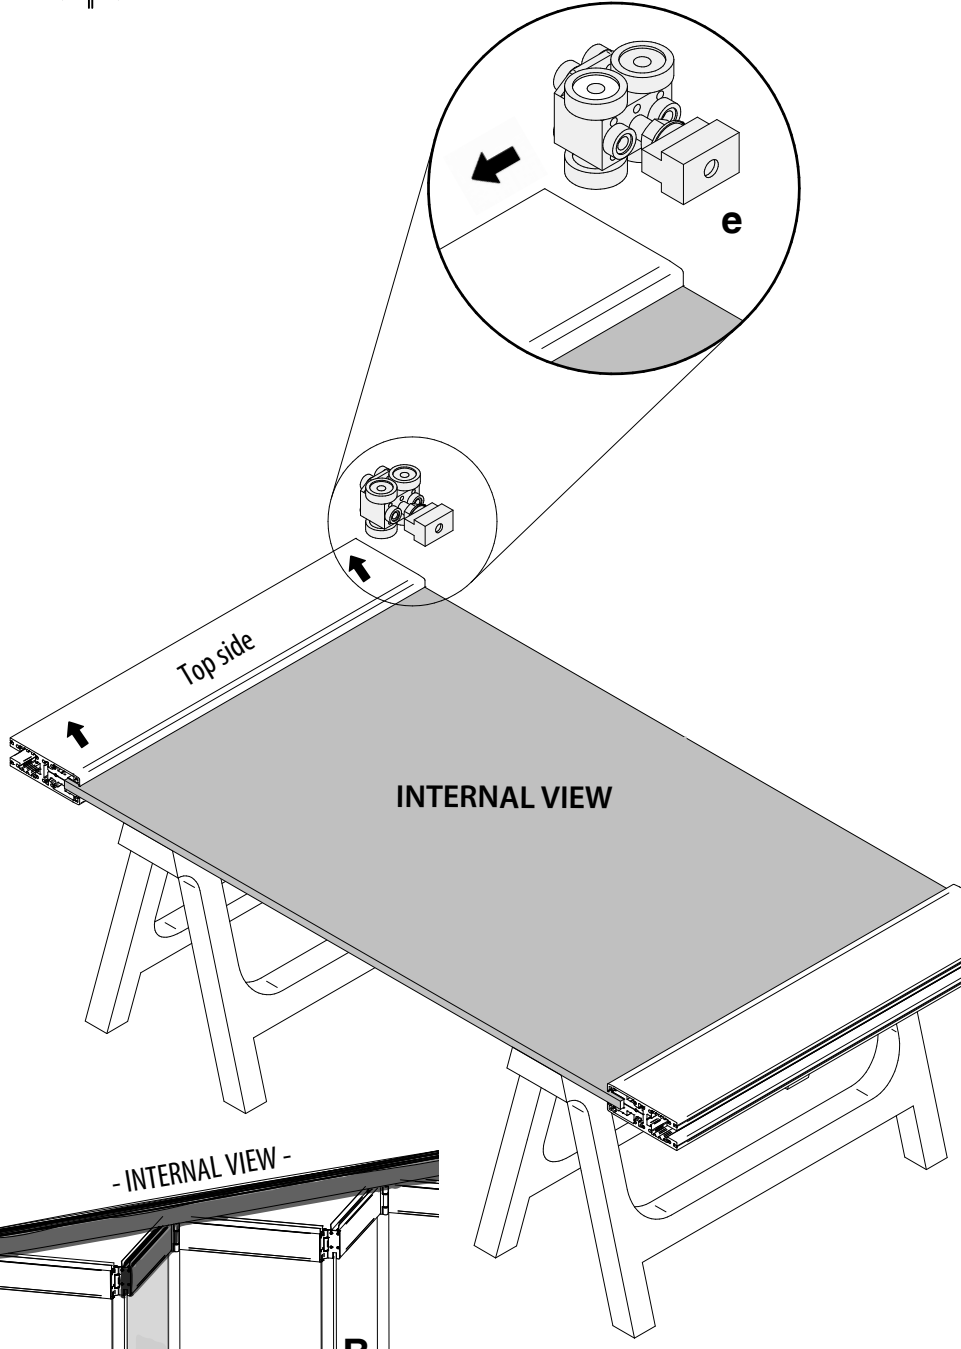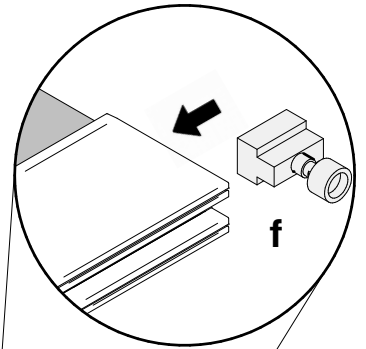
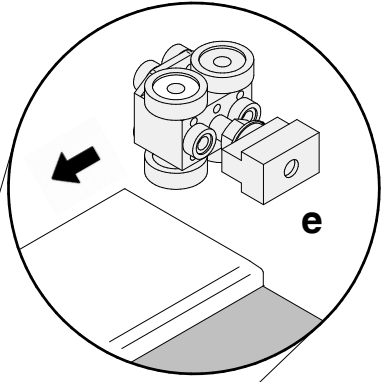
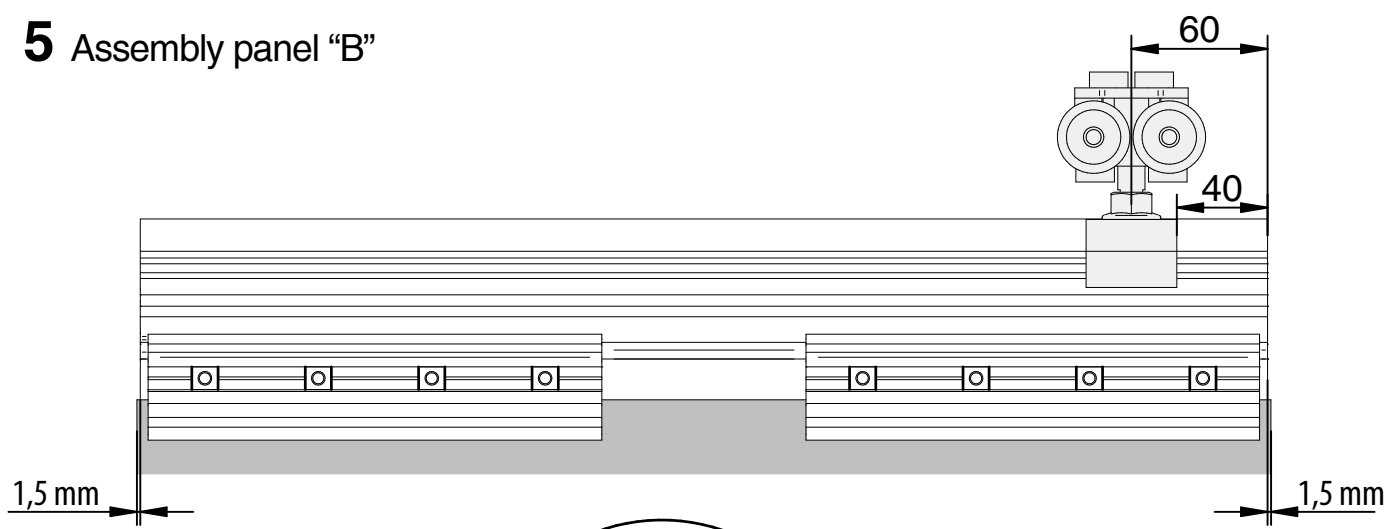







## 6 Assembly panel "C"

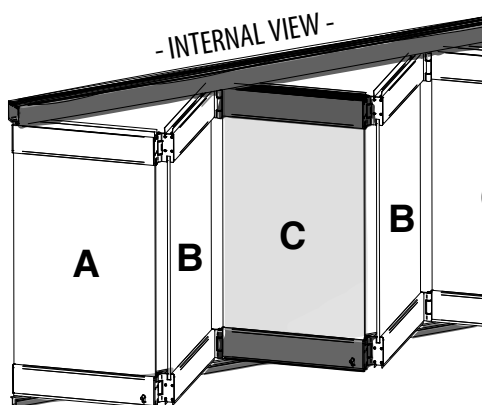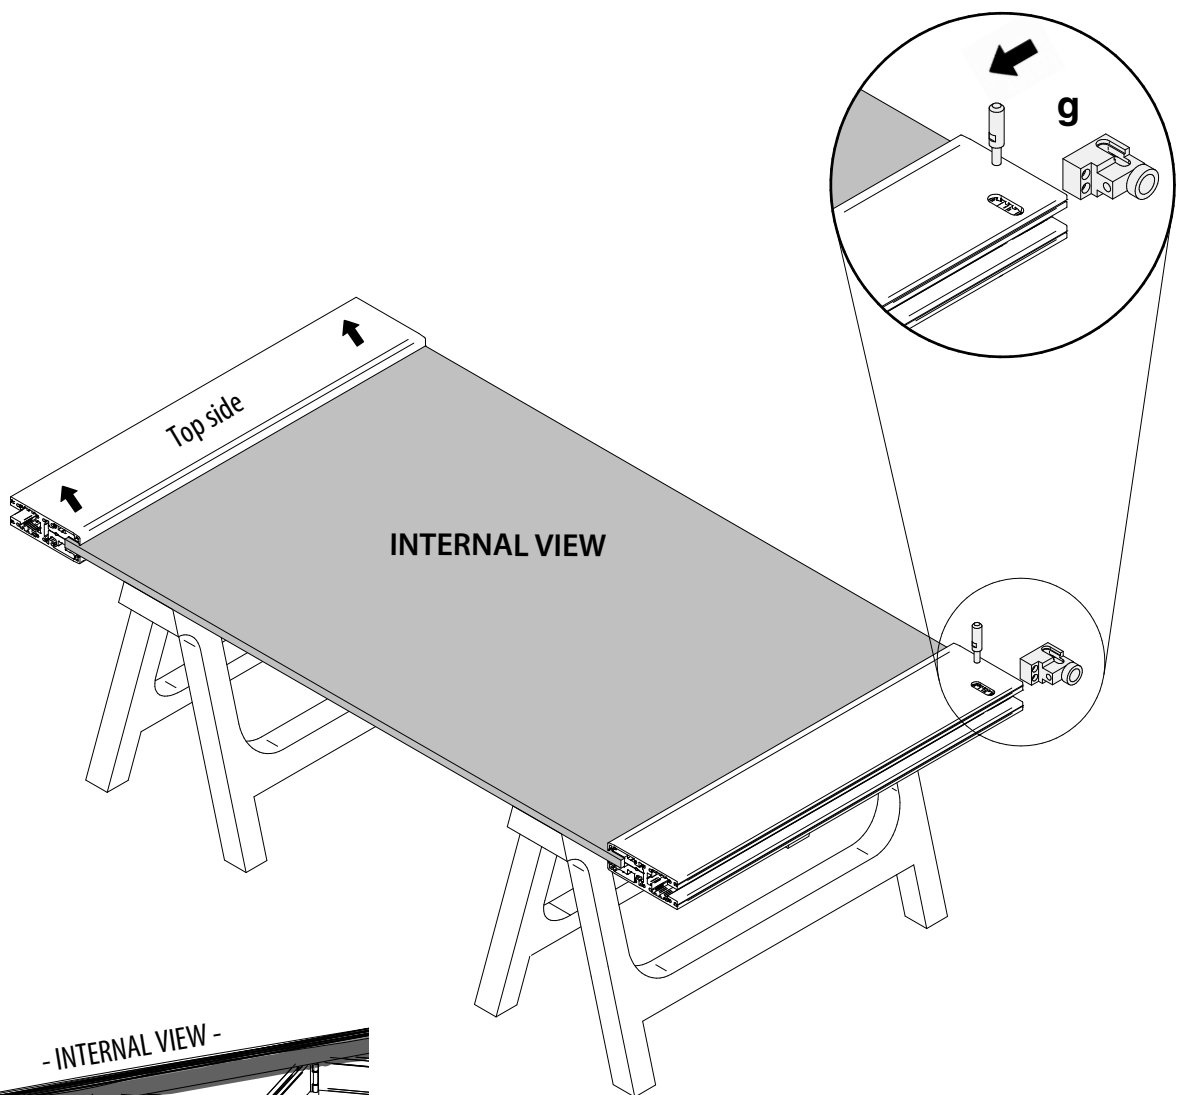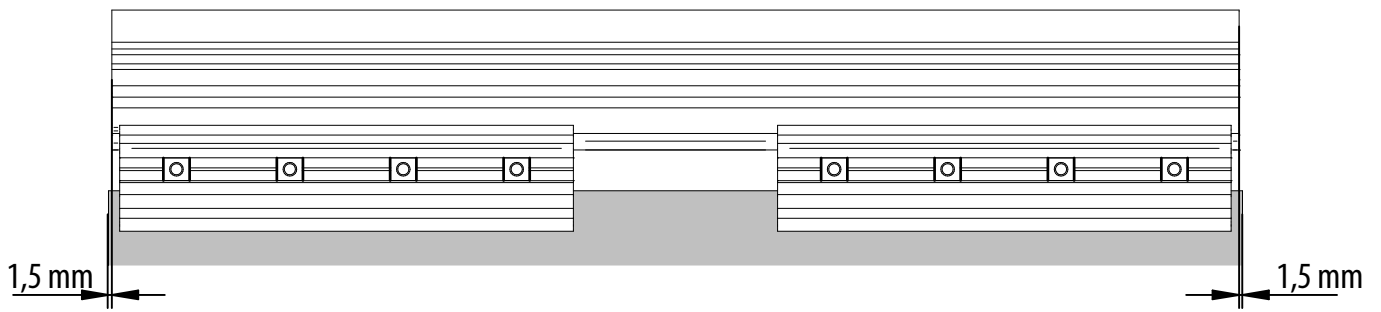










# 7 Assembly panel "D"

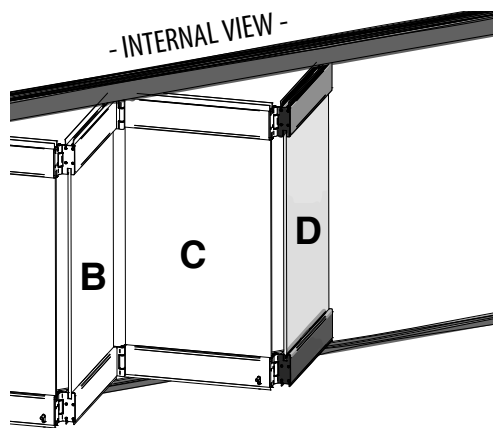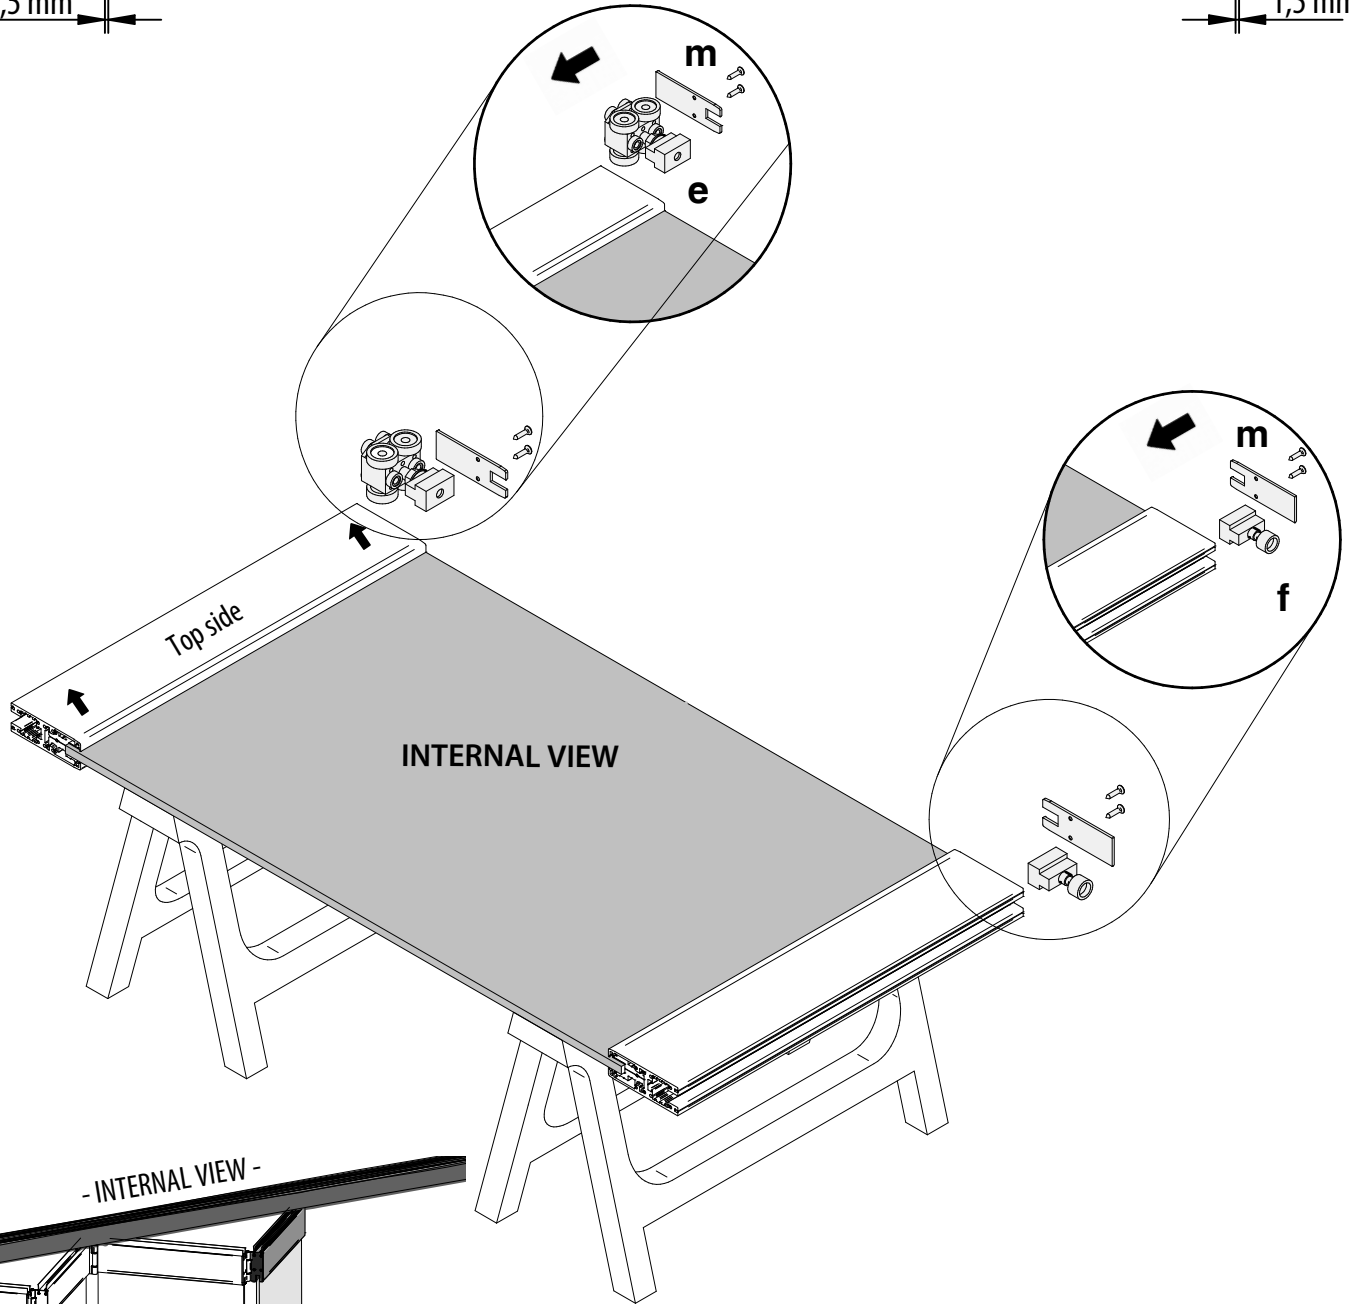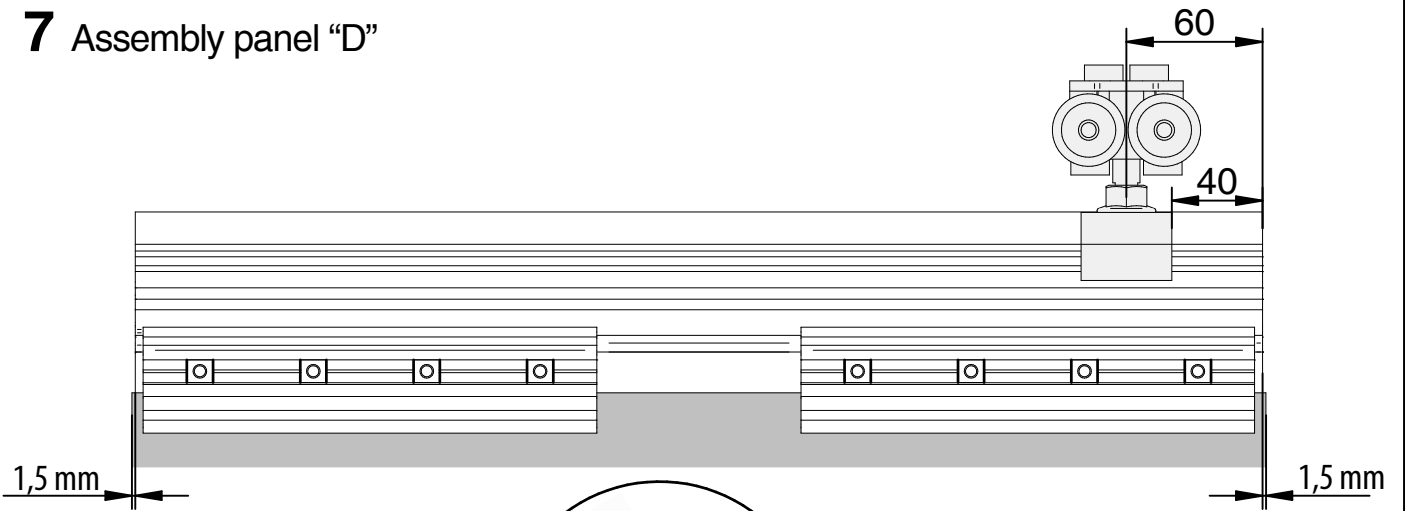


# 8 Assembly panel "E"

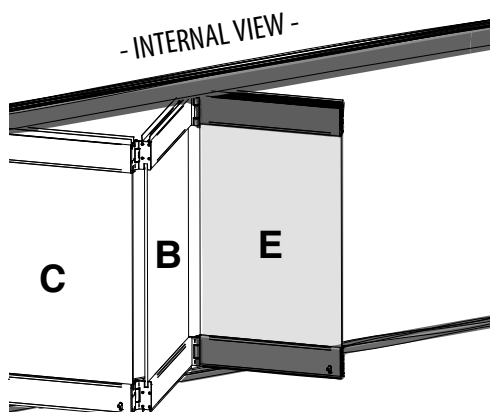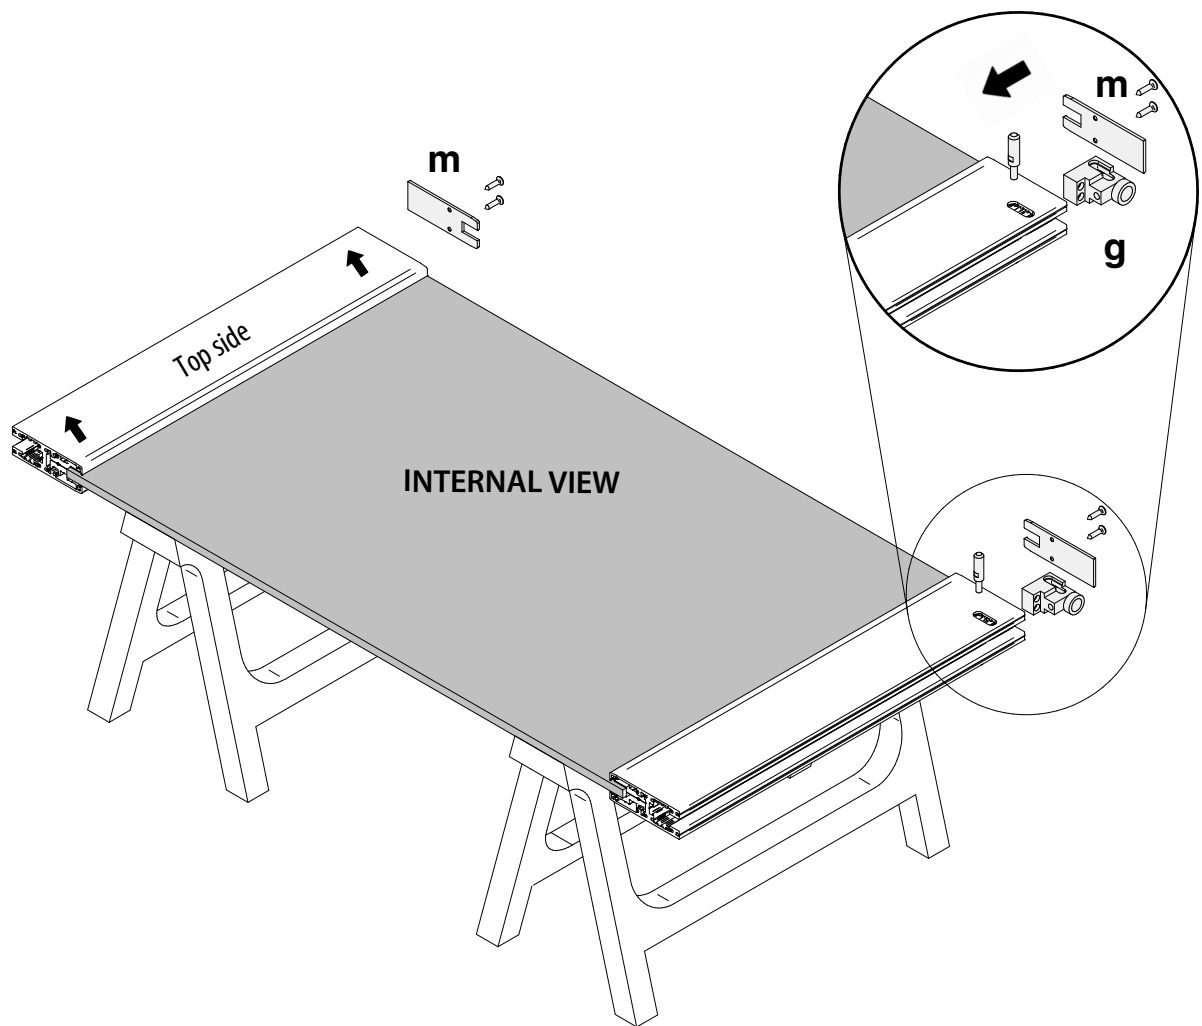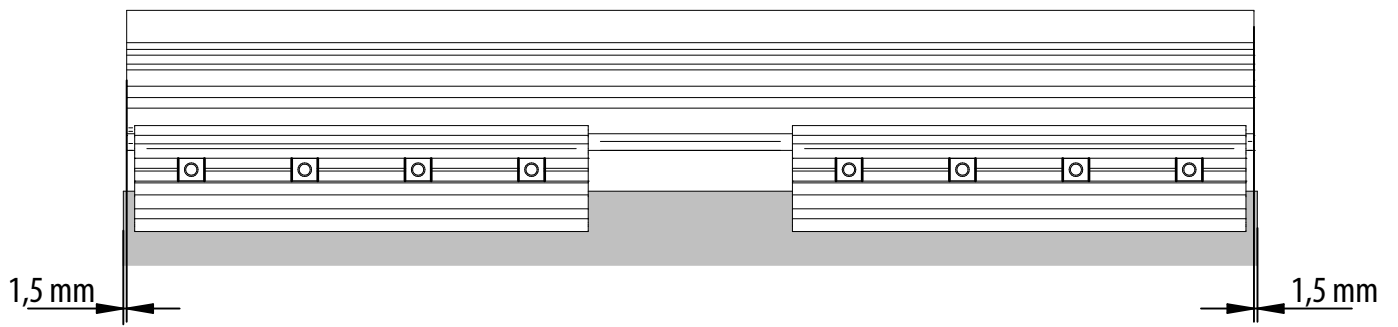

# 9 Assembly panel "F"

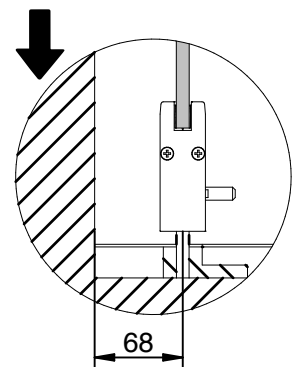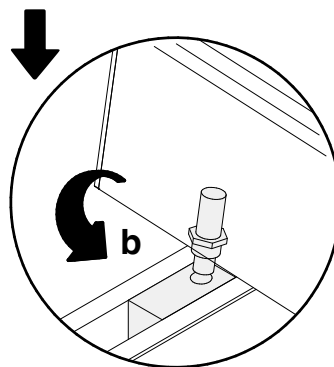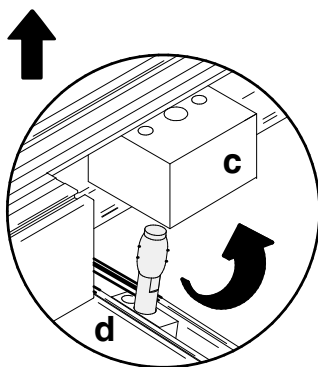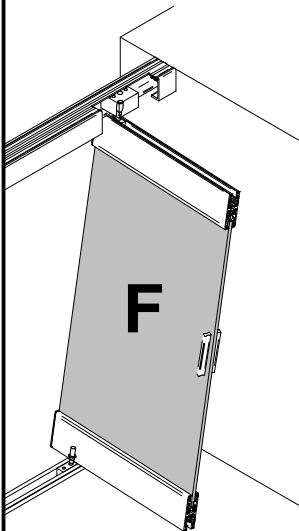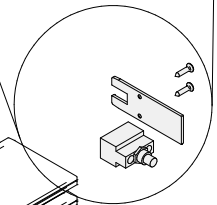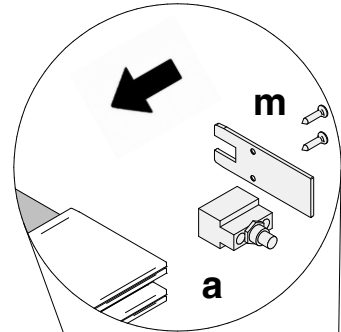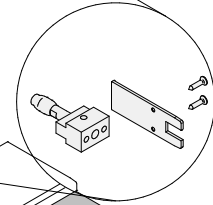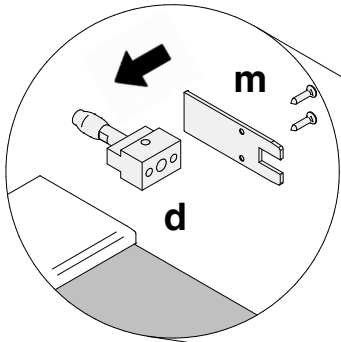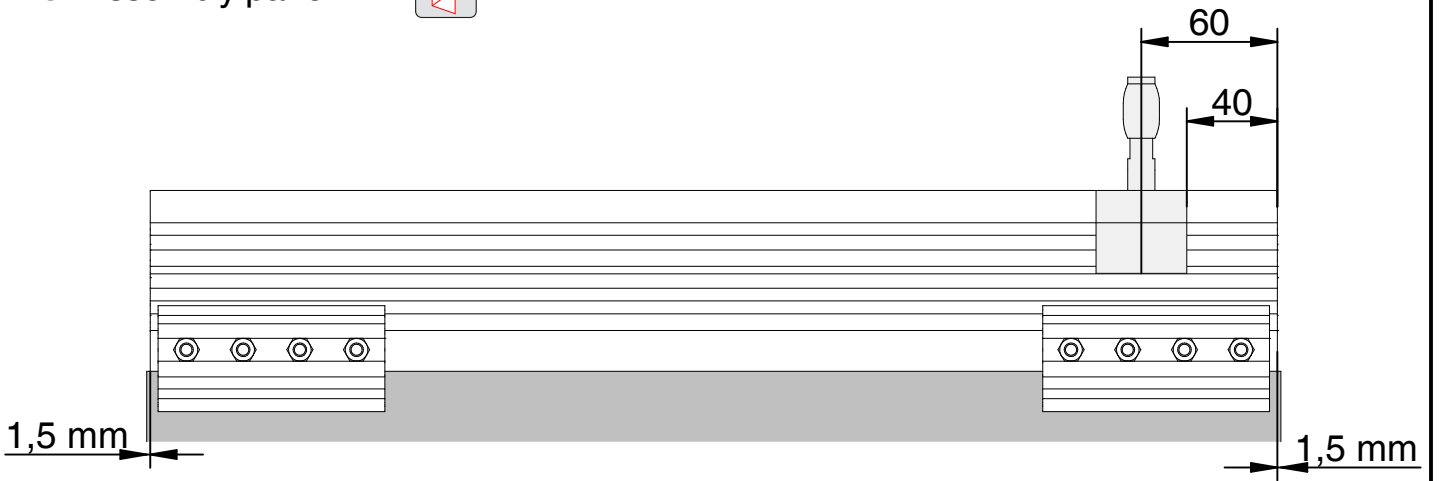

## 12 Assembly brushes and seals

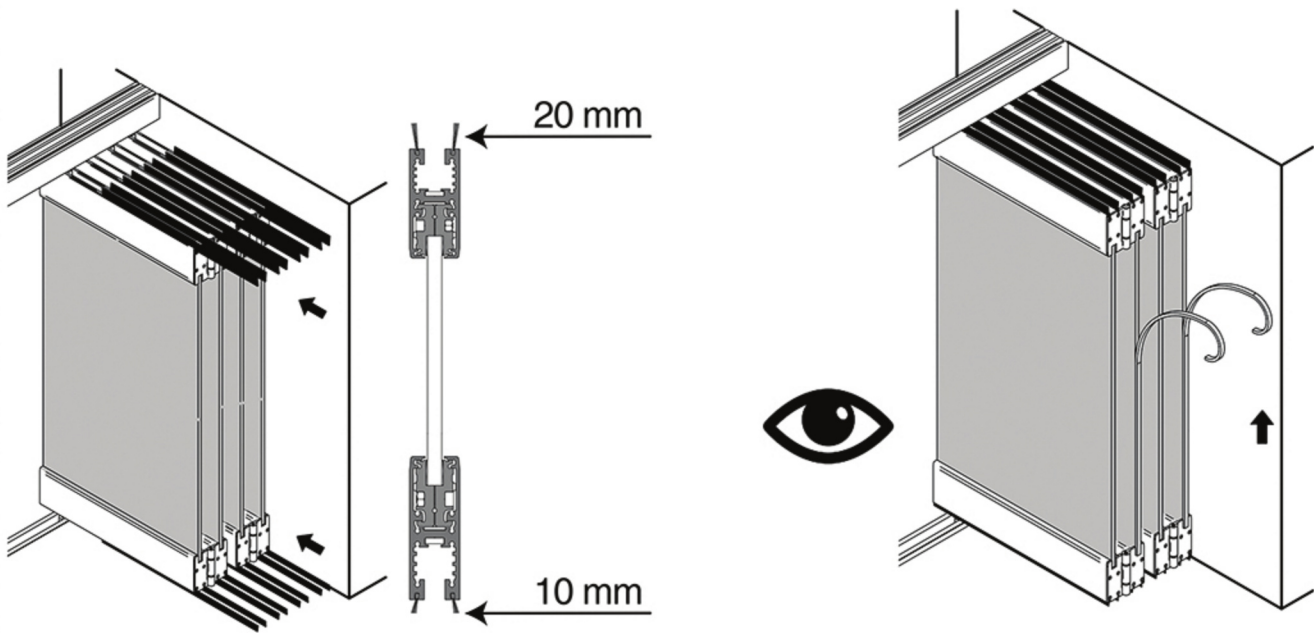


Clean with our glass cleaner Hendrika  
779118010000



Do not install on cold glass


## 13 Assembly floor bush

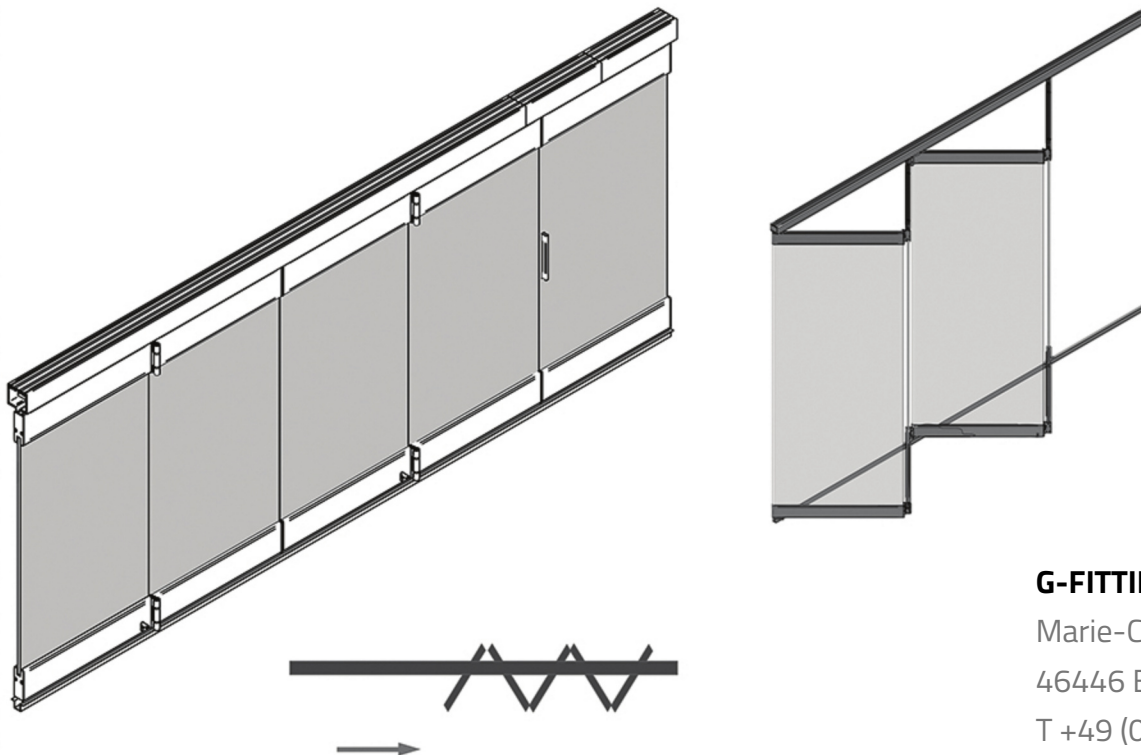

**G-FITTINGS GmbH**

Marie-Curie-Straße 16-18  
46446 Emmerich am Rhein  
T +49 (0)2822 962 0  
E sales@g-fittings.com

## 10 Mounting panel "A"

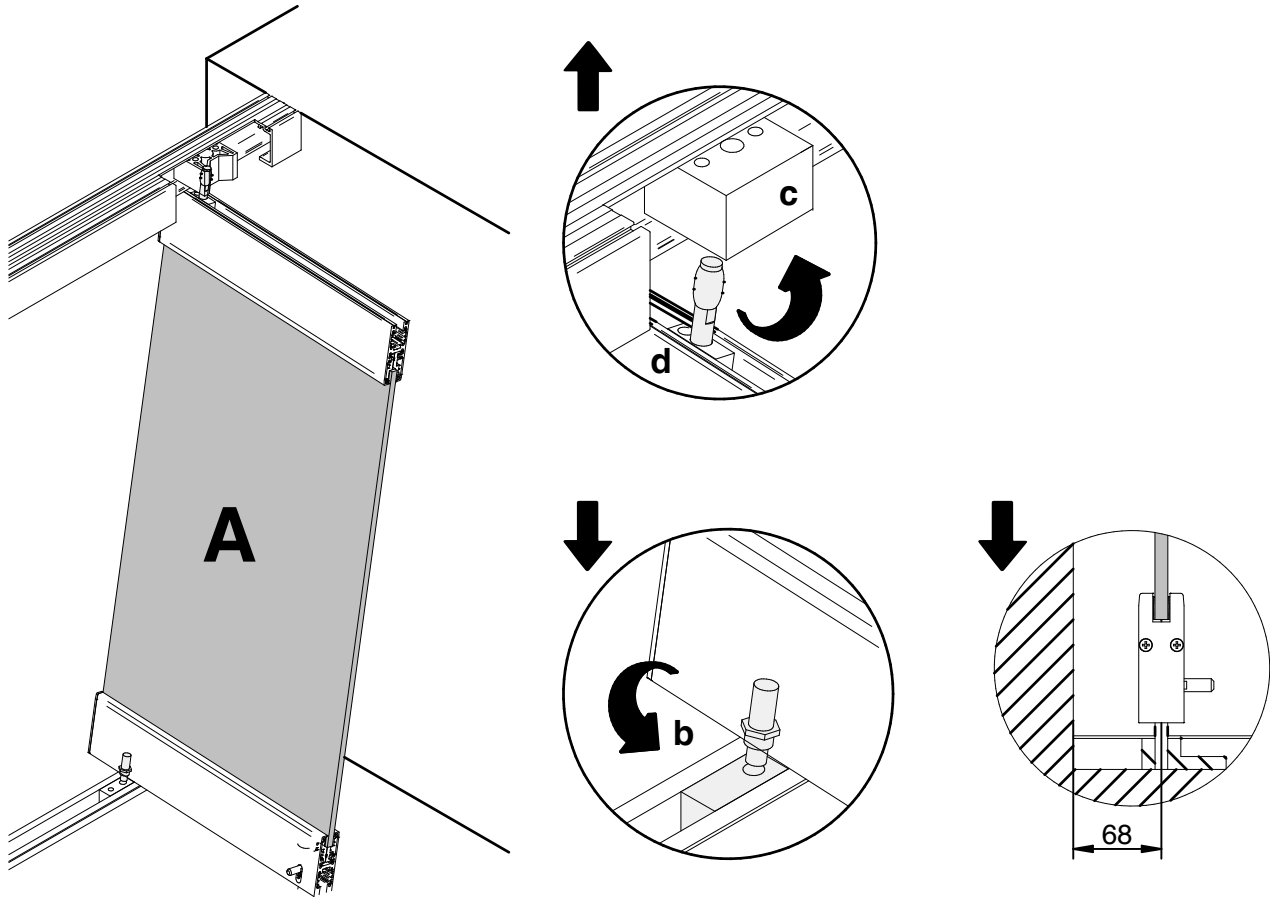

## 11 Panels mounting

