


Glass stacking wall - Aleandra

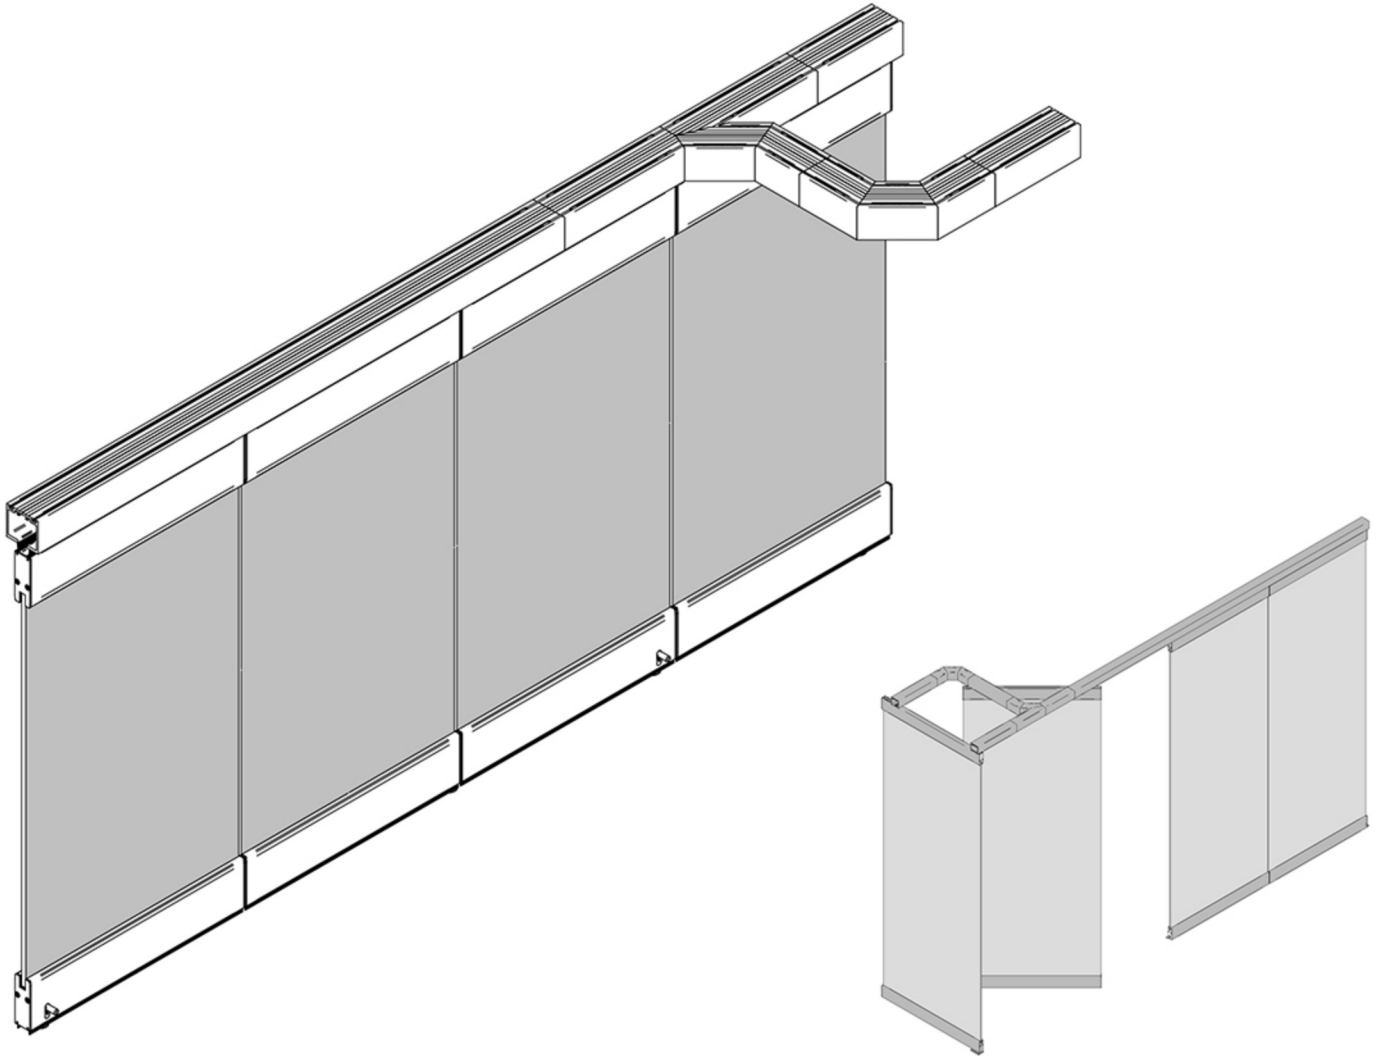

ASSEMBLY INSTRUCTIONS




MAX
150 KG



min. 550
MAX 1200



MAX
3500




∞



10 - 10,76
12 - 12,76 mm







Required tool

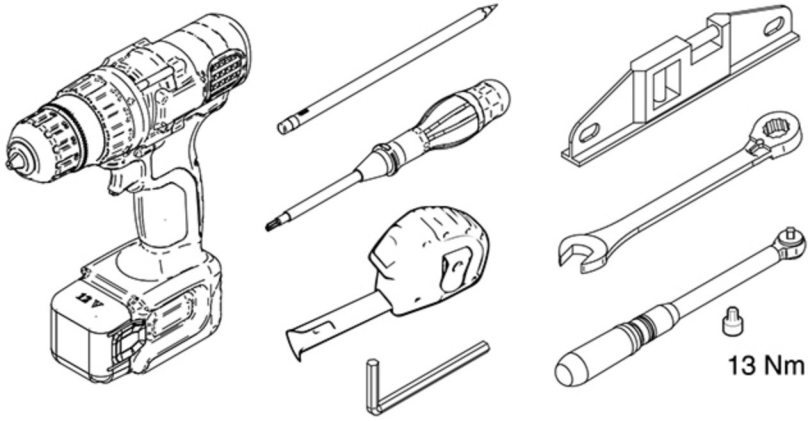

Clean the glass and profile before installing



We recommend our Glass cleaner Hendrika 7791180100000

Components

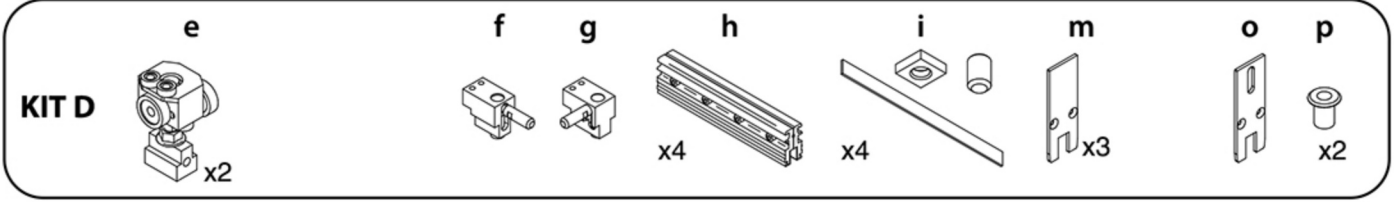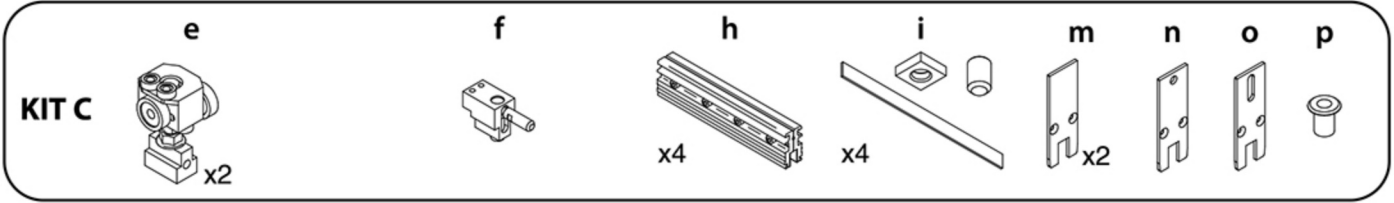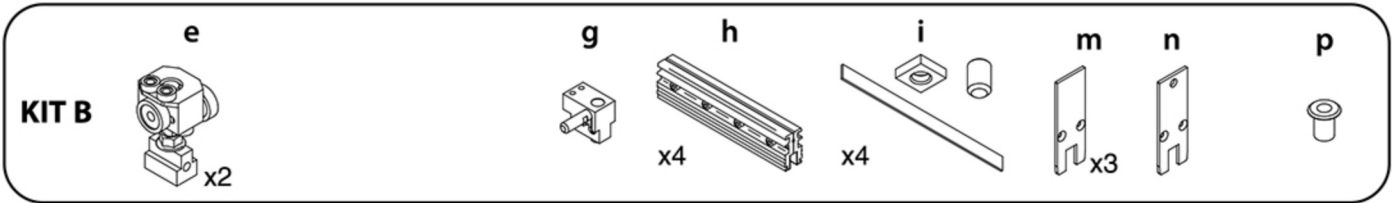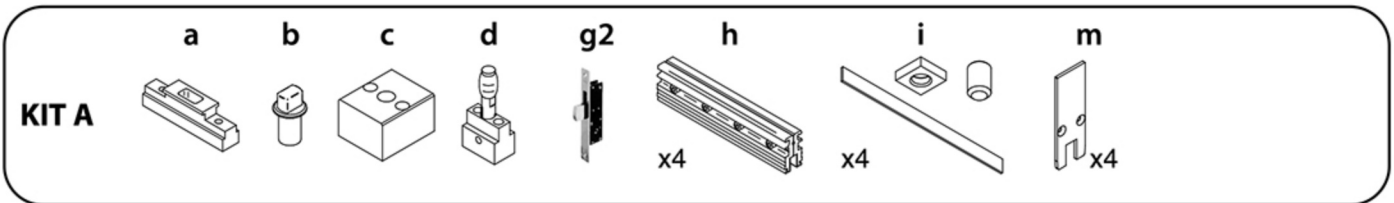

PROFILES




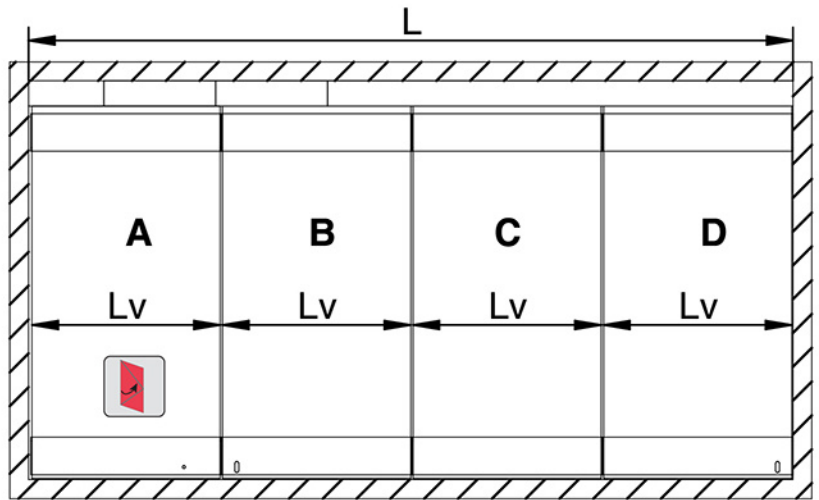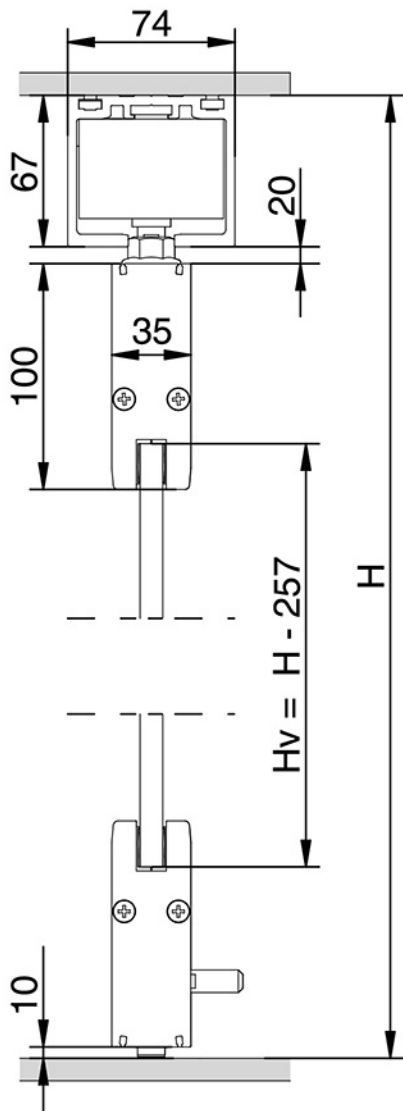


$$H_v = H - 257$$

$$L_v = \frac{L - 6}{N} - 6$$

N = number of panels

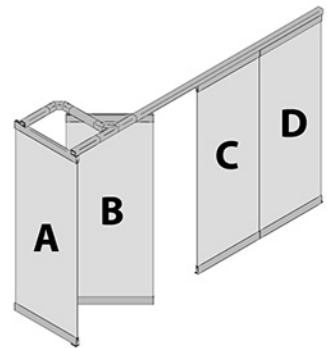

PROFILES

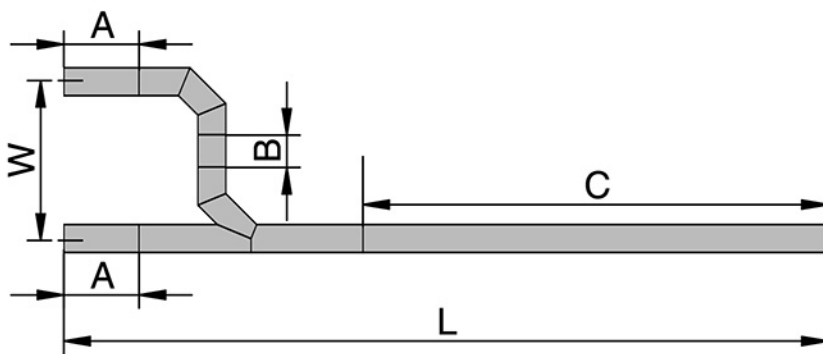

$$A = N \times 70$$

$$W = L_v - 140$$

$$B = W - 417$$


$$C = L - A - 594$$

Machining clamps profile




LP=LV


Panels B - D

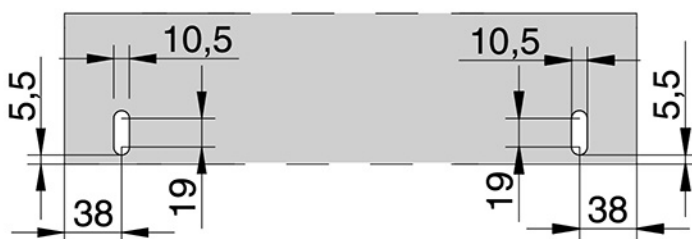


Panel A

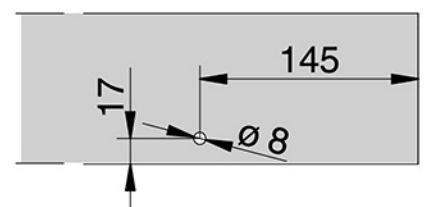



1a Profile assembly

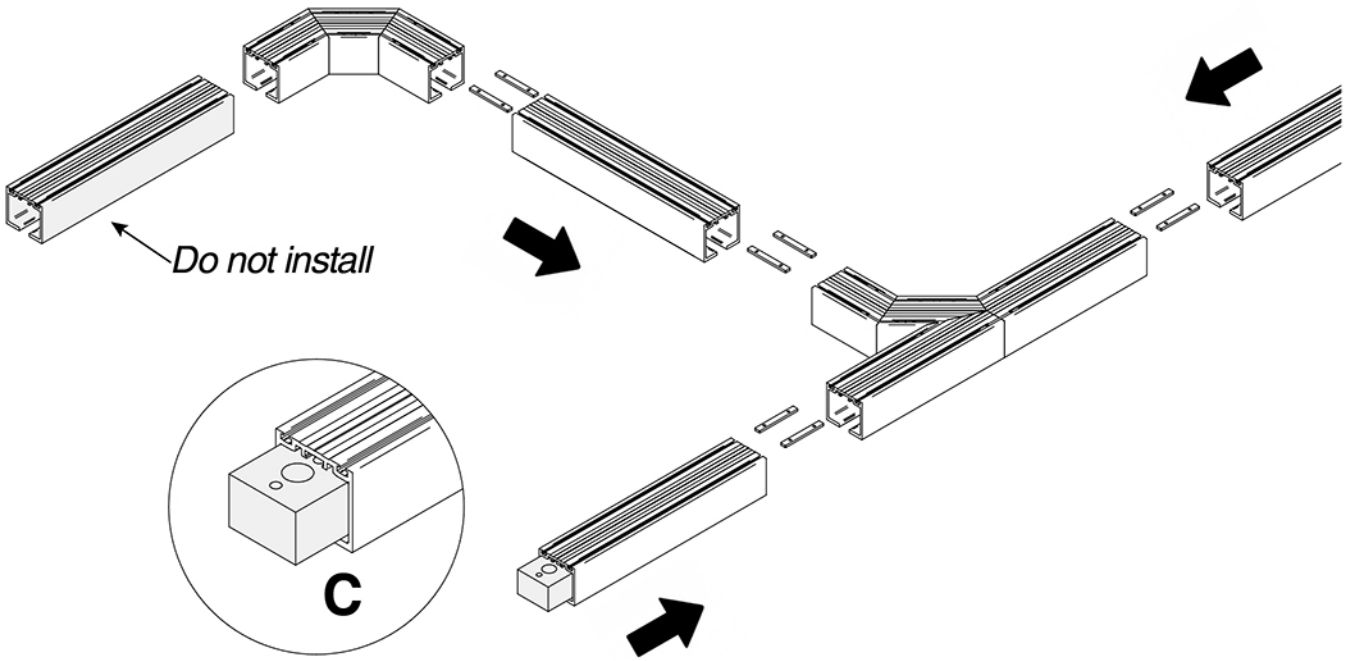

1b Profile fix

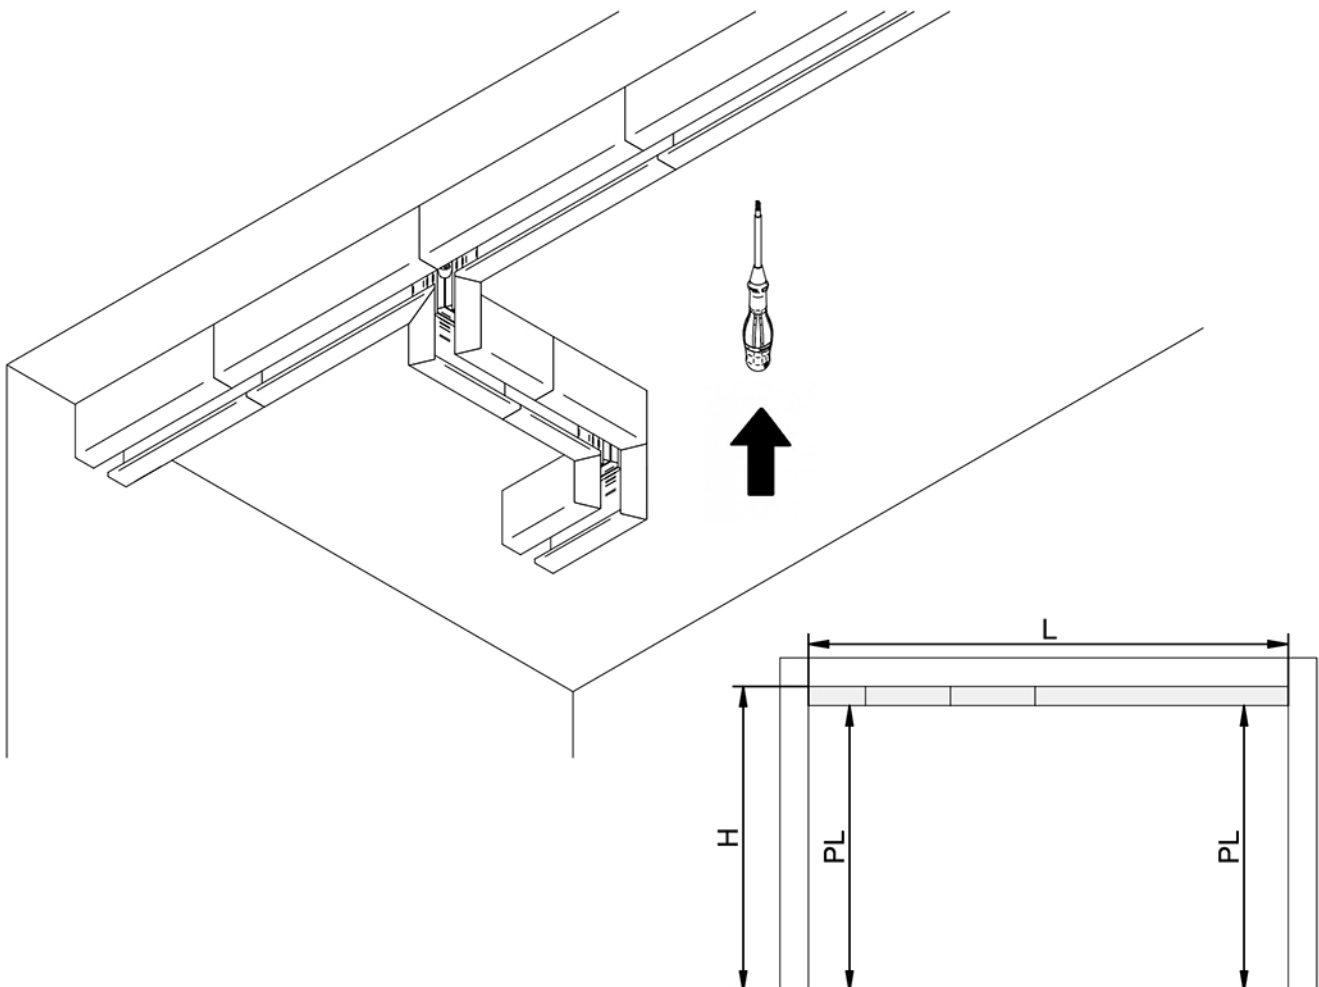

2 Assembly clamps profile

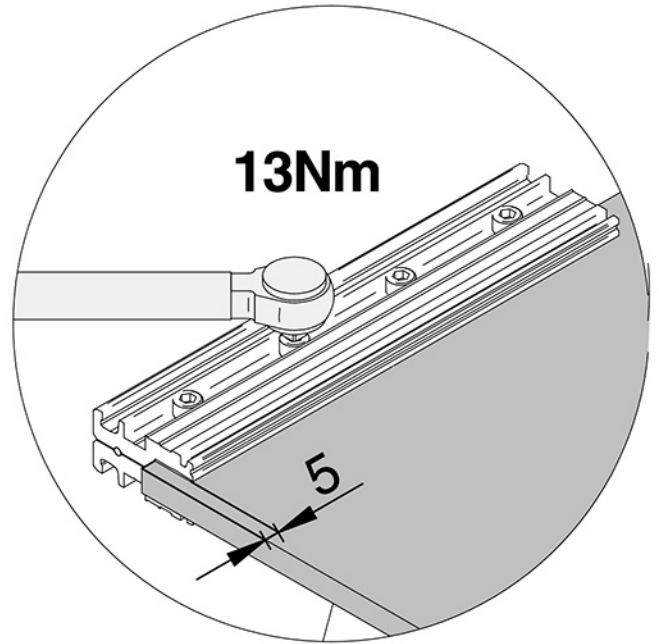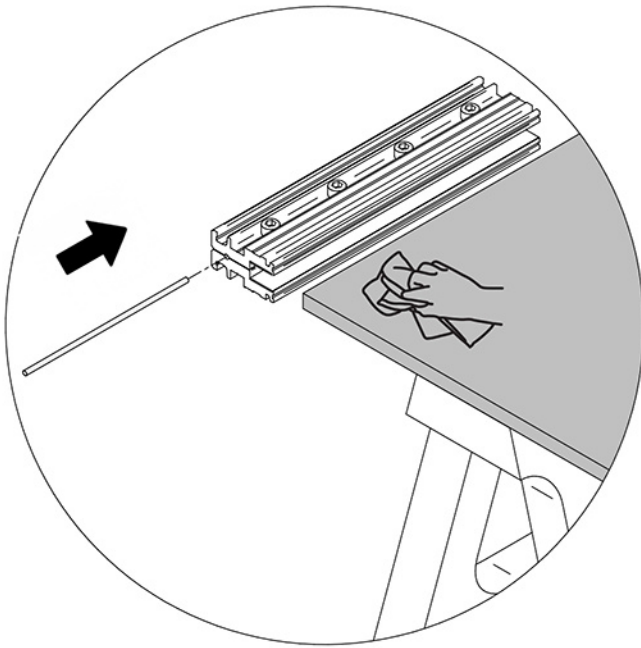


Insert the spacer in the clamp

Place and screw the clamp on the clean panel




Ø 3	10 mm
Ø 3,5	10,76 mm
Ø 4	12 mm
Ø 4,5	12,76 mm

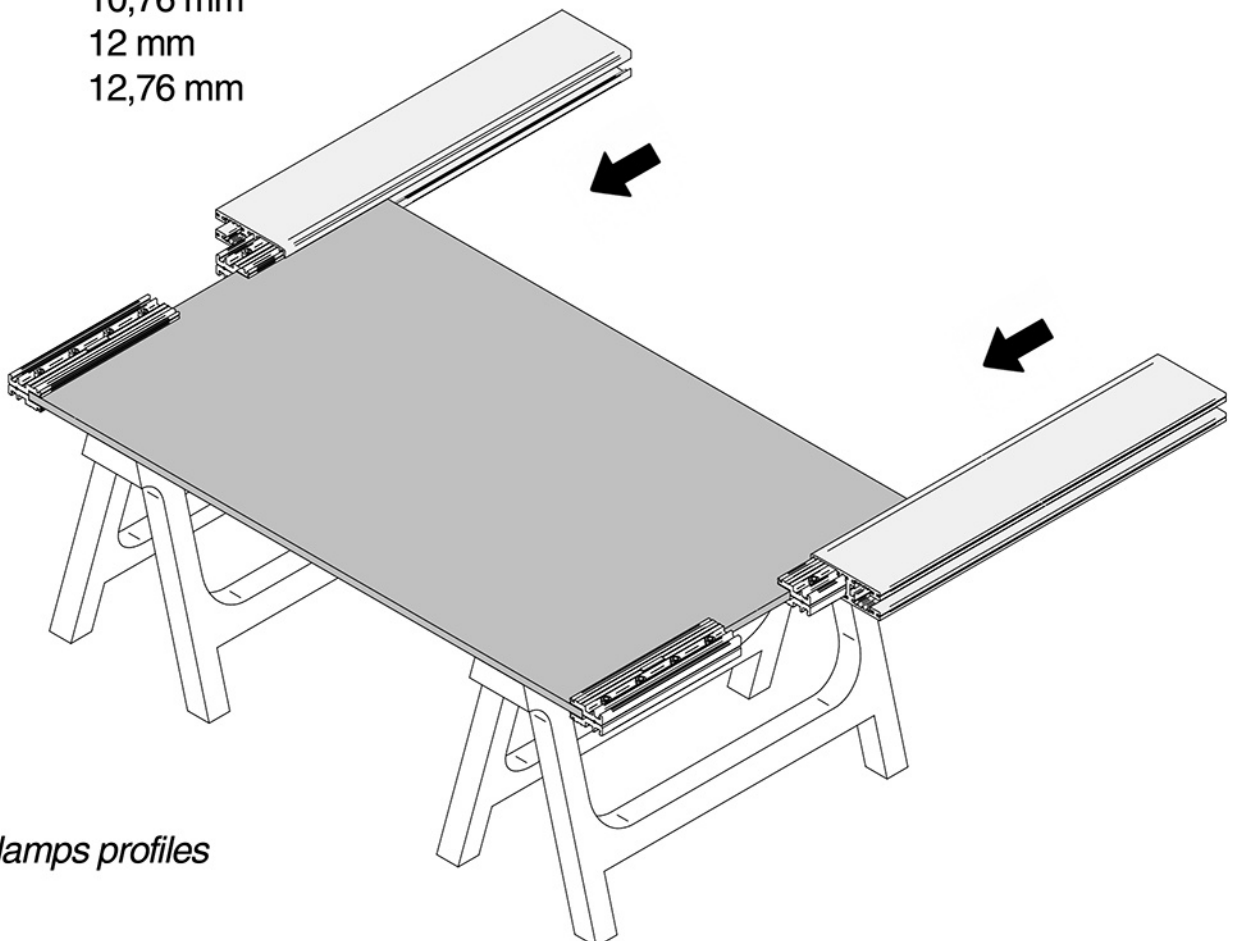


Insert clamps profiles



3 Tightening clamp profile

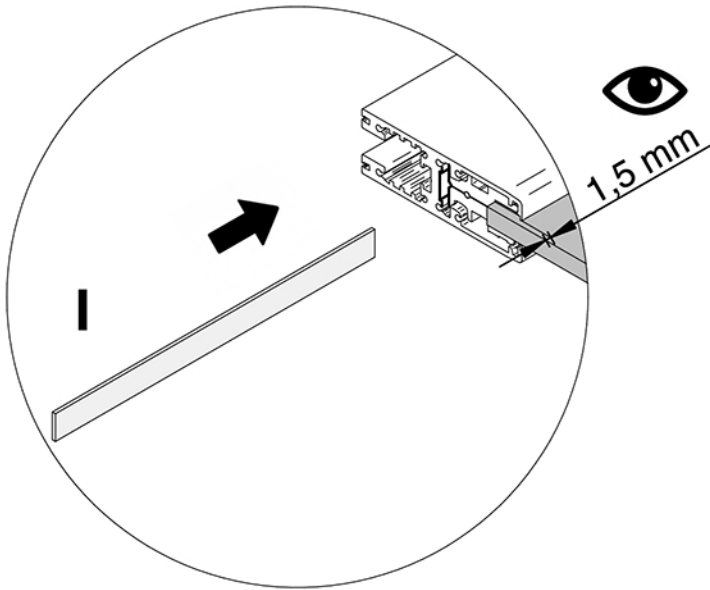


Insert the platelet in the clamp profile

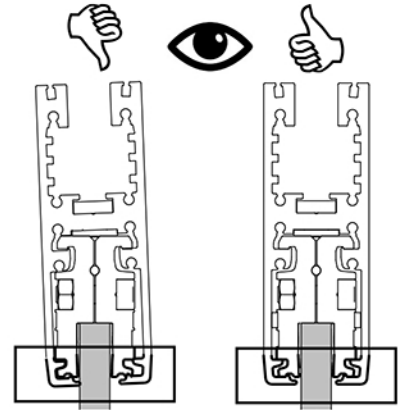









Verify the right position of the clamp

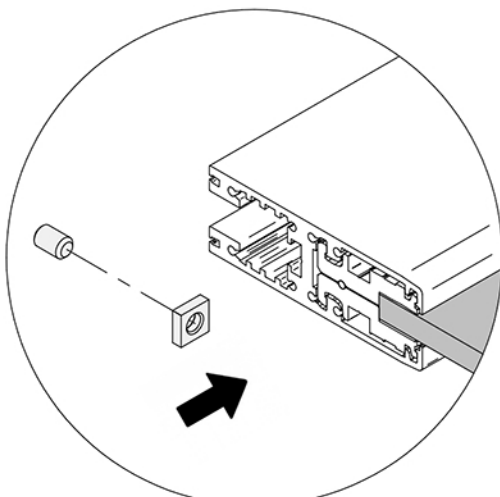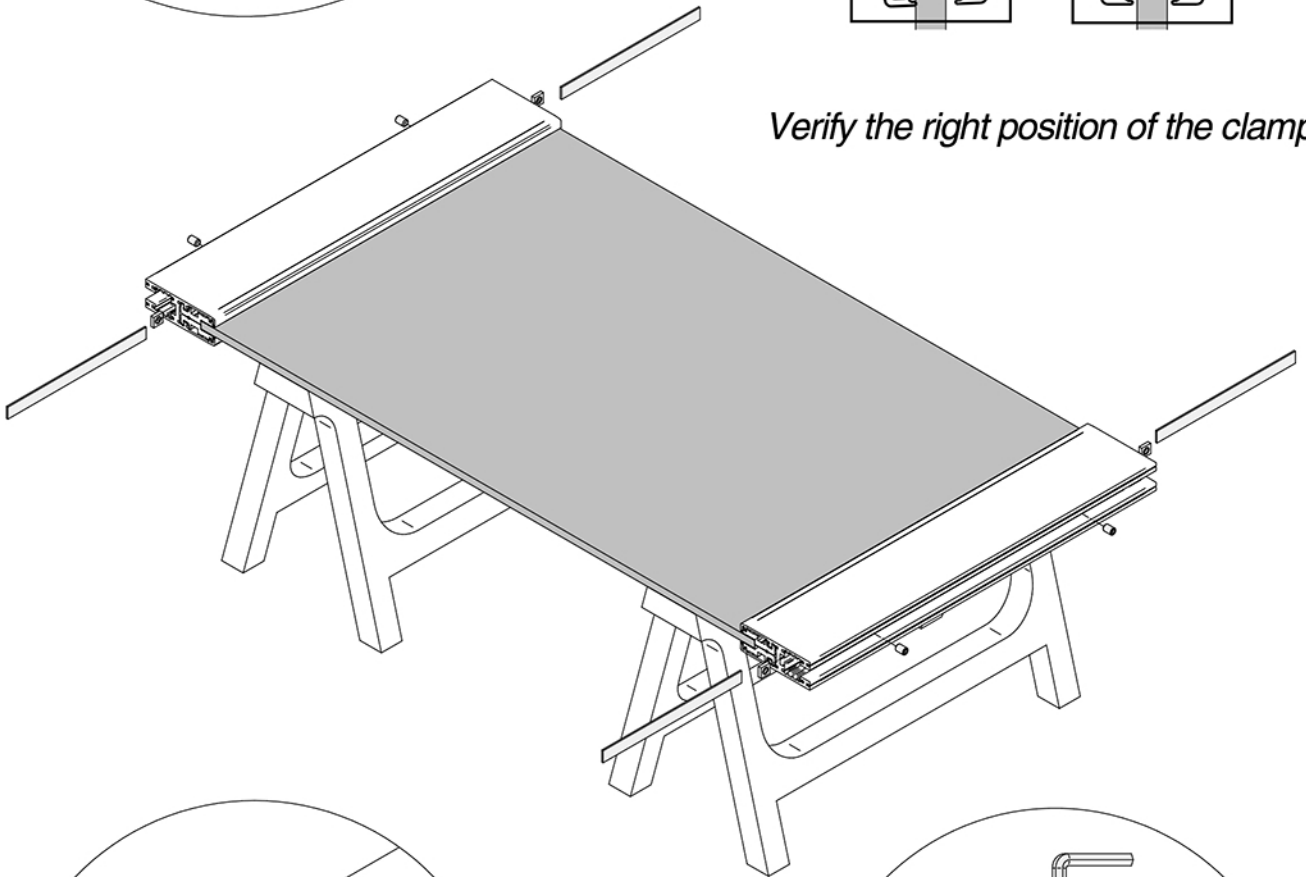










Screw

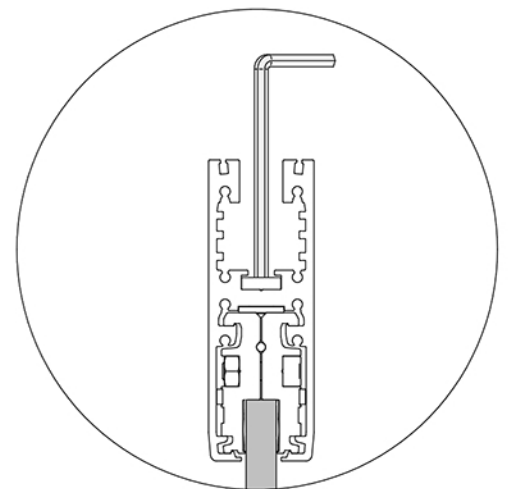









4 Assembly panel "D"

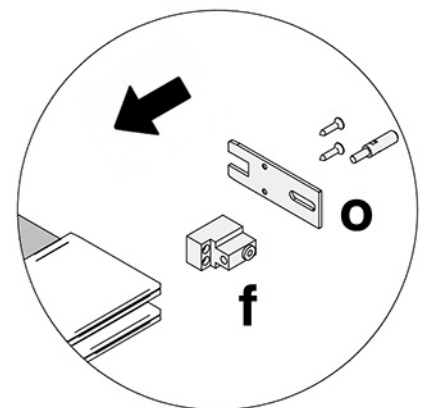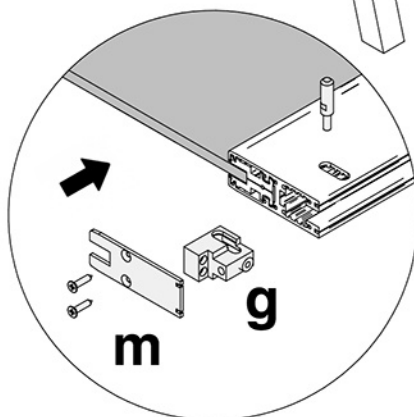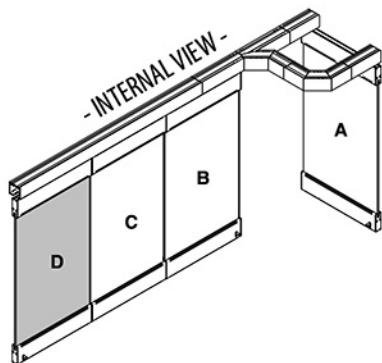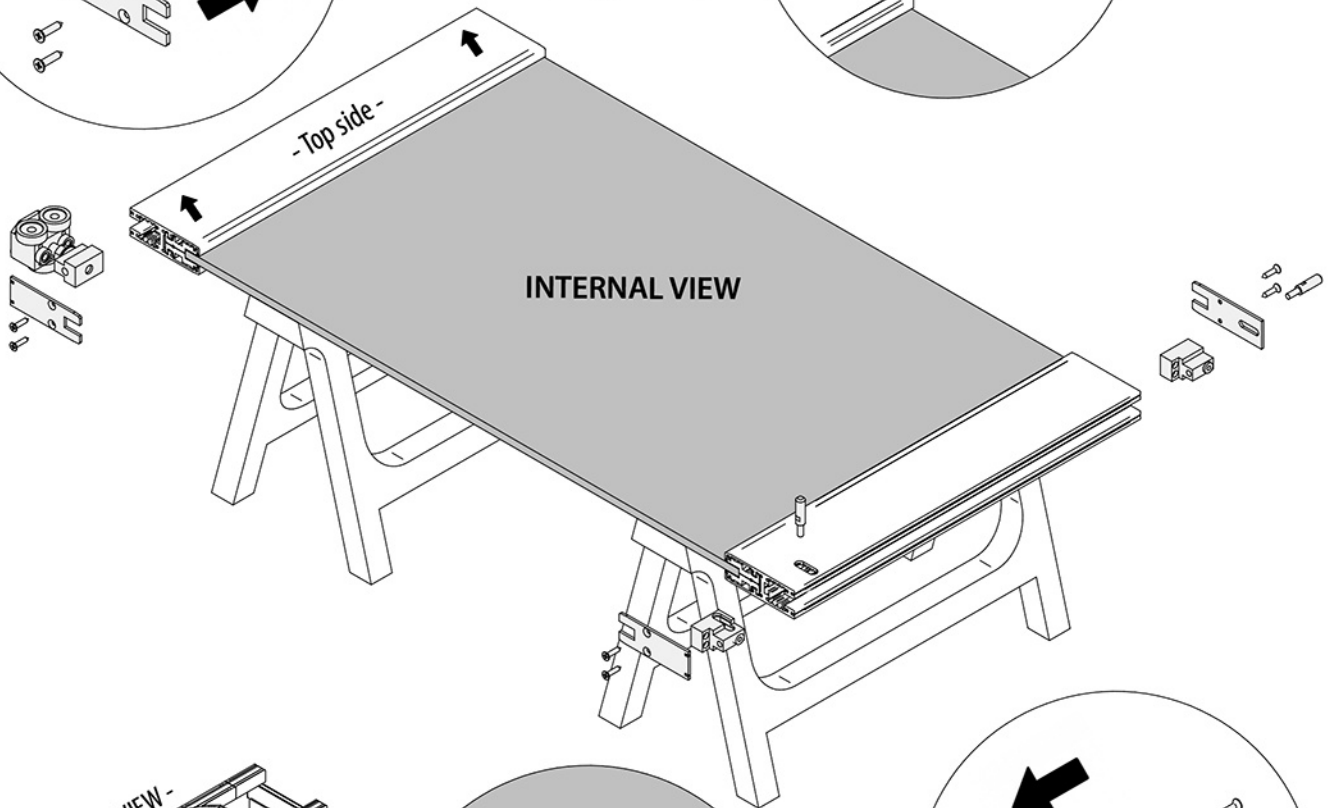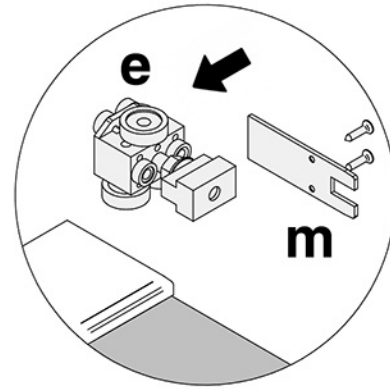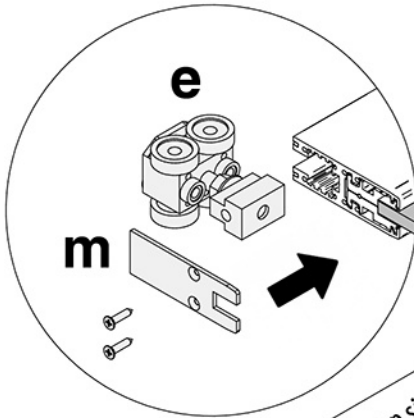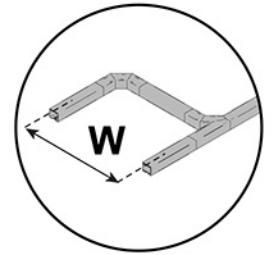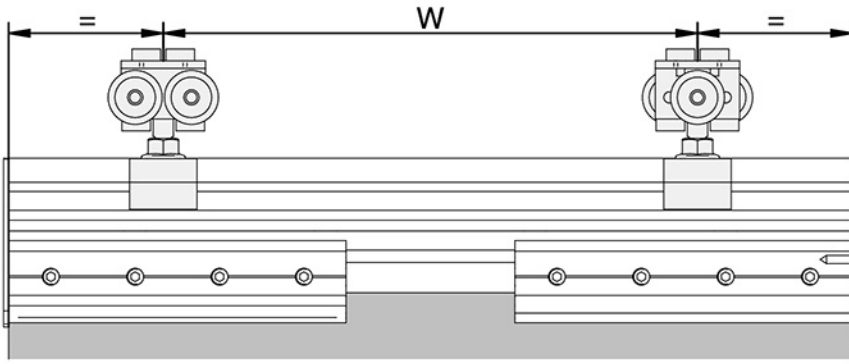








5 Assembly panel "C"

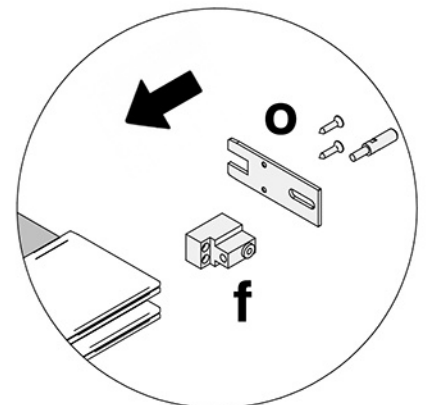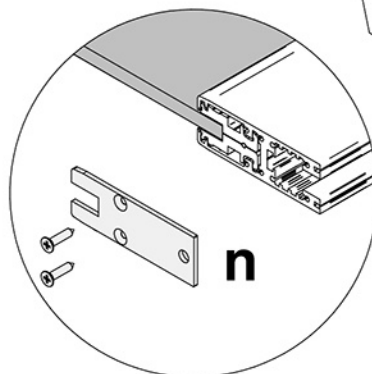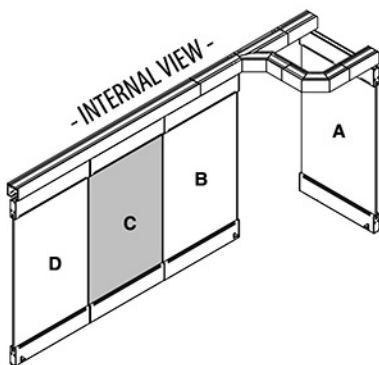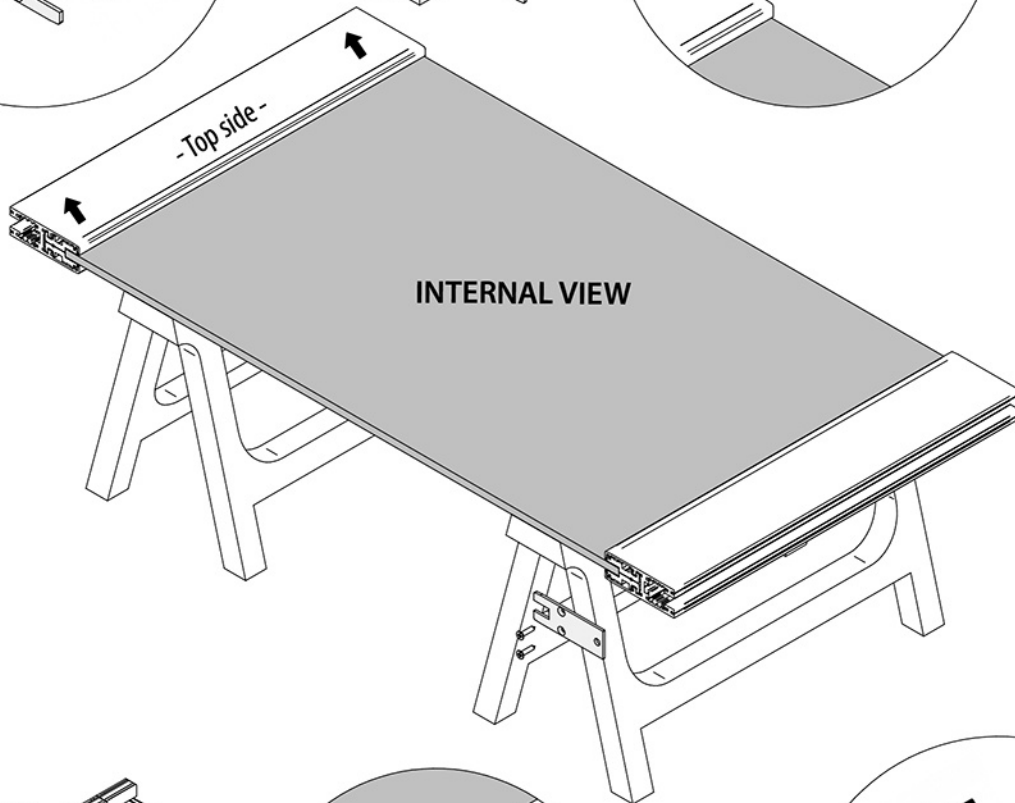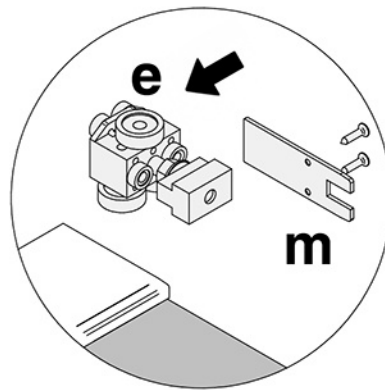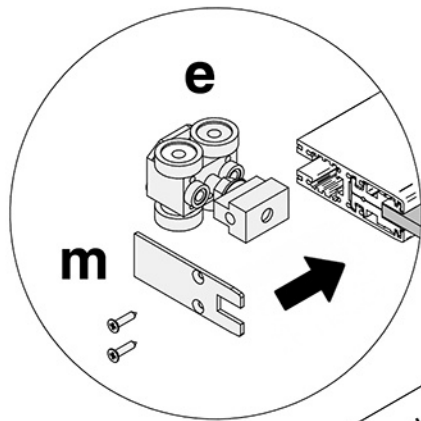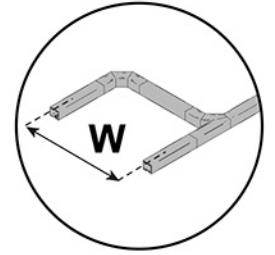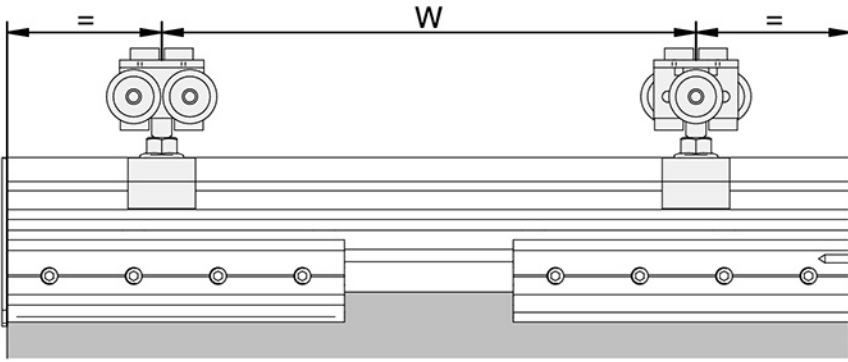


6 Assembly panel "B"

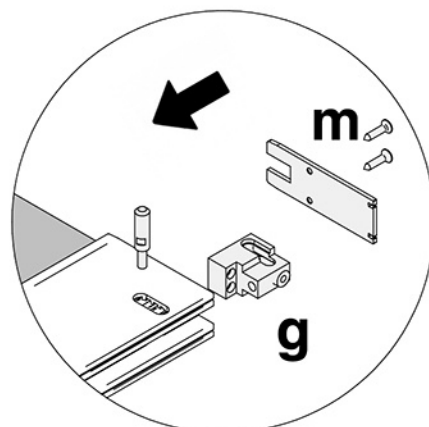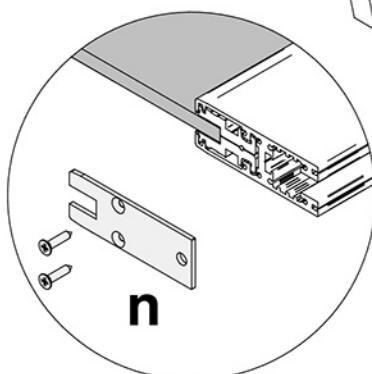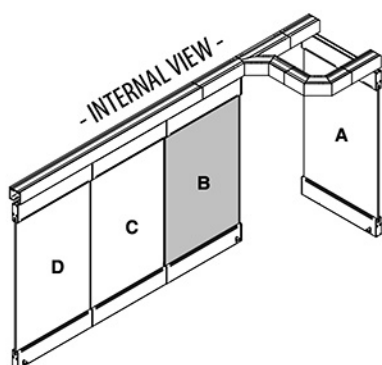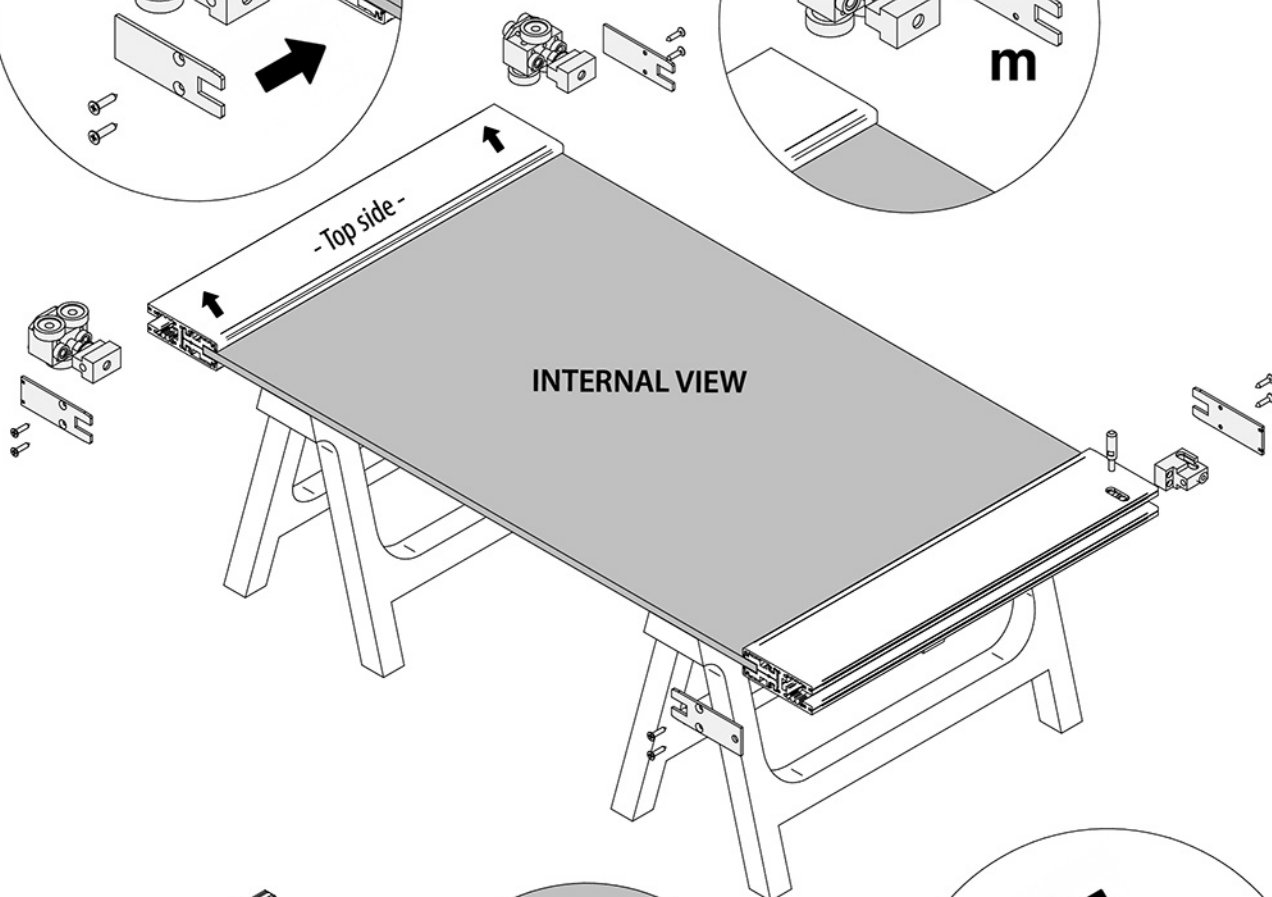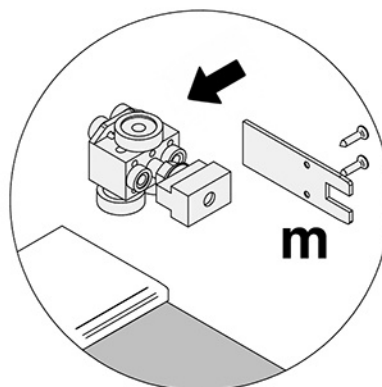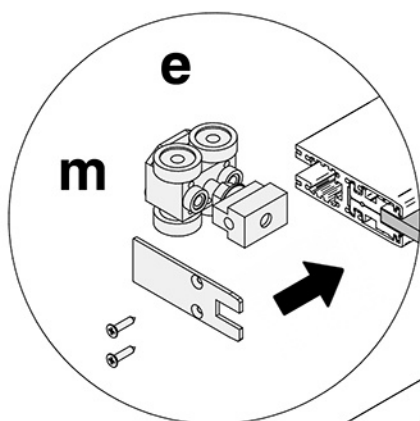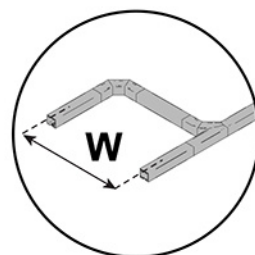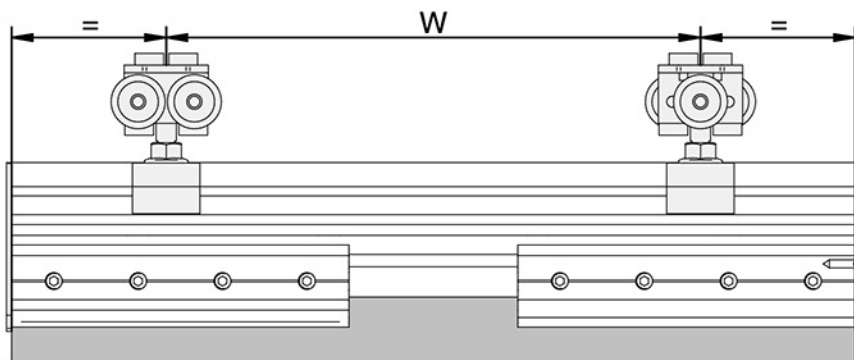


7 Assembly panel "A"

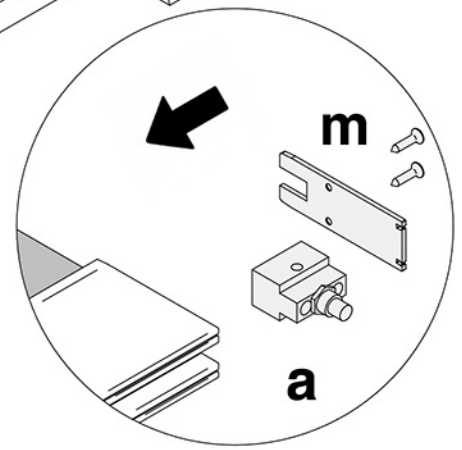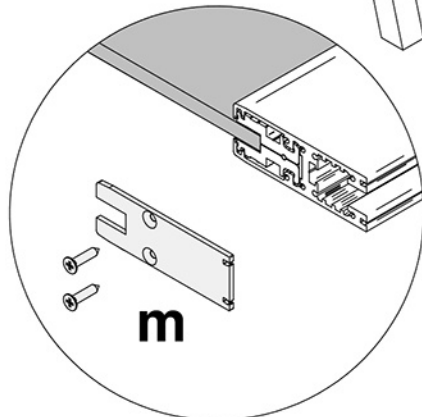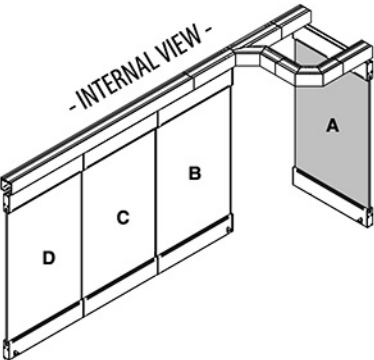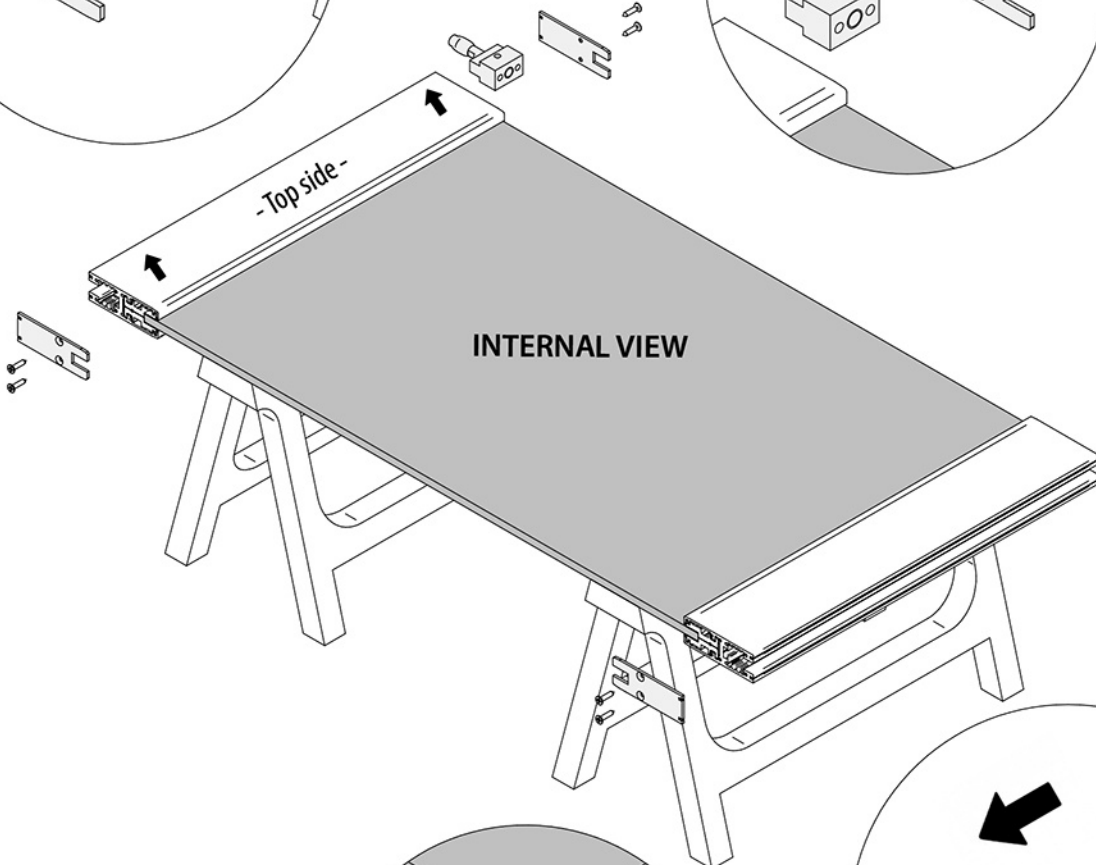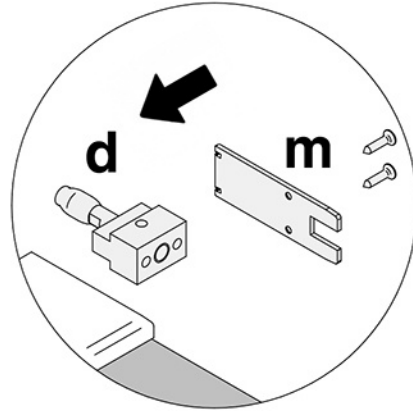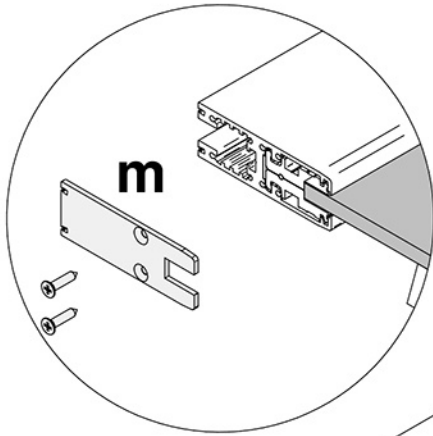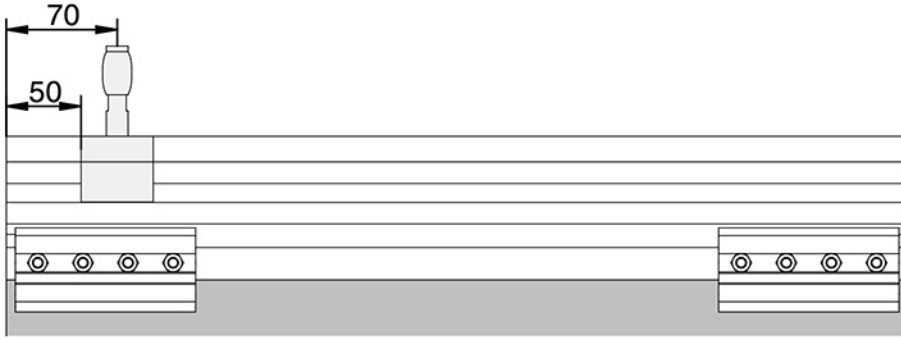


12 Adjust and screw the trolley

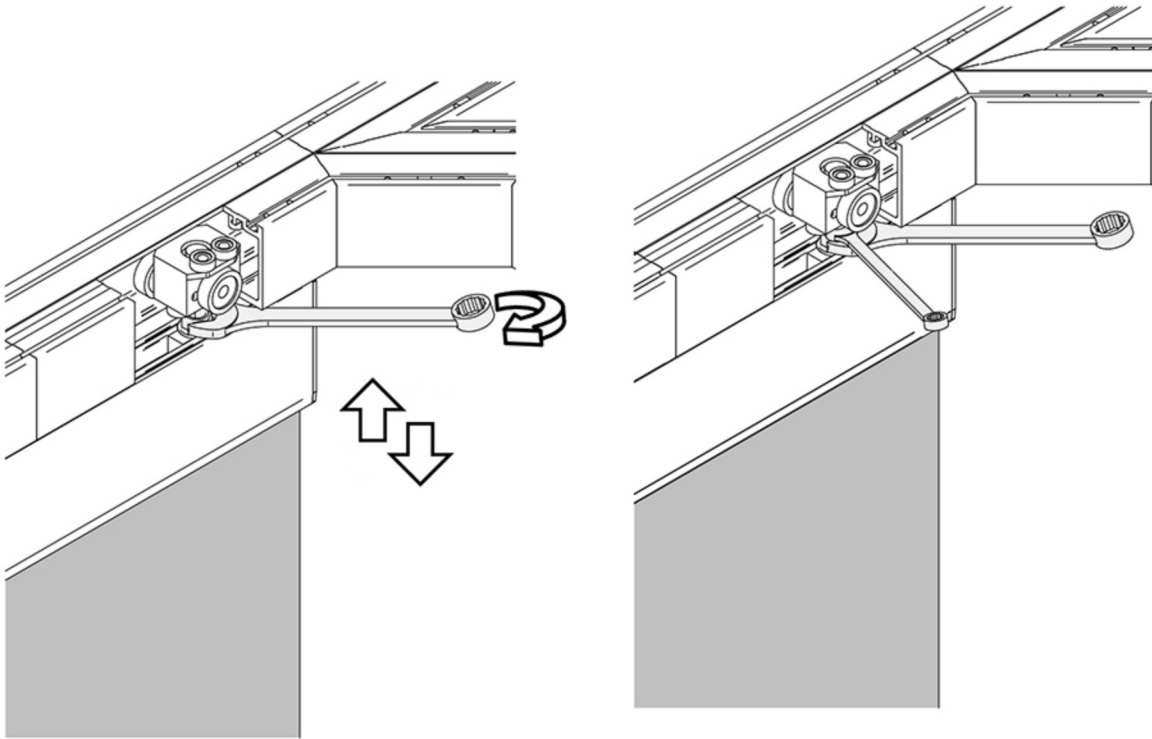

13 Assembly brushes and seals

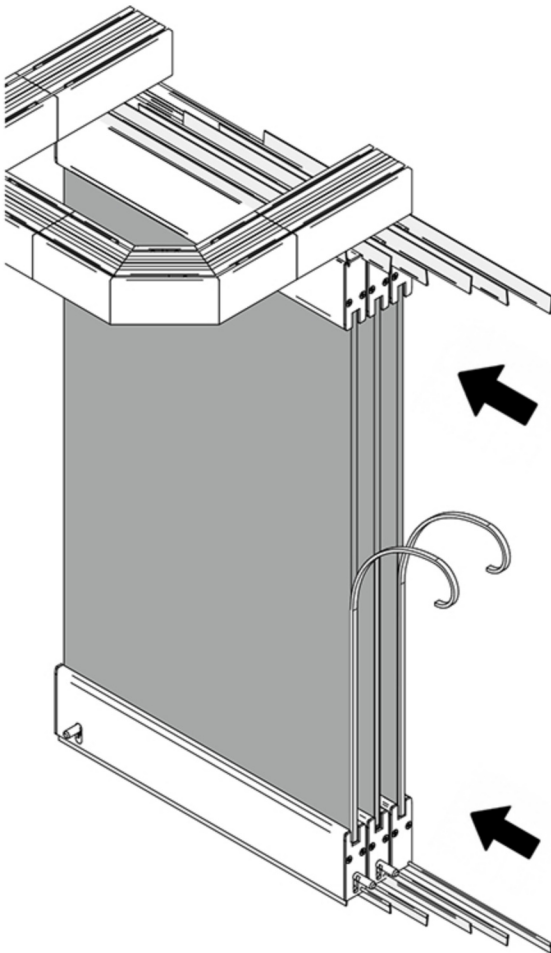

20 mm



10 mm




Clean with our glass cleaner Hendrika
779118010000




Do not install on cold glass


8 Panels mounting

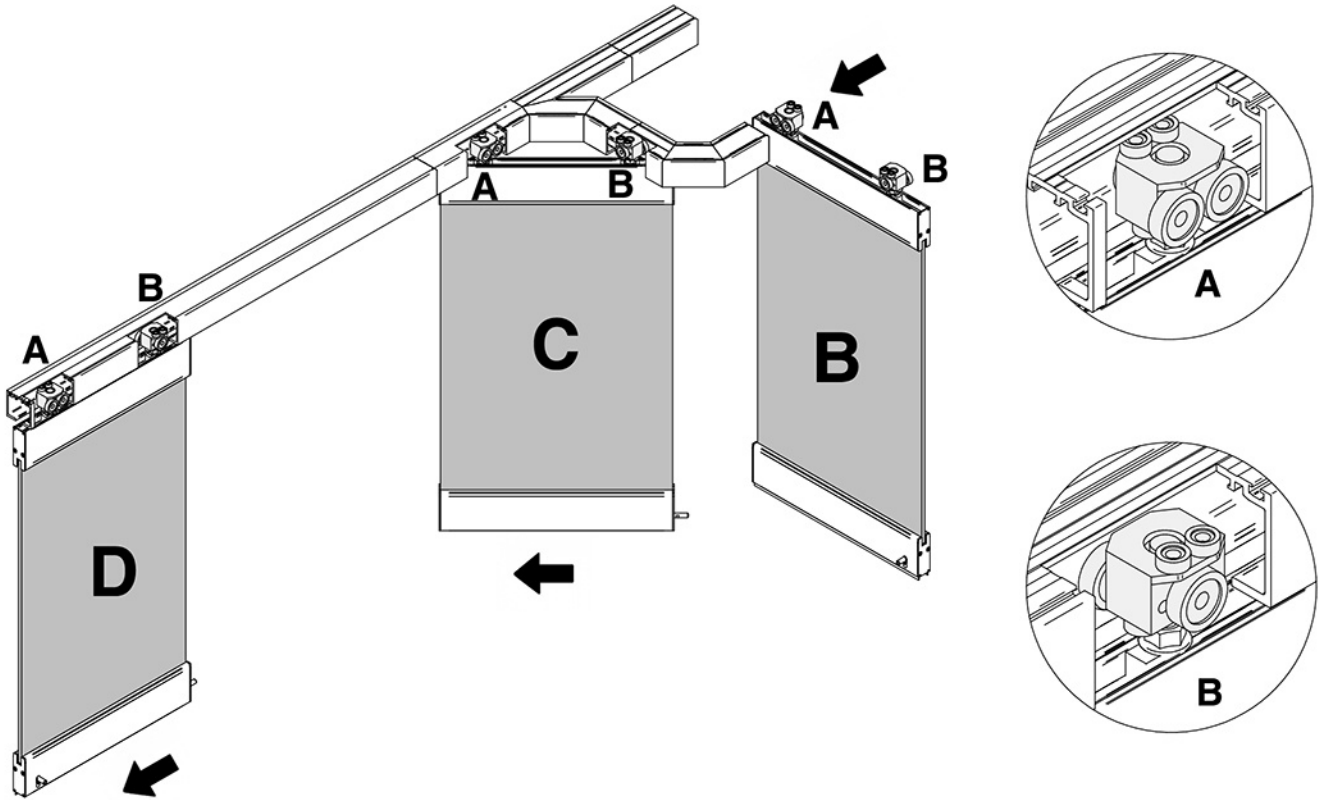




9 Section profile fix

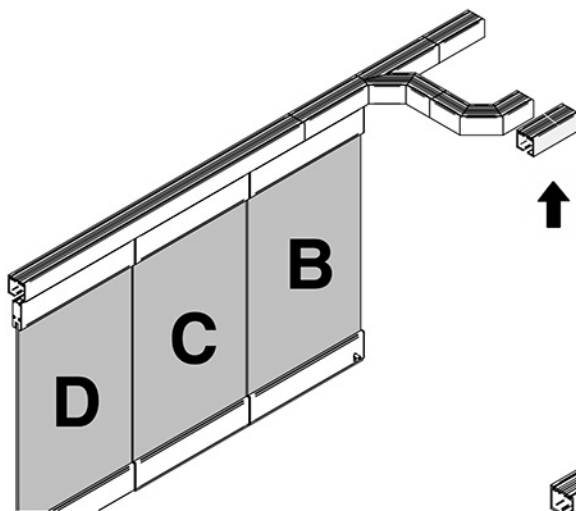



10 Fix the switch component




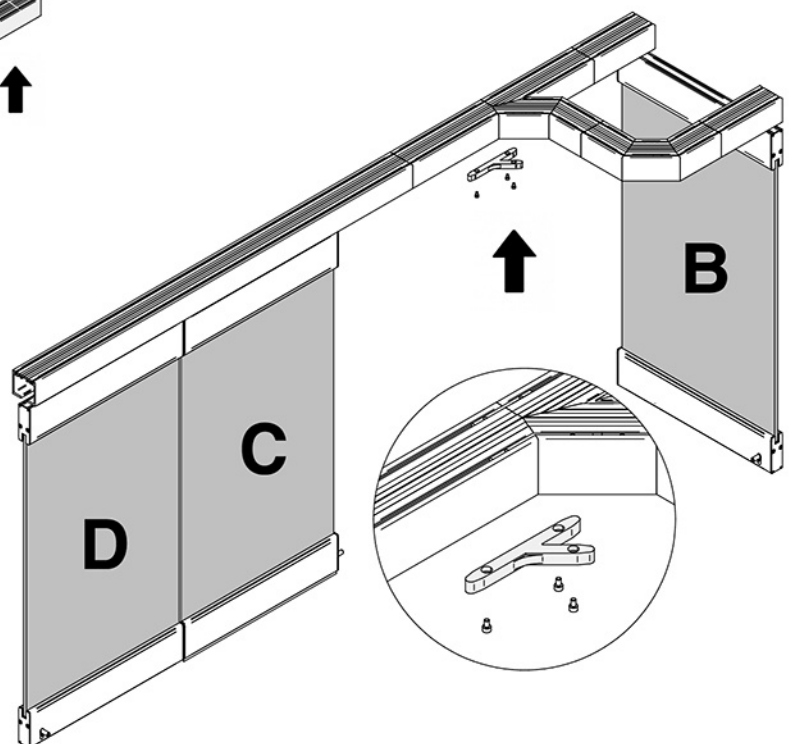


14 Assembly floor bush

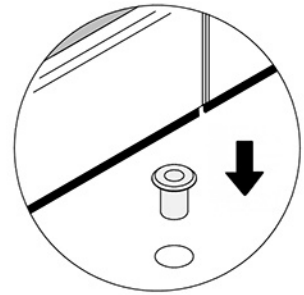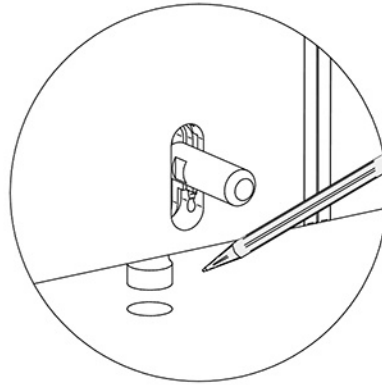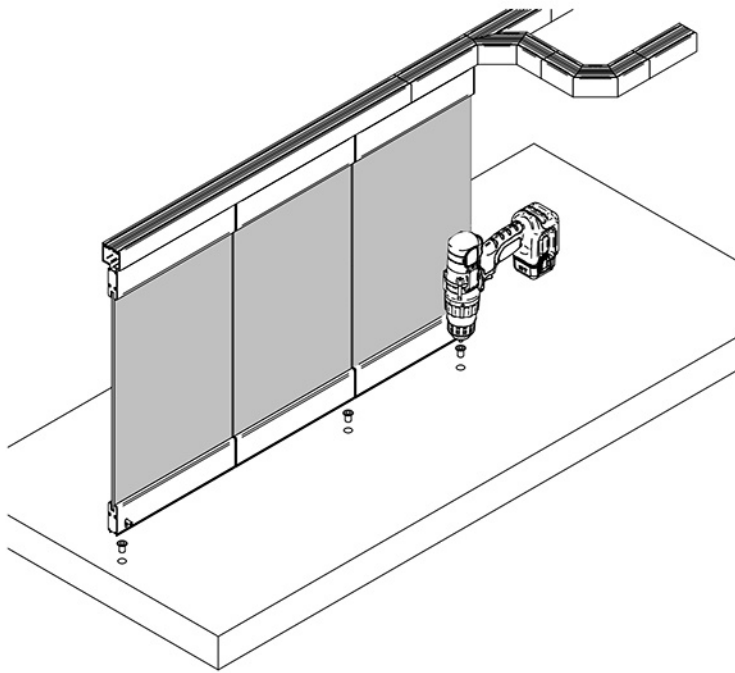


15 Panels mounting "A"

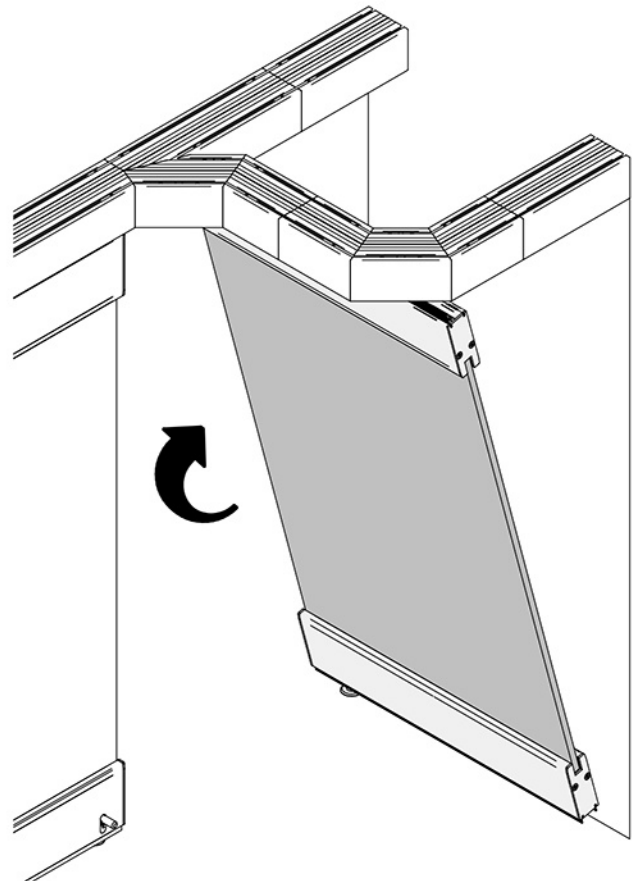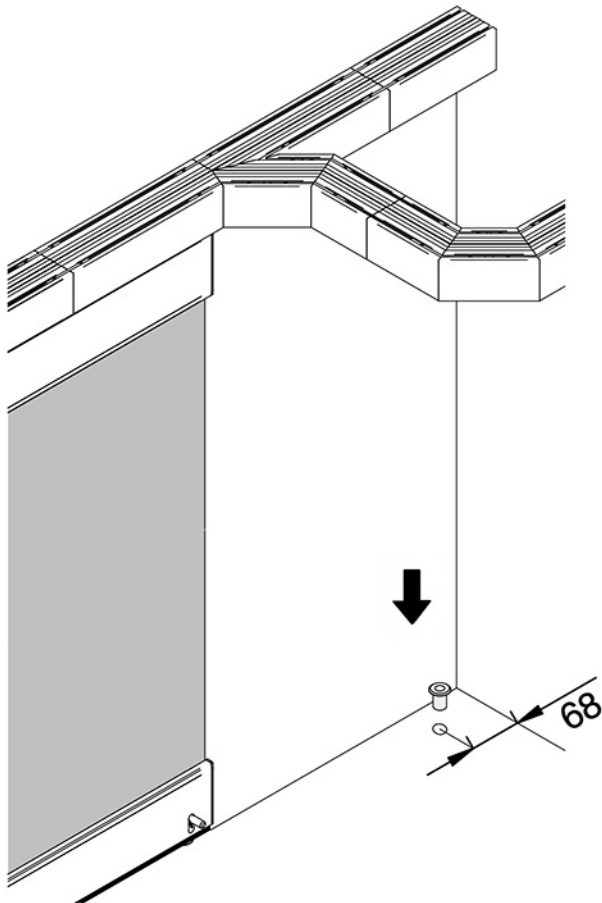

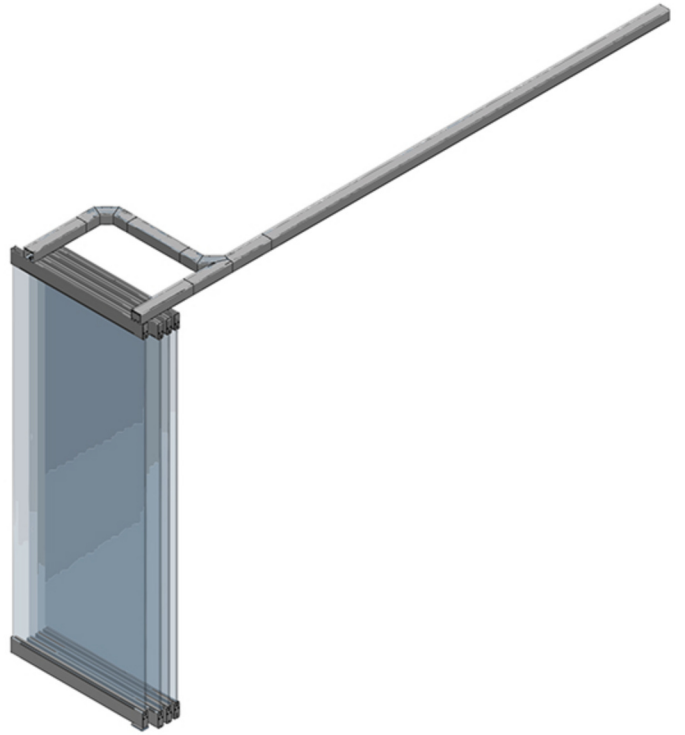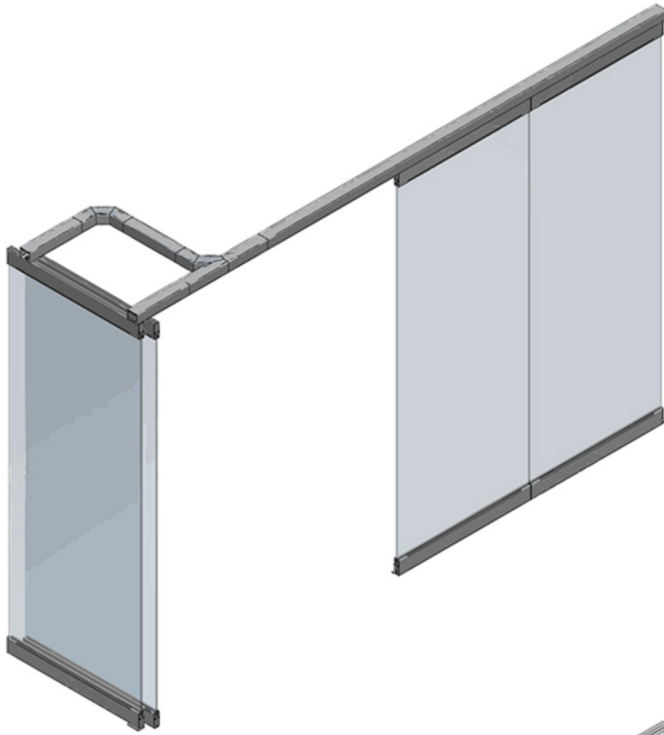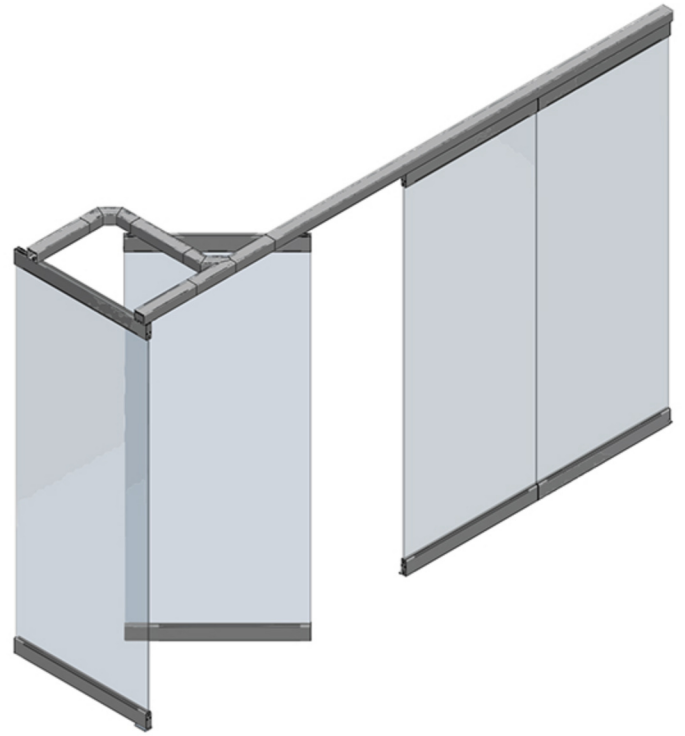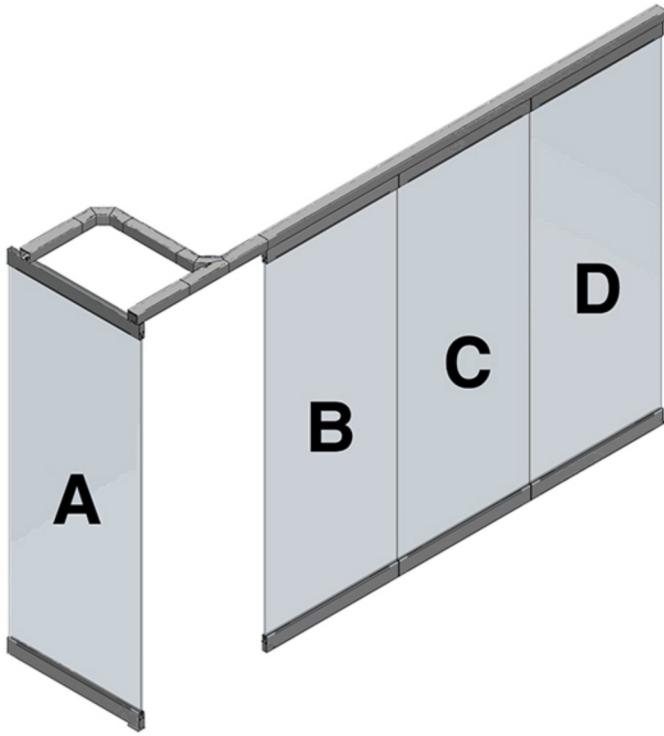

"A" + "B" + "D" + ∞ "C"

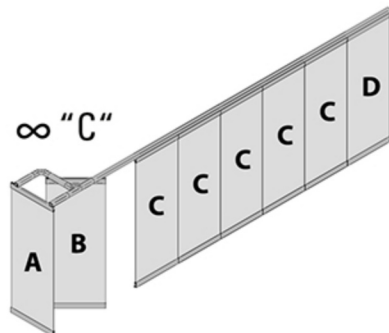

G-FITTINGS GmbH

Marie-Curie-Straße 16-18
46446 Emmerich am Rhein

T +49 (0)2822 962 0

E sales@g-fittings.com