

## ASSEMBLY INSTRUCTIONS

Simultaneous telescopic system  
3 Panels / with fixed glass



120 KG



8-10 mm



min. 500




65/90/130 kg  
optional



NO glass-machining  
needed

Required tool

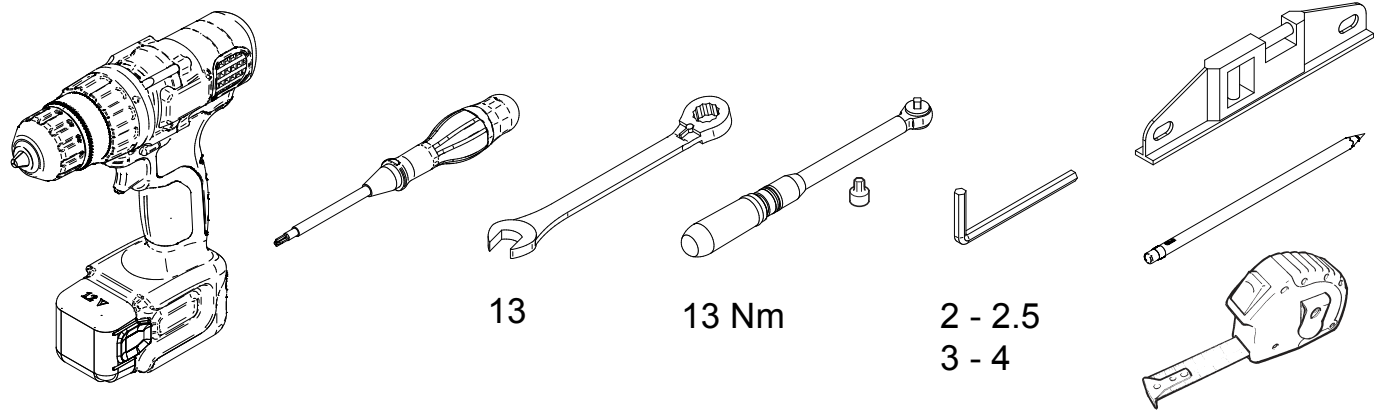

13

13 Nm

2 - 2.5  
3 - 4




Clean the glass and profiles before installing.


Components




M105/54



PRK-CAR

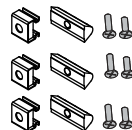

PRK-FIXKIT

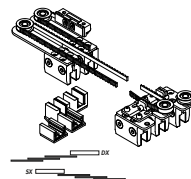

PRK-TLS3

**Stop&Slide**  
*optional*



Minimum width panel



65 kg




90 kg




130 kg

580 mm



PRK1SES65

640 mm



PRK1SES90


700 mm



PRK1SES130

PROFILES



PRK-TOP	PRK-DIS	PRK-FIX	PRK-COH	87/X4
				Optional

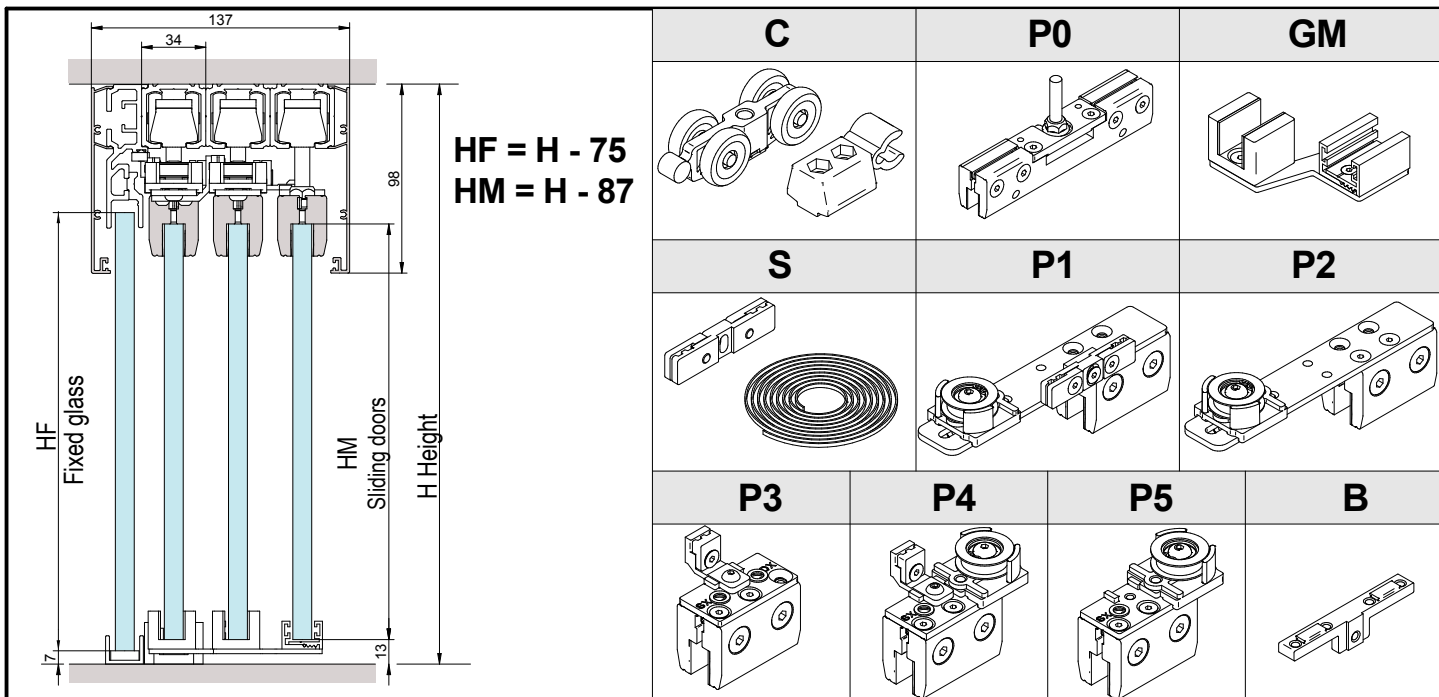



with fixed glass

without fixed glass


**Flush mounting**

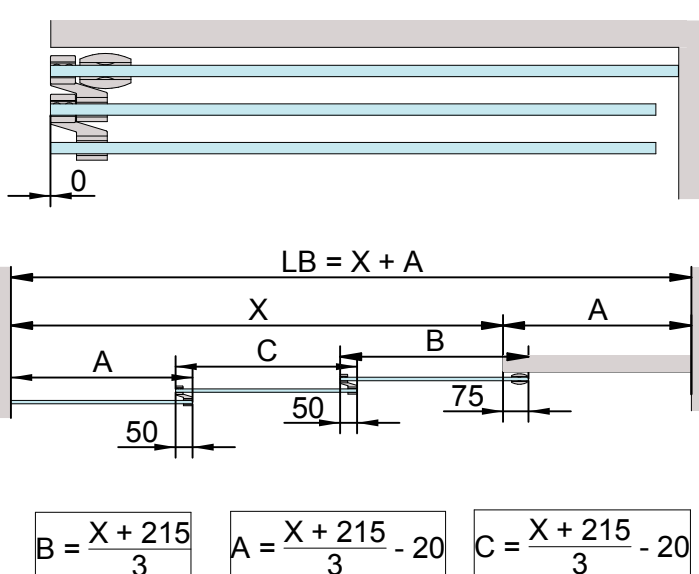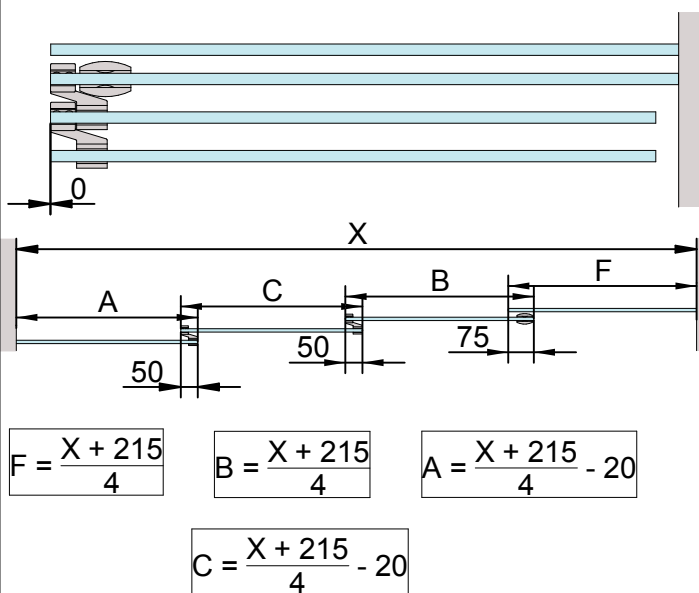

**In case of handle**

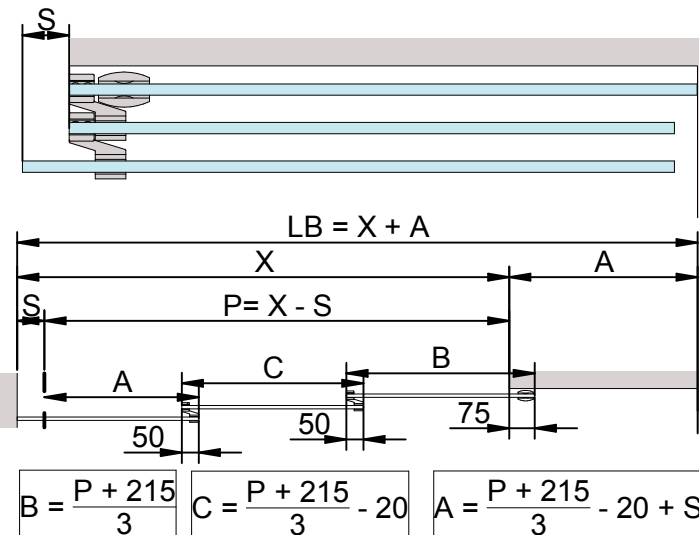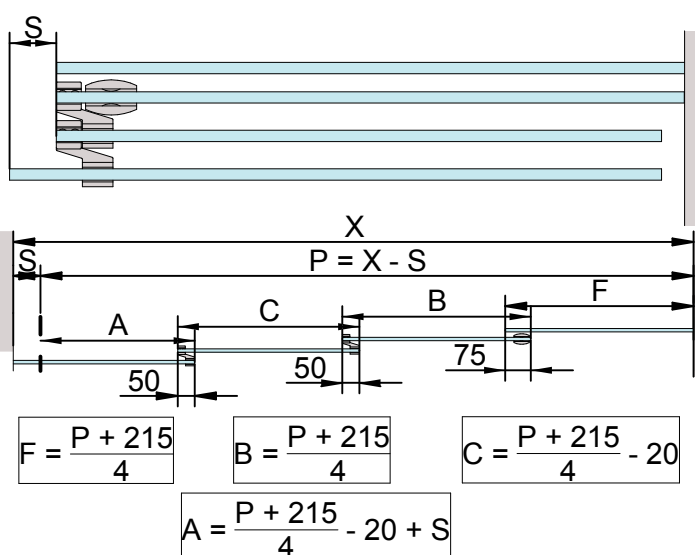


**1a**

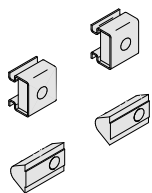

**1b**




**1c**

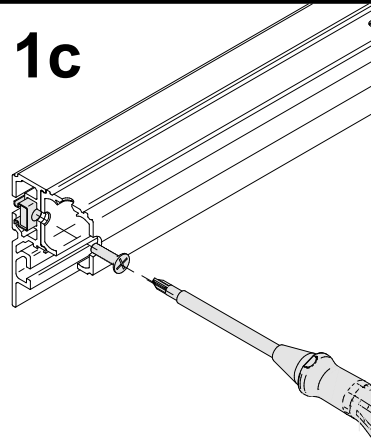

Clip top track and fixed glass profile with the cage nut

**2**

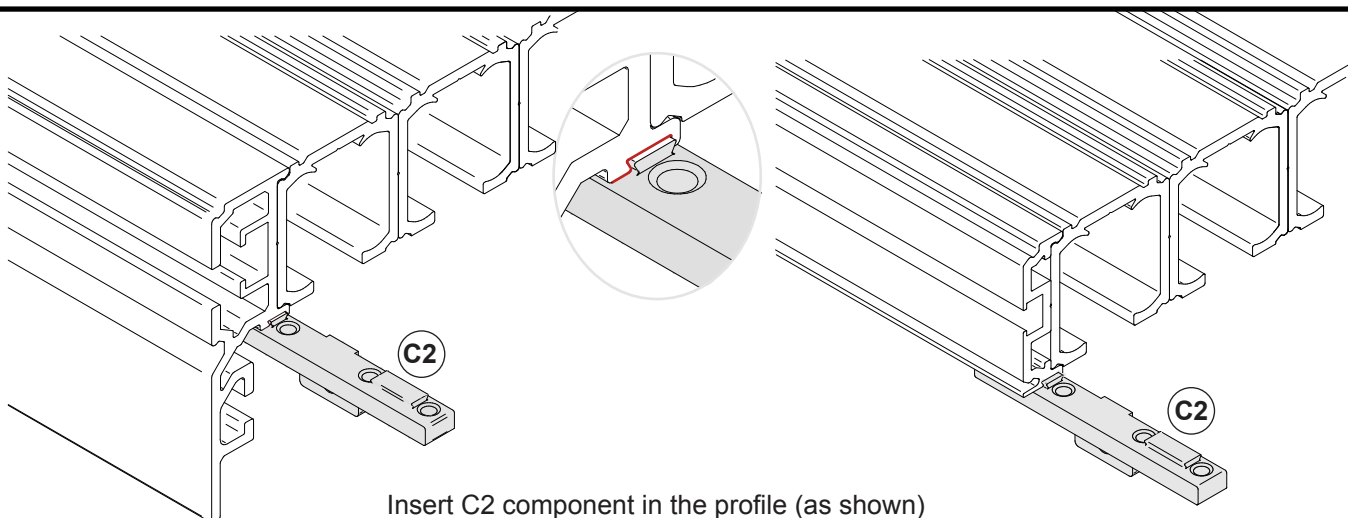

Insert C2 component in the profile (as shown)


**3**

### INSERT SLIDING COMPONENTS

Insert trolley/Stop&Slide and stops in top track as shown




Clean before inserting  
the trolleys

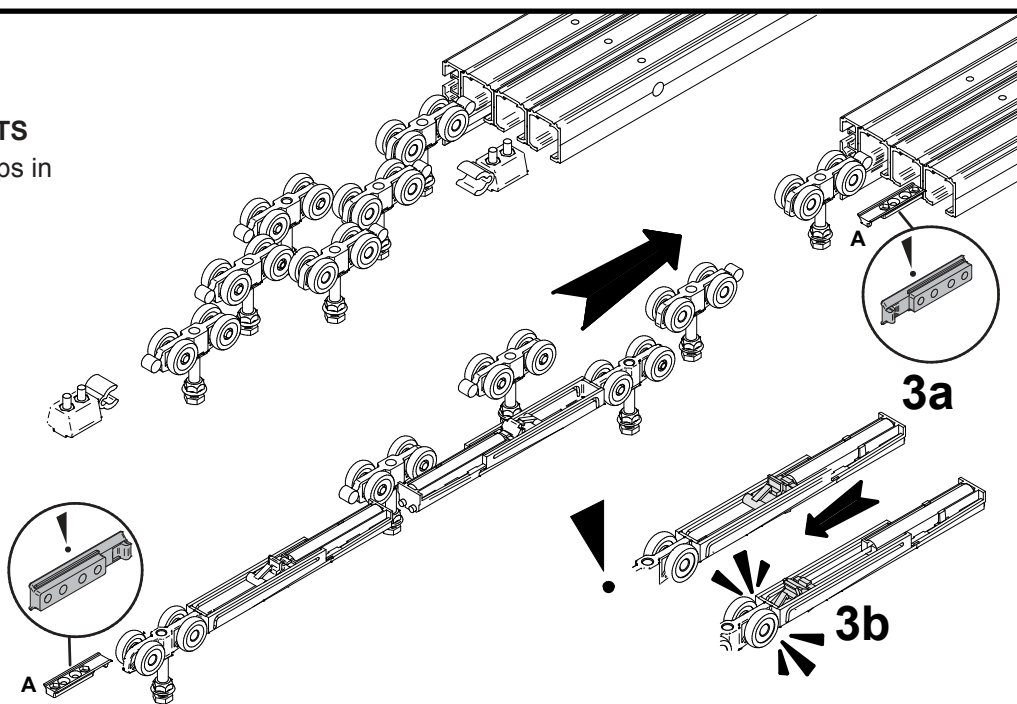

### LOAD STOP&SLIDE


Press the hook from position 3a to 3b since it clicks.

## Right side opening

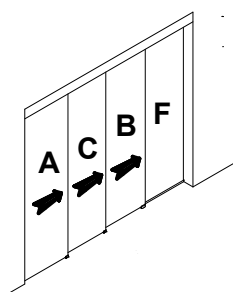


Left side opening ➔ pag. 7


### ASSEMBLY FIXED GLASS

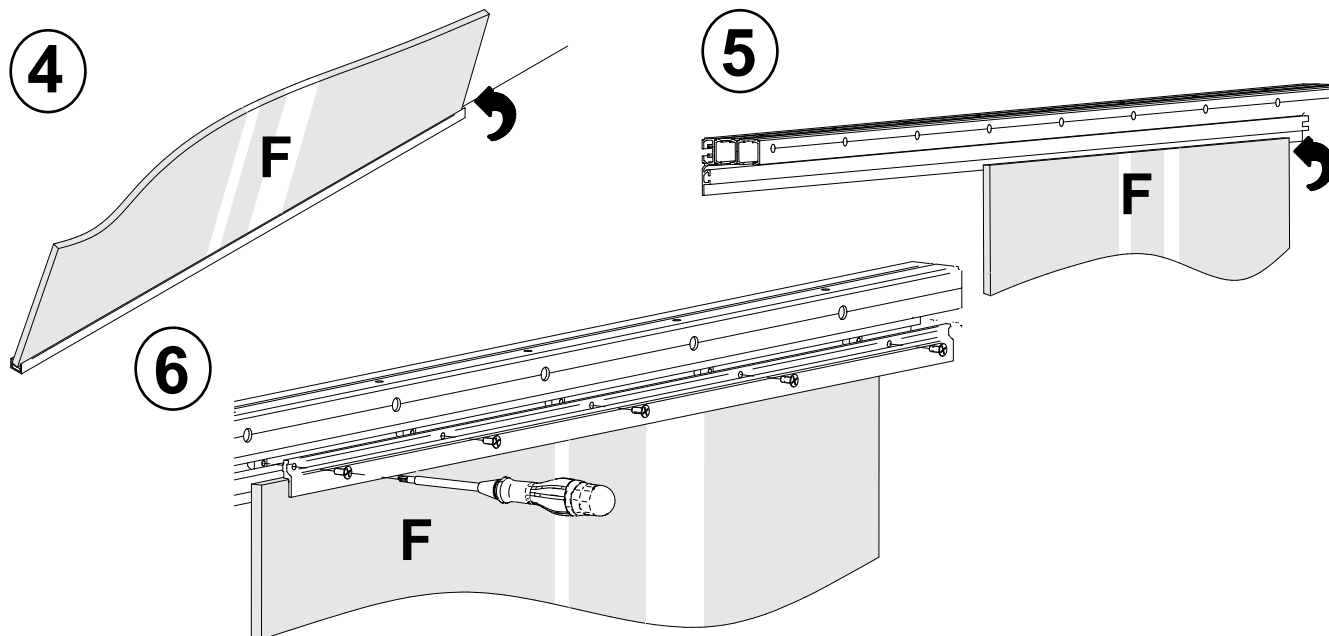

## 7 Install the lower guide 25 mm to fixed glass

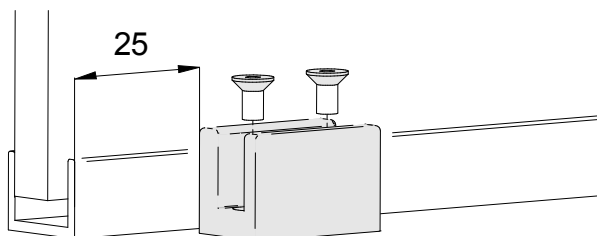

## 8

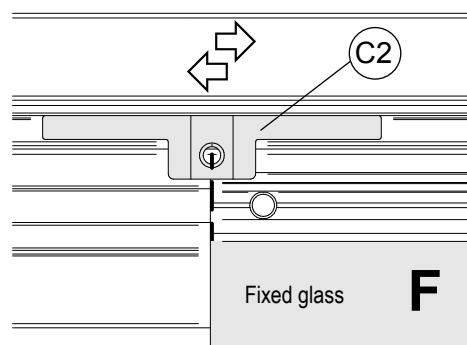


Place C2


## 9

### EASY™ Clamps assembly


Choose the spacer according to the thickness of the glass and match in the clamp

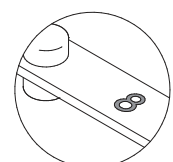


GLASS 8 MM

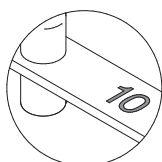


GLASS 10 MM

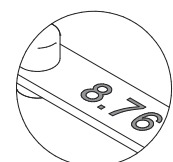


GLASS 8,76 MM

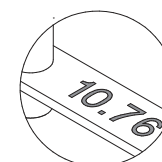


GLASS 10,76 MM

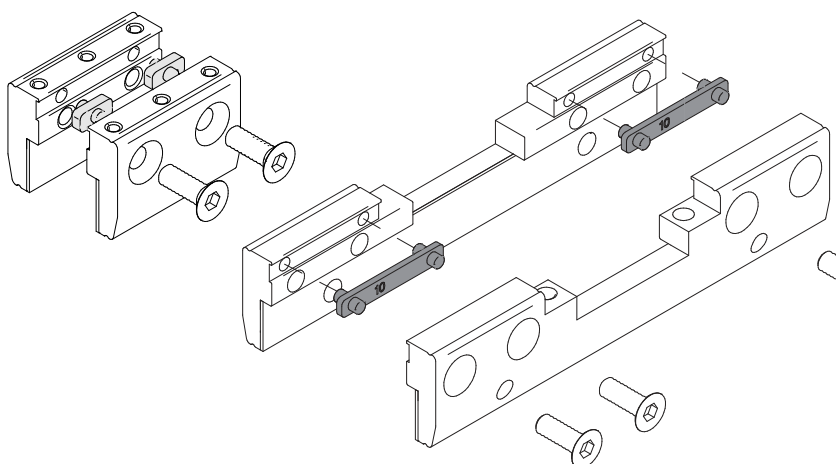


10

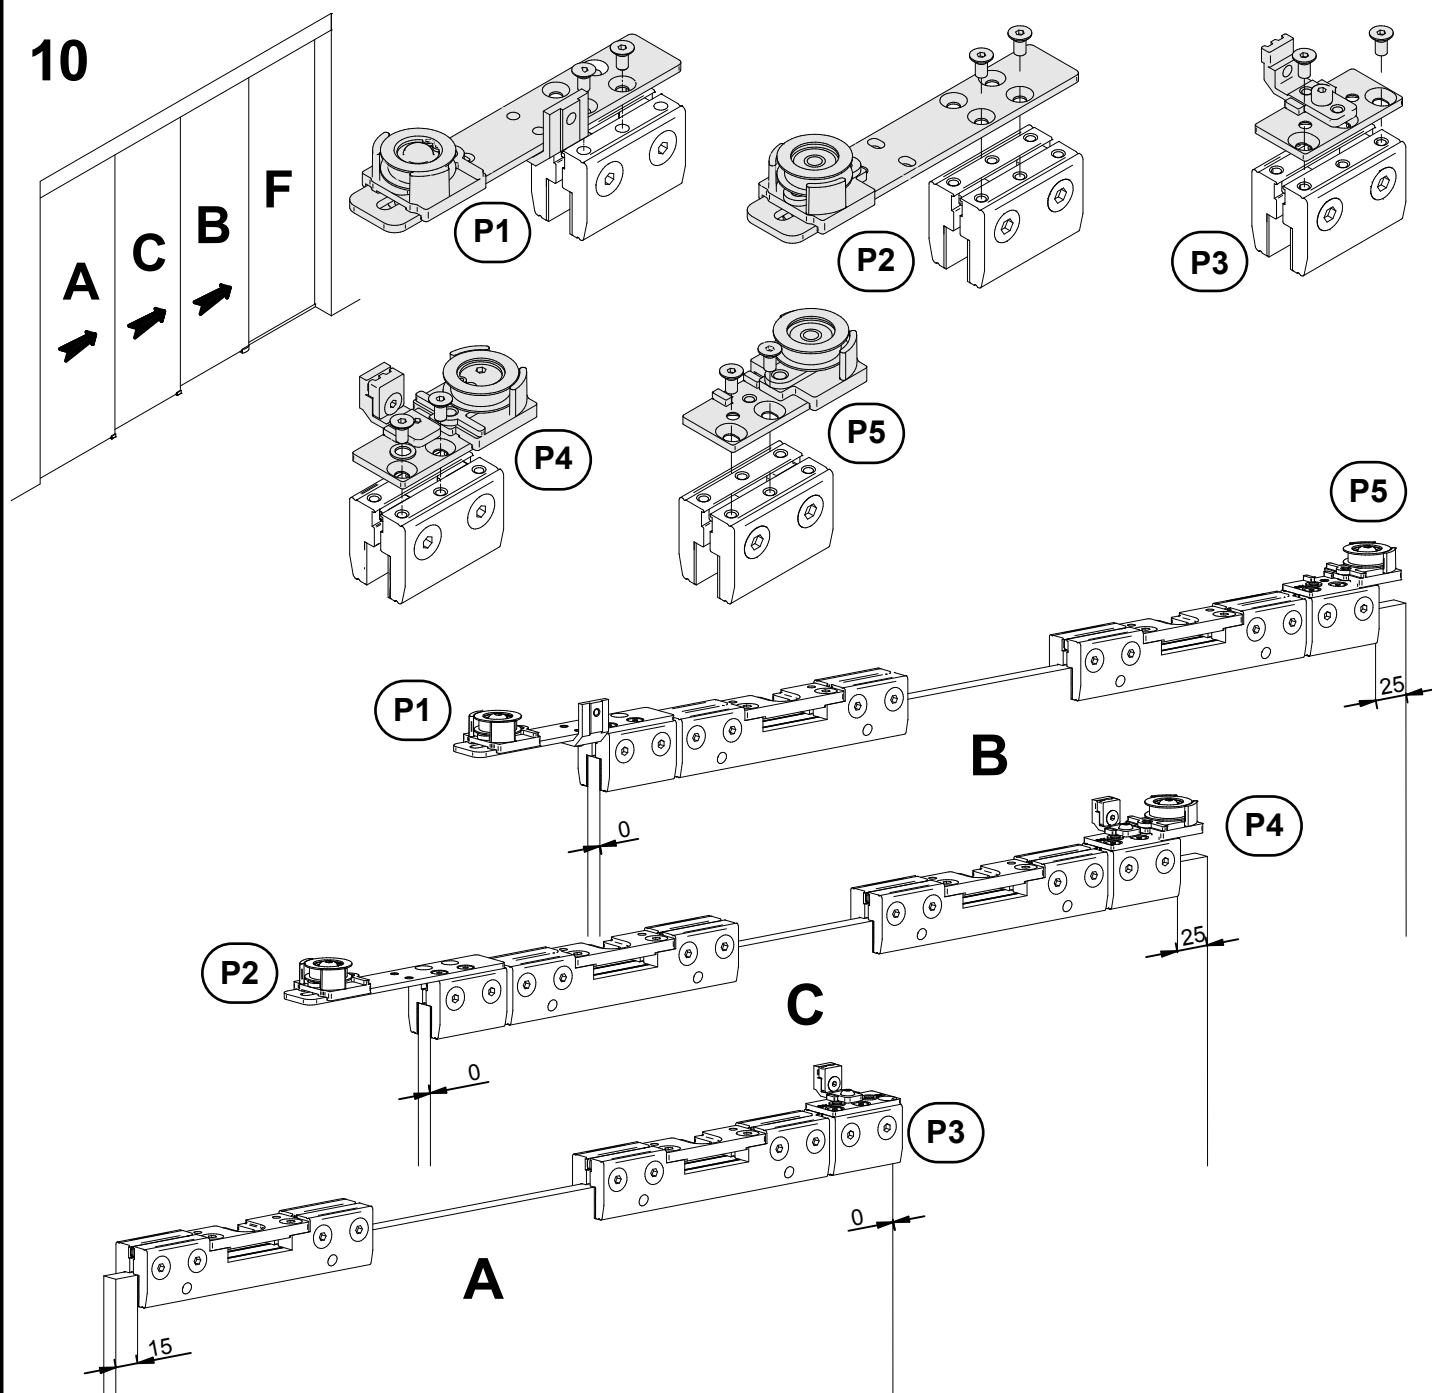

11

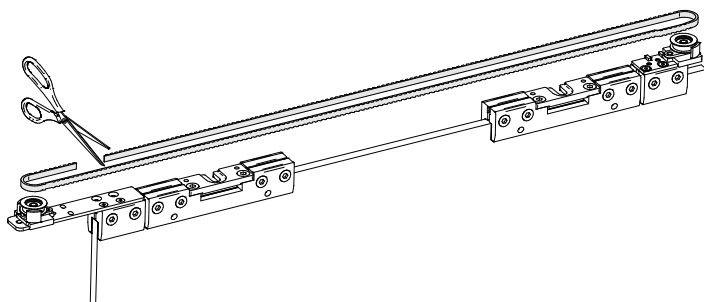


12

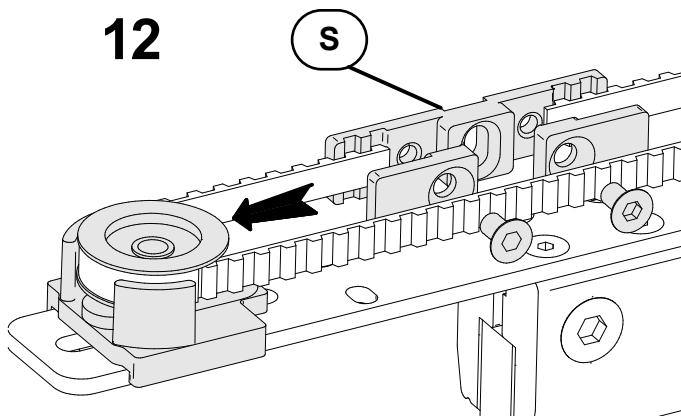

Panel B and C. Cut the toothed belt. Tighten it to S. Stretch by moving the wheel of the clamp P1 and P2


13a

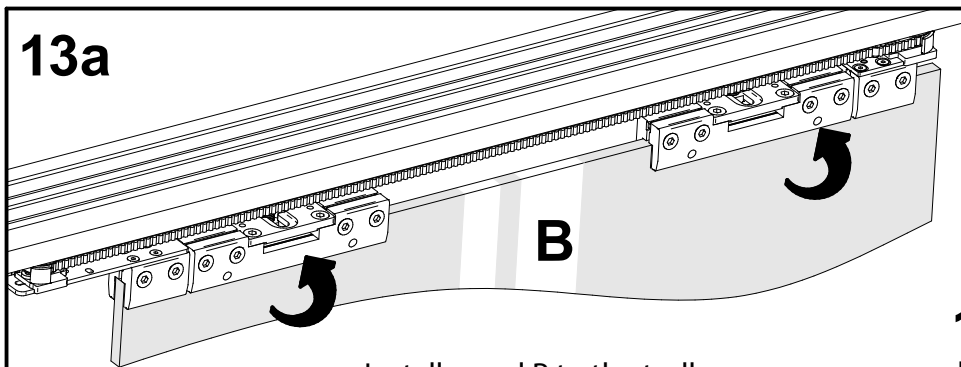


Install panel B to the trolley

13b

Join B to the clip S of panel B

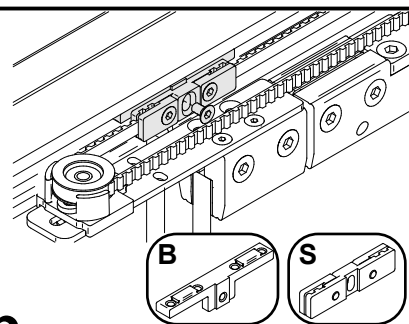


14a

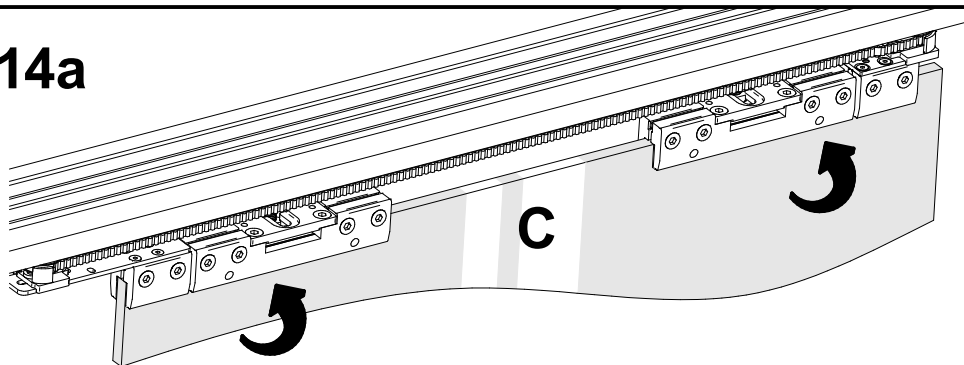


Install panel C to the trolley

14b

Join the clip S of panel C to the clamp P1

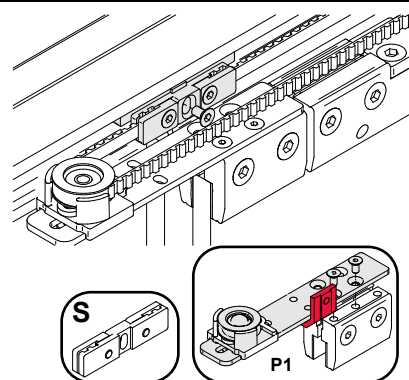



15a

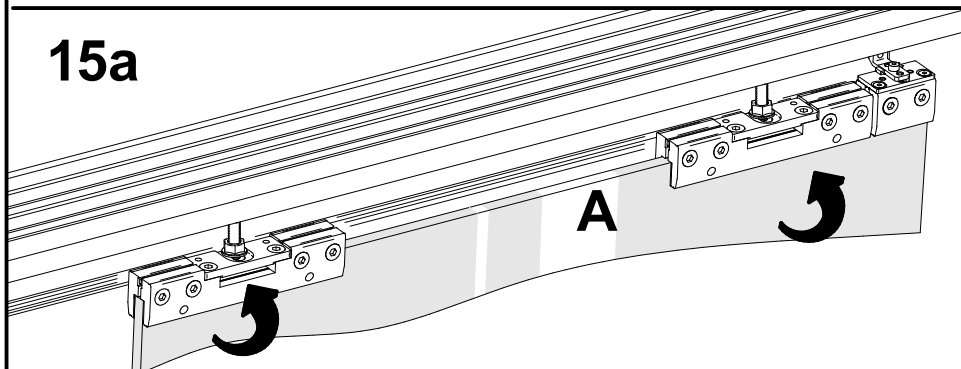


Install panel A to the trolley

15b


Open all the panels. Join P3 to the toothed belt of C panel.

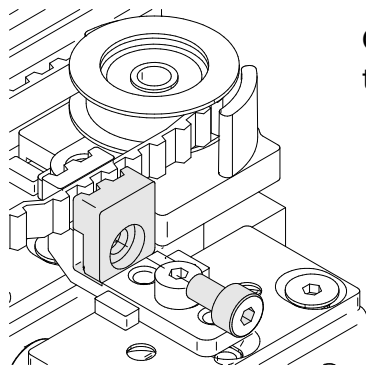


16

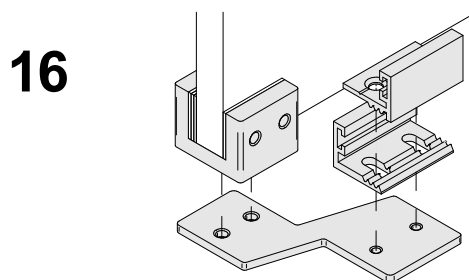


Install lower guide



17

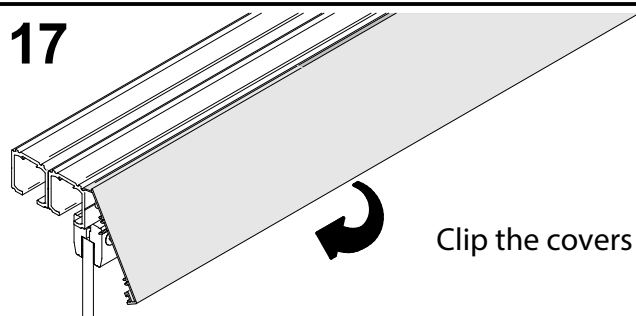


18

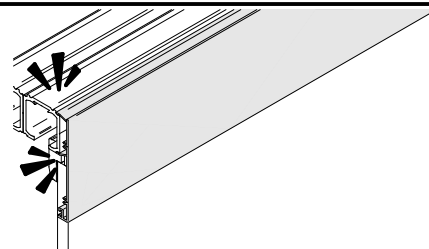


Clip the covers to the top track


## Left side opening

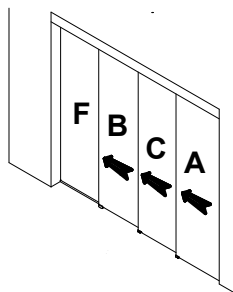


### ASSEMBLY FIXED GLASS

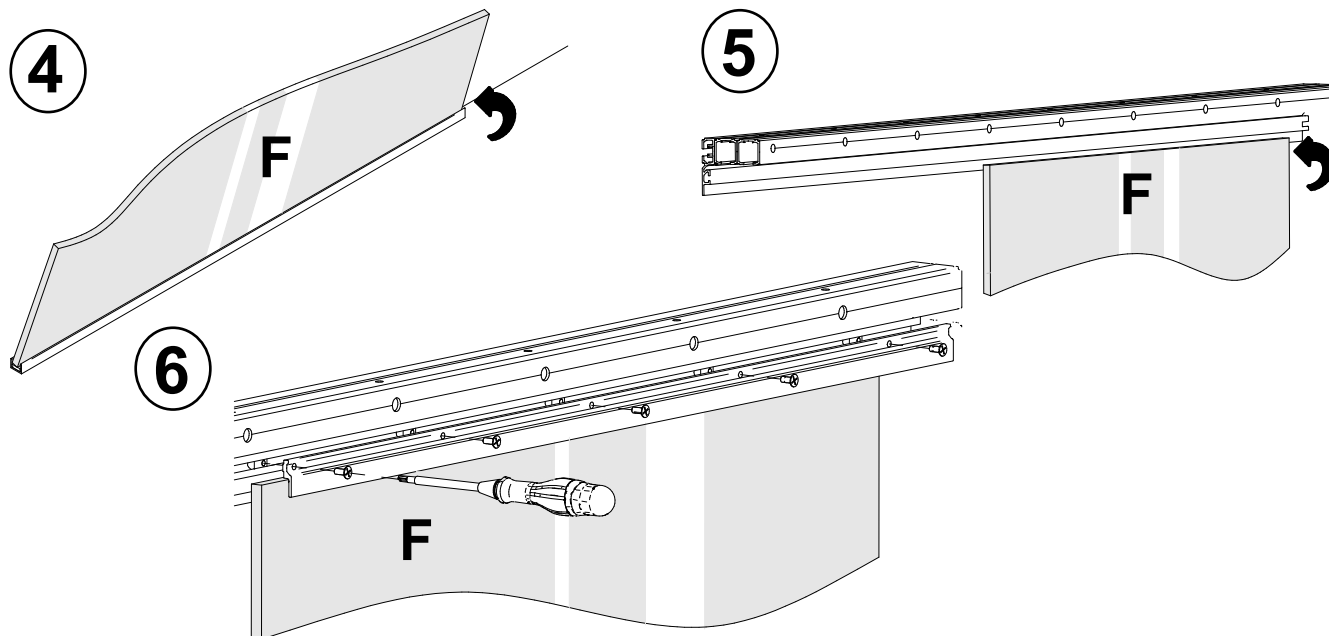

## 7 Install the lower guide 25 mm to fixed glass

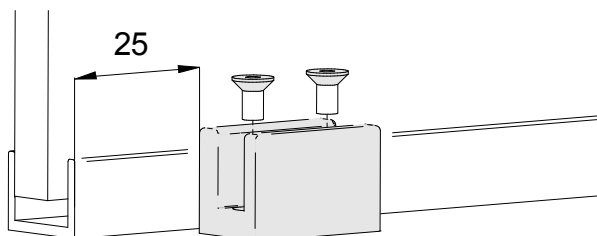

## 8

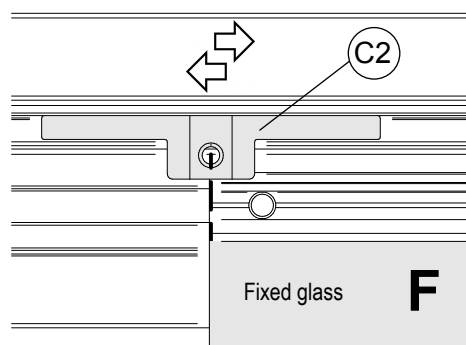


Place C2


## 9

### EASY™ Clamps assembly


Choose the spacer according to the thickness of the glass and match in the clamp

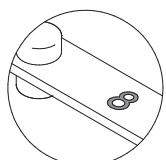


GLASS 8 MM

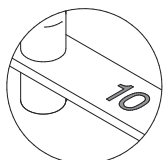


GLASS 10 MM

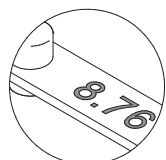



GLASS 8,76 MM

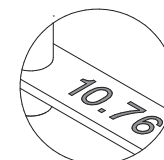


GLASS 10,76 MM

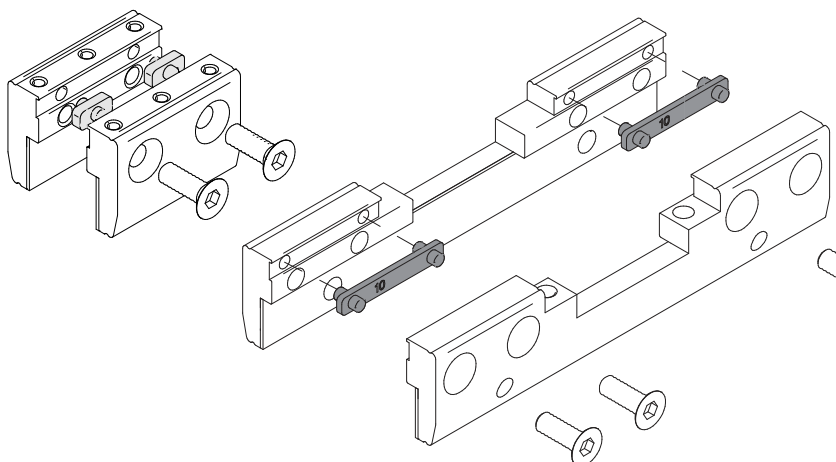




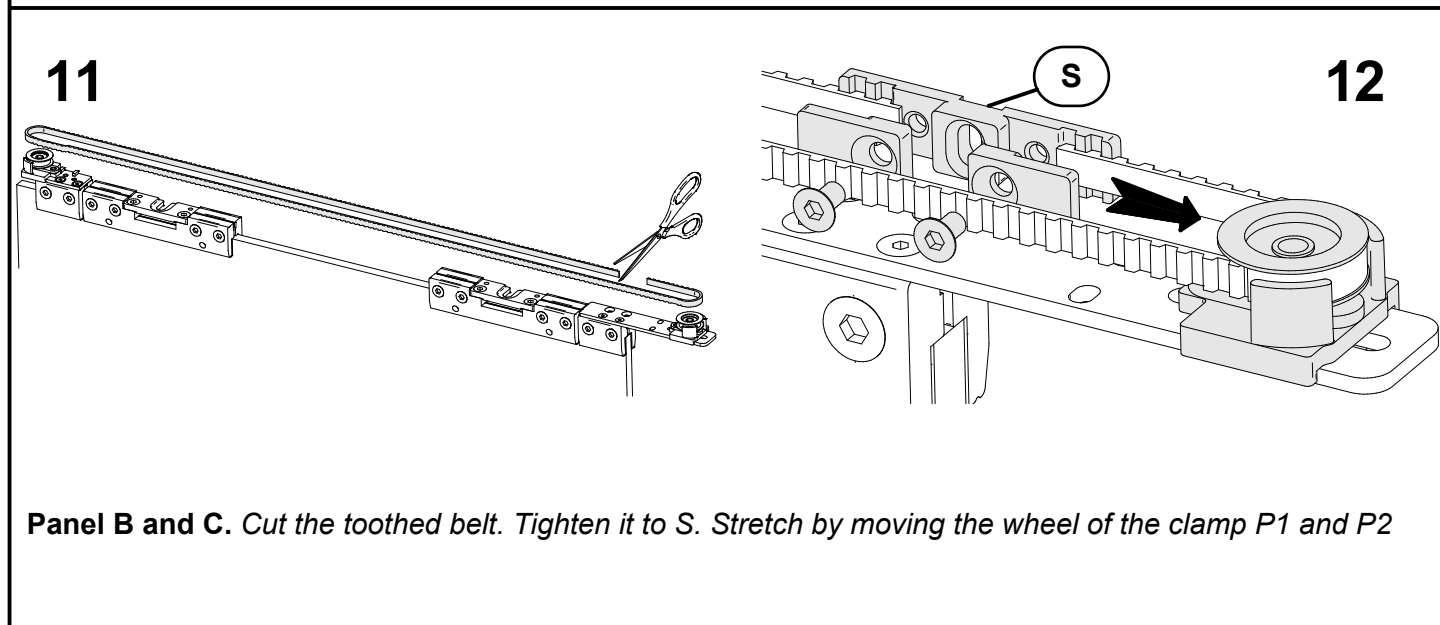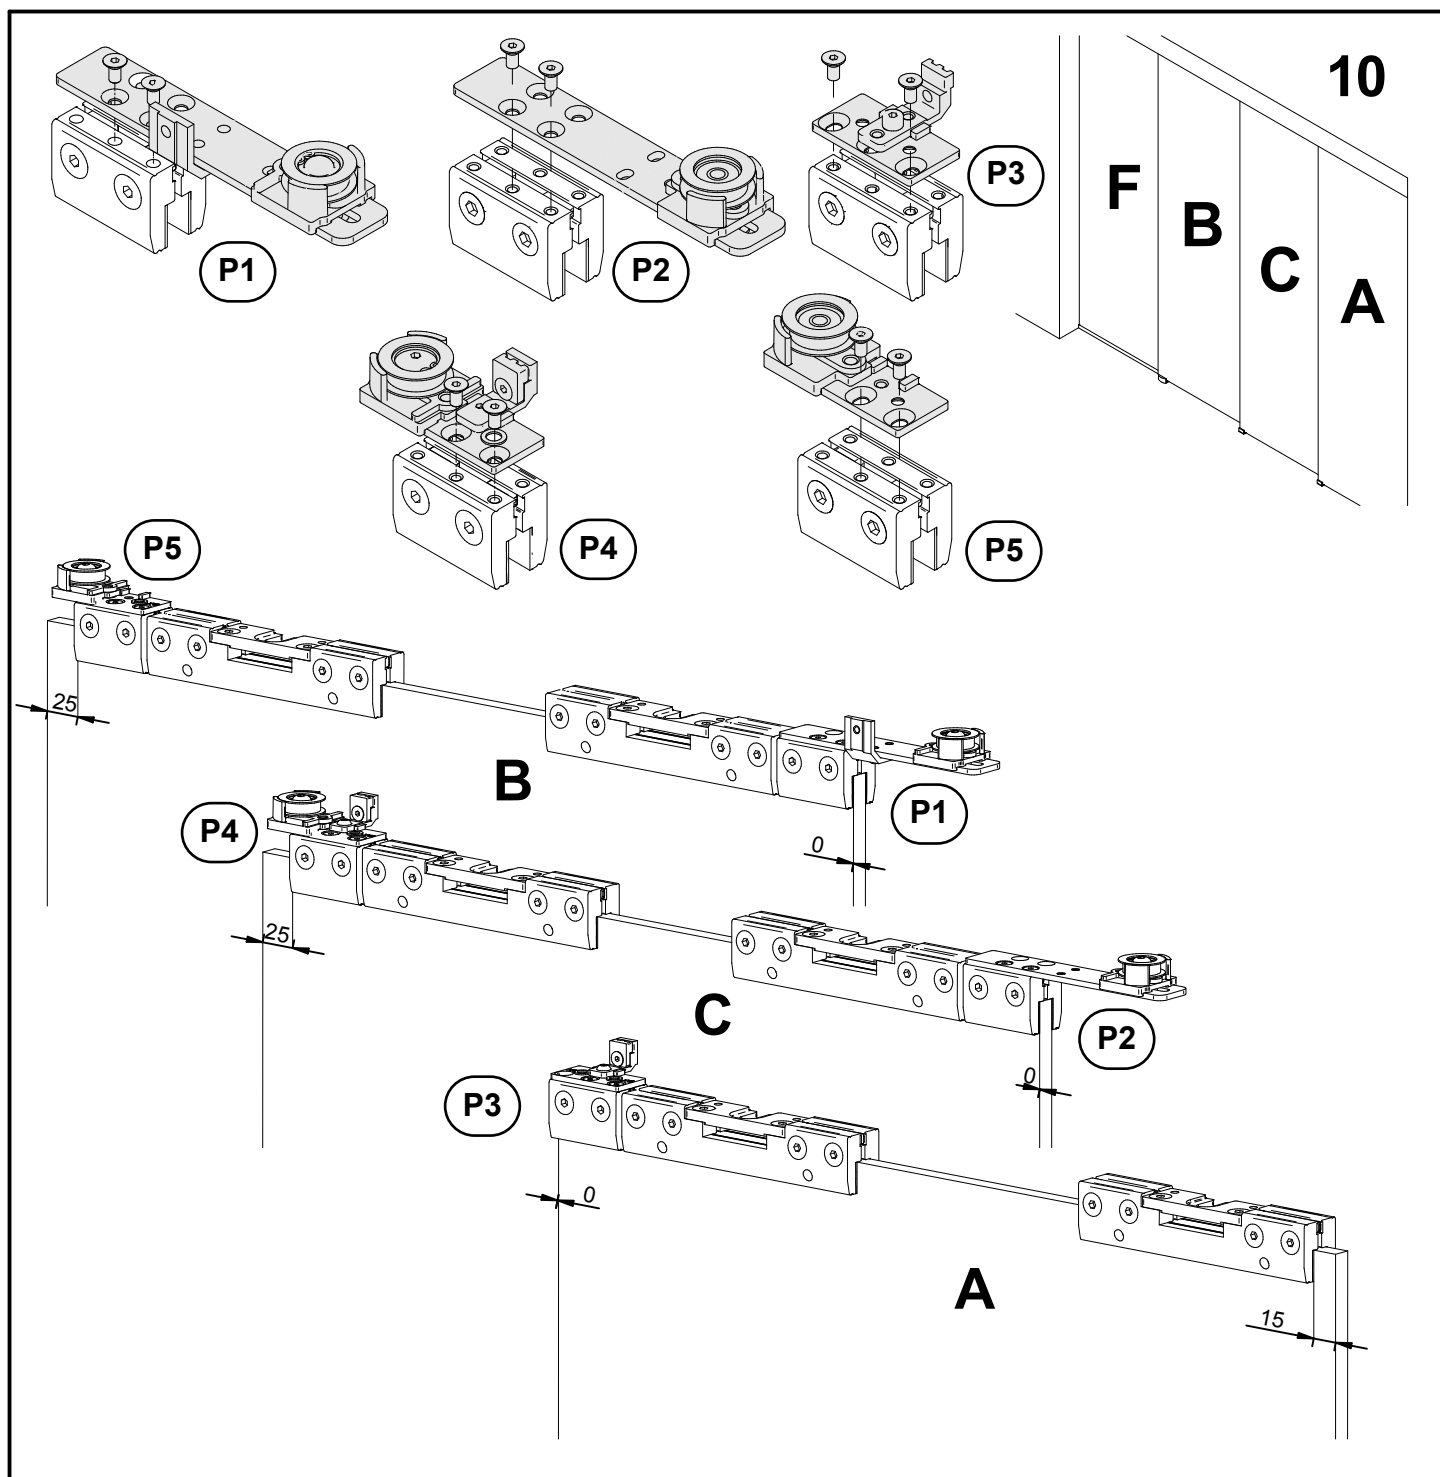

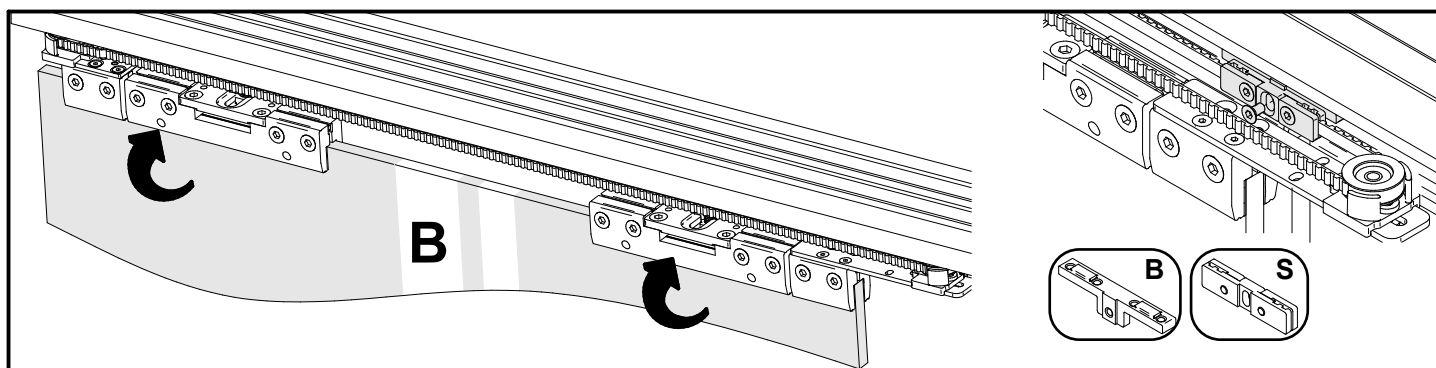


**13a** Install panel B to the trolley

**13b** Join B to the clip S of panel B

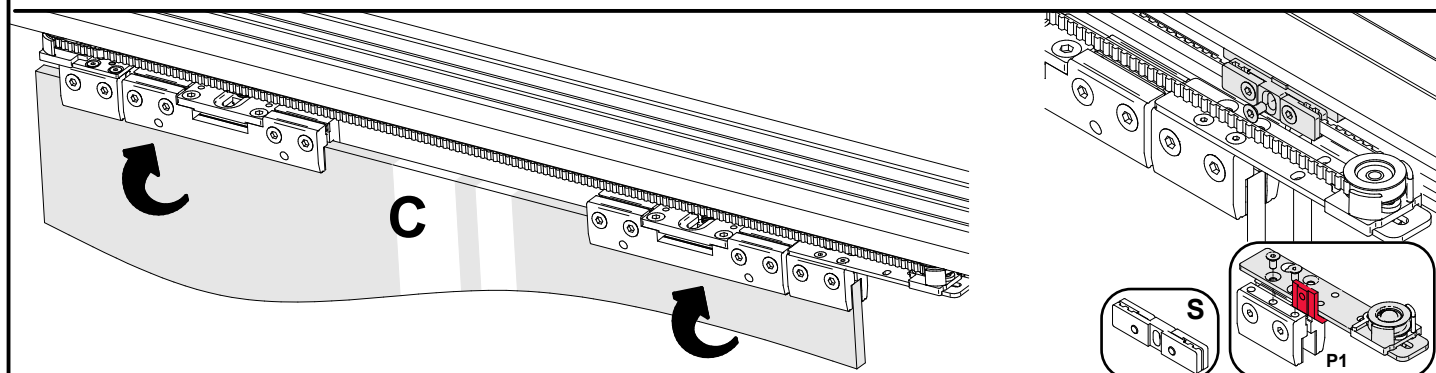

**14a** Install panel C to the trolley

**14b** Join the clip S of panel C to the clamp P1

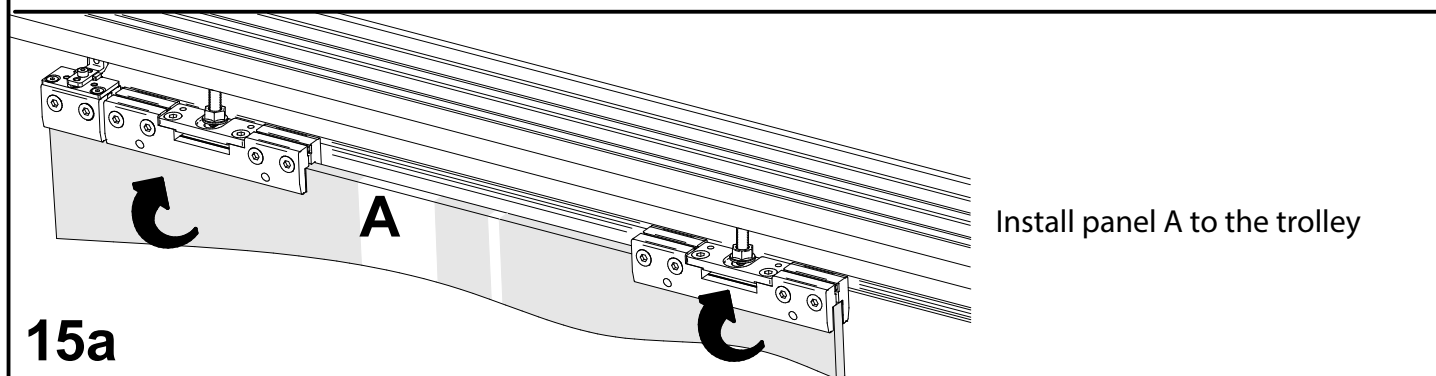


**15a**


Install panel A to the trolley

**15b** Open all the panels. Join P3 to the toothed belt of C panel.

**16**

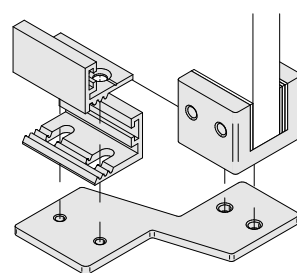

Install lower guide

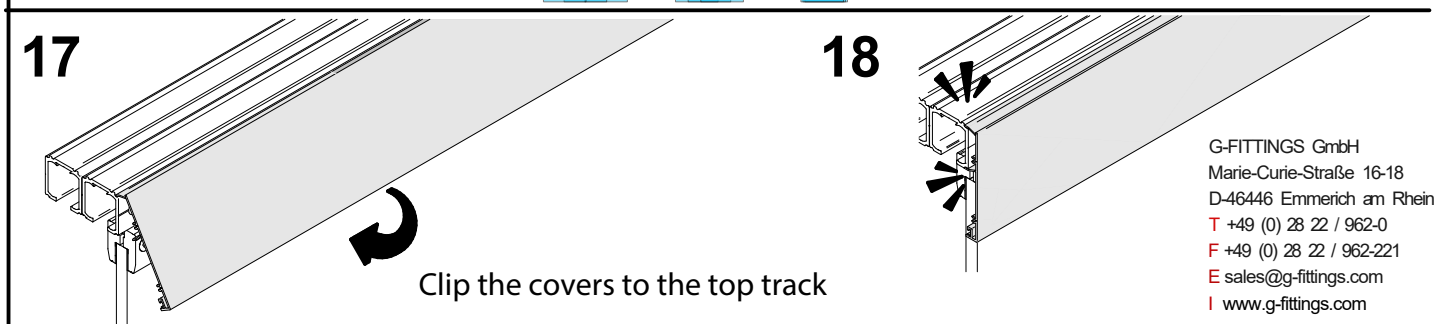

**17**

**18**

Clip the covers to the top track

G-FITTINGS GmbH  
Marie-Curie-Straße 16-18  
D-46446 Emmerich am Rhein  
T +49 (0) 28 22 / 962-0  
F +49 (0) 28 22 / 962-221  
E sales@g-fittings.com  
I www.g-fittings.com